



**PMX-057T-5A / PMX-057T-8A
PMX-057T-5A-512 / PMX-057T-8A-512**

**DM&P Vortex86MX Panel PC
with 5.7" VGA TFT LCD**

User's Manual

(Revision 1.2A)

● Copyright

The information in this manual is subject to change without notice for continuous improvement in the product. All rights are reserved. The manufacturer assumes no responsibility for any inaccuracies that may be contained in this document. And makes no commitment to update or to keep current the information contained in this manual.

No part of this manual may be reproduced, copied, translated or transmitted, in whole or in part, in any form or by any means without the prior written permission of the ICOP Technology Inc.

©Copyright 2011 ICOP Technology Inc.

Manual No. IUMPMX057-01 Ver.1.2A ● Jan, 2016

● Trademarks Acknowledgment

Vortex86MX™ is the registered trademark of ICOP Technology Inc. Other brand names or product names appearing in this document are the properties and registered trademarks of their respective owners. All names mentioned herewith are served for identification purpose only.

● Safety Information

- ◆ Read these Safety instructions carefully.
- ◆ Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- ◆ Do not expose your Panel PC to rain or moisture, in order to prevent shock and fire hazard.
- ◆ Keep PMX-057T away from humidity.
- ◆ Do not open the cabinet to avoid electrical shock. Refer to your nearest dealer for qualified personnel servicing.
- ◆ Never touch un-insulated terminals or wire unless your power adaptor is disconnected.
- ◆ Locate your Panel PC as close as possible to the socket outline for easy access and to avoid force caused by entangling of your arms with surrounding cables from the Panel PC.
- ◆ USB connectors are not supplied with Limited Power Sources.
- ◆ If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.

**DO NOT ATTEMPT TO OPEN OR TO DISASSEMBLE THE CHASSIS
(ENCASING) OF THIS PRODUCT. PLEASE CONTACT YOUR DEALER FOR
SERVICING FROM QUALIFIED TECHNICIAN.**

Table of Contents

Table of Contents.....	iii
Chapter 1 General Information.....	1
1.1 Product Description.....	1
1.2 Product Specifications.....	2
1.3 Inspection standard for TFT-LCD Panel	4
1.4 Product Dimension.....	7
1.5 Ordering Information	8
1.6 Packing List.....	8
Chapter 2 System Installation.....	9
2.1 CPU Board Outline.....	9
2.2 Connector Summary	10
2.3 Connector Pin Assignments	11
2.4 External I/O Overview	15
2.5 External I/O Pin Assignment.....	16
2.6 System Mapping.....	18
2.7 Watchdog Timver	21
Chapter 3 Driver Installation.....	22
3.1 PMX-057T Development Note.....	23
3.2 BIOS Defaul Setting	24
Warranty.....	25

This page is blank

Chapter 1

General Information

1.1 Product Description

PMX-057T is an ultra compact platform for the present demanding embedded and productive applications. It has new Vortex86MX+ SoC CPU which consumes only minimum power requirement when running at 933MHz, and DDR2 memory provides faster data transfer rate. By using 5.7" TFT LCD, PMX-057T becomes the perfect choice for a limited budget. In addition, the integrated 10/100M Ethernet port supplies the communication capability which makes PMX-057T can be more widely used when running with DOS, Linux, Windows CE, and Windows XP environment to become the perfect solution for system integration.

- 5.7" VGA TFT LCD
- 4-Wire Resistive Touch Panel
- DM&P Vortex86MX+ SoC 933MHz
- 512MB/1GB DDR2 system memory
- AMI BIOS
- 2 watchdog timer
- Compact Flash Type I/II / Micro SD
- 10/100Mbps Ethernet
- 2 USB 2.0 (host)
- 1 RS-232/485/422 ports
- Wi-Fi Optional
- Audio Out
- Single voltage +5V DC(5A Version)
- Multi voltage +8~+35V DC(8A Version)
- Fanless Design
- Operating temperature range of 0°C to +50°

1.2 Product Specification

CPU Board Specifications	
CPU	DM&P Vortex86MX+ 933MHz
Cache	L1:16KB I-Cache, 16KB D-Cache L2: 256KB Cache
BIOS	AMI BIOS
Memory	512MB/1GB DDR2 onboard
Watchdog Timer	Software programmable from 30.5u to 512 seconds x 2 sets
LAN	Integrated 10/100M Ethernet
Audio	HD Audio-Realtek ALC262 CODEC
Internal Drives	Compact Flash Type I/II slot Micro SD slot
I/O	RS-232/422/485 x 1 USB ports (Ver2.0) x 2 RJ-45 Port x 1
Mechanical & Environment	
Power Requirement	Single Voltage +5VDC (5A) Multi Voltage +8~+35VDC (8A)
Power Consumption	1.5A@5VDC
Operating Temperature	0 ~ +50 °C (32 ~ +122 °F)
Storage Temperature	-10 ~ +60 °C (14 ~ +140 °F) / -20~+60°C (-4 ~ +140°F) (Optional & CPU down to 800MHz)
Operating Humidity	0% ~ 90% relative humidity, non-condensing
Dimensions	152 x 112 x 33mm (5.98 x 4.41 x 1.3 inches)
Weight	374g

Certification	CE, FCC, VCCI, Vibration
LCD Specifications	
Display Type	5.7" TFT LCD
Backlight Unit	LED
Display Resolution	640(W) x 480(H)
Brightness (cd/m ²)	500 nits
Contrast Ratio	300:1
Display Color	262,144
Dot Pitch (mm)	0.06 x 0.18
Viewing Angle	Vertical 100°, Horizontal 140°
Backlight Lifetime	50,000 hrs
Touchscreen	
Type	Analog Resistive
Resolution	Continuous
Transmittance	80%
Controller	PS/2 interface
Software Driver	Linux/WinCE/WinXP
Durability	1 million

1.3 Inspection standard for TFT-LCD Panel


DEFECT TYPE			LIMIT			Note			
VISUAL DEFECT	INTERNAL	SPOT	$\phi < 0.15\text{mm}$		Ignore	Note1			
			$0.15\text{mm} \leq \phi \leq 0.5\text{mm}$		$N \leq 4$				
			$0.5\text{mm} < \phi$		$N=0$				
		FIBER	$0.03\text{mm} < W \leq 0.1\text{mm}, L \leq 5\text{mm}$		$N \leq 3$	Note1			
			$1.0\text{mm} < W, 1.5\text{mm} < L$		$N=0$				
		POLARIZER BUBBLE	$\phi < 0.15\text{mm}$		Ignore	Note1			
			$0.15\text{mm} \leq \phi \leq 0.5\text{mm}$		$N \leq 2$				
			$0.5\text{mm} < \phi$		$N=0$				
		Mura	It' OK if mura is slight visible through 6%ND filter						
ELECTRICAL DEFECT	BRIGHT DOT		A Grade			B Grade			
			C Area	O Area	Total	C Area	O Area	Total	Note3
			$N \leq 0$	$N \leq 2$	$N \leq 2$	$N \leq 2$	$N \leq 3$	$N \leq 5$	Note2
	DARK DOT		$N \leq 2$	$N \leq 3$	$N \leq 3$	$N \leq 3$	$N \leq 5$	$N \leq 8$	
	TOTAL DOT		$N \leq 4$			$N \leq 5$	$N \leq 6$	$N \leq 8$	Note2
	TWO ADJACENT DOT		$N \leq 0$	$N \leq 1$ pair	$N \leq 1$ pair	$N \leq 1$ pair	$N \leq 1$ pair	$N \leq 1$ pair	Note4
	THREE OR MORE ADJACENT DOT		NOT ALLOWED						
	LINE DEFECT		NOT ALLOWED						

(1) One pixel consists of 3 sub-pixels, including R,G, and B dot.(Sub-pixel = Dot)

(2) LITTLE BRIGHT DOT ACCEPTITABLE UNDER 6 % ND-Filter


(3) If require G0 grand (Total dot $N \leq 0$), please contact region sales.

[Note1] W : Width[mm], L : Length[mm], N : Number, ϕ : Average Diameter

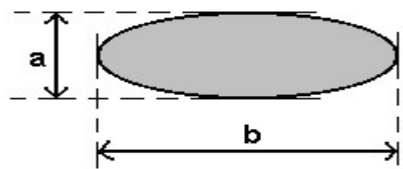



$$\phi = (a + b) / 2$$

- 1. (White, black) Spot
- 2. Polarizer Bubble

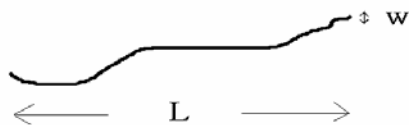


1. fiber

[Note2] Bright dot is defined through 6% transmission ND Filter as following.

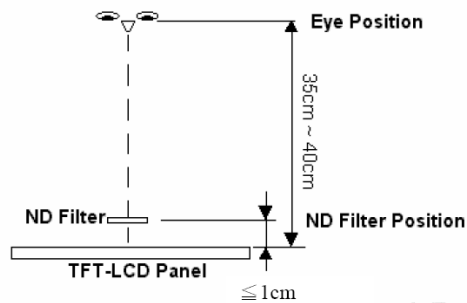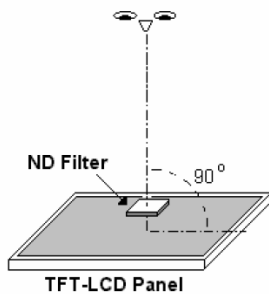

[Note3]

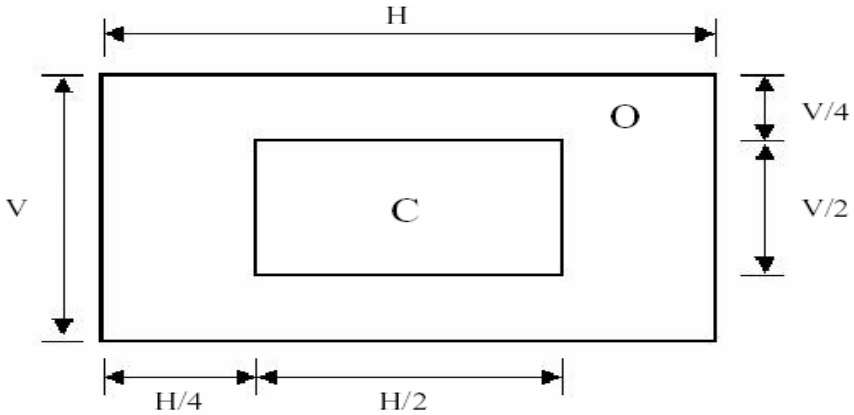


C Area: Center of display area

C Area: Outer of display area

[Note4]


Judge defect dot and adjacent dot as following. Allow below (as A, B, C and D status) adjacent defect dots, including bright and dart adjacent dot. And they will be counted 2 defect dots in total quantity.

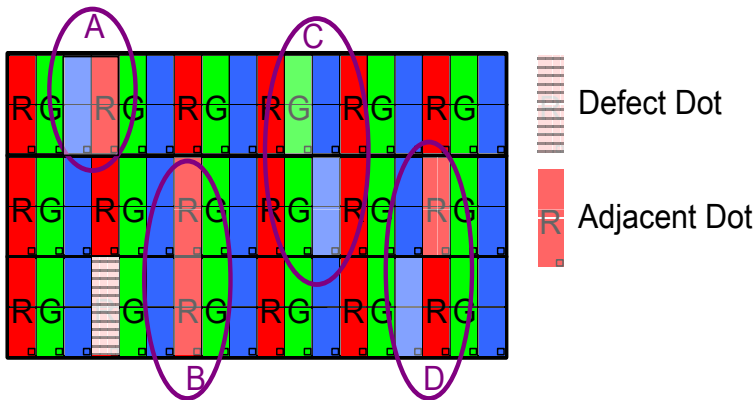

(1) The defects that are not defined above and considered to be problem shall be reviewed and discussed by both parties.

(2) Defects on the Black Matrix, out of Display area, are not considered as a defect or counted.

1.4 Product Dimension

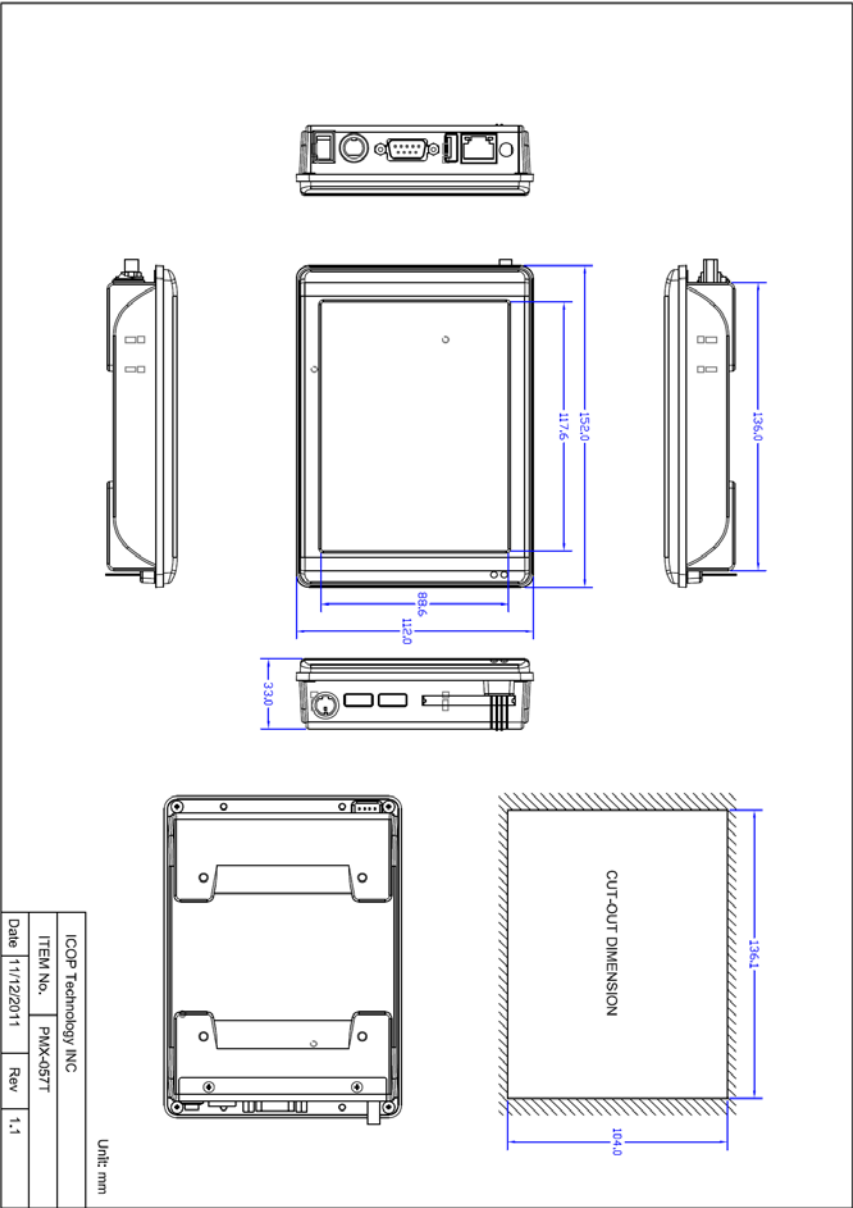

1.5 Ordering Information

Part Number	Description
PMX-057T-5A	5.7" Panel PC w/1GB DDR2/2USB/Line-Out/LAN/COM/CF/MicroSD/Power Adapter
PMX-057T-8A	5.7" Panel PC w/1GB DDR2/2USB/Line-Out/LAN/COM/CF/MicroSD/8-35 DC support


1.6 Packing List

Part Number	Package
PMX-057T-5A	<ul style="list-style-type: none">◆ PMX-057T-5A◆ Power-20W-3PIN
PMX-057T-8A	<ul style="list-style-type: none">◆ PMX-057T-8A
PMX-057T-5A-512	<ul style="list-style-type: none">◆ PMX-057T-5A-512◆ Power-20W-3PIN
PMX-057T-8A-512	<ul style="list-style-type: none">◆ PMX-057T-8A-512
WLAN KIT (Optional)	<ul style="list-style-type: none">◆ USB-WLAN-IPEX-KIT◆ WIRELESS-ANTENNA-157◆ WIRELESS-CABLE-150MM

Chapter 2

System Installation

2.1 CPU Board Outline

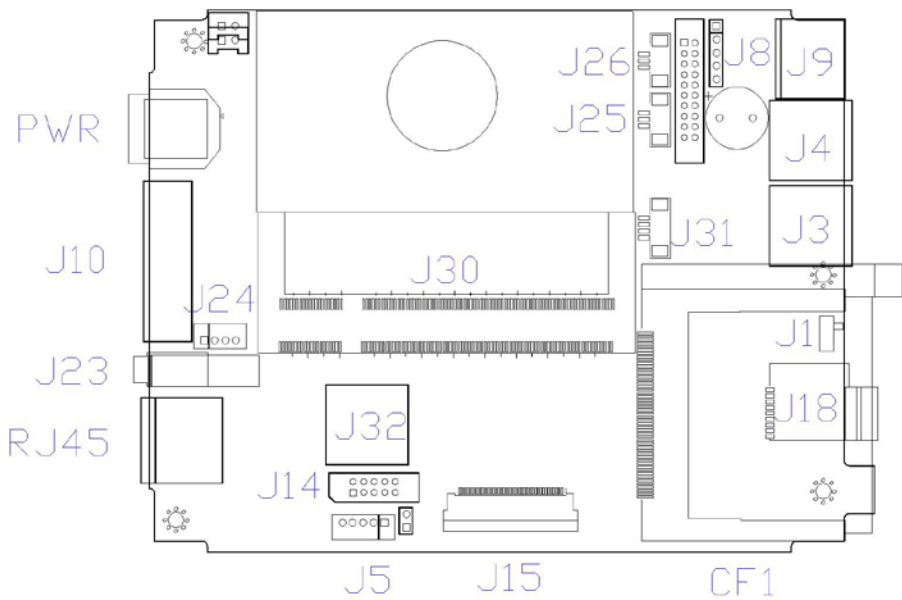

2.2 Connector Summary

Summary Table			
Nbr	Description	Type of Connections	Pin nbrs.
J1	CF Master/Slave Switch	Slide Switch	On/OFF
J3	USB	External USB Connector	6-pin
J4	USB	External USB Connector	6-pin
J5	USB (Touchscreen)	2.0mm 5-pin wafer	5-pin
J8	PS/2 Keyboard	2.54mm 5-pin box header	5-pin
J9	PS/2Keyboard/Mouse	External Mini DIN Socket	6-pin
J10	COM2(RS232/422/485)	External D-Sub Male Connector	9-pin
J14	VGA	2.0mm 10-pin box header	10-pin
J15	LCD	0.5mm FPC/FFC Connector	40-pin
J18	Micro SD Card Socket	Micro SD socket	
J23	Audio Line-Out	1.25mm Phone Jack	
J24	Audio Mic-In	2.0mm 4-pin wafer	4-pin
J25	COM3 (TX, RX)	1.25mm 3-pin wafer	3-pin
J26	COM4 (TX, RX)	1.25mm 3-pin wafer	3-pin
J30	SOM CPU Board Socket	SOM CPU Board Socket	200-pin
J31	4-Wires Touch connector	1.25mm 4-pin wafer	4-pin
J32	USB (Wi-Fi Optional)	Internal USB Connector	6-pin
RJ45	Ethernet	External RJ45 Connector	8-pin
PWR	Power Connector (5A)	External Mini DIN Socket	3-pin
PWR	Power Connector (8A)	External Power Plug	2-pin
CF1	CF Card Socket	CF Type I/II Socket	

2.3 Connector Pin Assignments

J1: CF Master/Slave Switch

Pin #	Signal Name
On	Master
OFF	Slave

J3: USB

Pin #	Signal Name	Pin #	Signal Name
1	VCC	2	USBD2-
3	USBD2+	4	GND
5	GND	6	GND

J4: USB

Pin #	Signal Name	Pin #	Signal Name
1	VCC	2	USBD3-
3	USBD3+	4	GND
5	GND	6	GND

J5: USB (Optional)

Pin #	Signal Name
1	VCC
2	USBD1-
3	USBD1+
4	GND
5	GND

J8: PS/2 Keyboard

Pin #	Signal Name	Pin #	Signal Name
1	KBCLK	2	KBDAT
3	NC	4	GND
5	VCC		

J9: PS/2 Keyboard/Mouse

Pin #	Signal Name	Pin #	Signal Name
1	KBCLK	2	MSCLK

3	GND	4	KBDATA
5	MSDATA	6	VCC
7	GND	8	GND
9	GND		

J10: COM1 RS232/422/485 (Change setting by BIOS)

Pin #	Signal Name	Pin #	Signal Name
1	DCD1 / 422TX- / RS485-	2	RXD1 / 422TX+ / RS485+
3	TXD1 / 422RX+	4	DTR1 / 422RX-
5	GND	6	DSR1
7	RTS1	8	CTS1
9	RI1		

J14: VGA

Pin #	Signal Name	Pin #	Signal Name
1	R OUT	2	GND
3	G OUT	4	GND
5	B OUT	6	GND
7	HSYNC	8	GND
9	VSYNCD	10	GND

J15: LCD

Pin #	Signal Name
1	3.3V
2	3.3V
3	HSYNC
4	5V
5	5V
6	5V
7	3.3V
8	VSYNC
9	DE
10	GND
11	GND
12	GPIOB

13	B5
14	B4
15	B3
16	GND
17	B2
18	B1
19	B0
20	GND
21	G5
22	G4
23	G3
24	GND
25	G2
26	G1
27	G0
28	GND
29	R5
30	R4
31	R3
32	GND
33	R2
34	R1
35	R0
36	GND
37	GND
38	CLK
39	GND
40	L/R

J24: MIC-IN

Pin #	Signal Name
1	MICVREF
2	GND
3	GND
4	MIC-IN

J25: COM3 (TX, RX)

Pin #	Signal Name
-------	-------------

1	GND
2	TXD3
3	RXD3

J26: COM4 (TX, RX)

Pin #	Signal Name
1	GND
2	TXD4
3	RXD4

J31: 4-Wires Touch connector

Pin #	Signal Name
1	Y-
2	X-
3	Y+
4	X+

J32: USB (WiFi Optional)

Pin #	Signal Name	Pin #	Signal Name
1	VCC	2	USBD2-
3	USBD2+	4	GND
5	GND	6	GND

PWR: Power Connector (5A)


Pin #	Signal Name
1	+5V
2	GND
3	NC
4	GND

PWR: Power Connector (8A)


Pin #	Signal Name
1	+ 8 ~ 35V
2	GND

2.4 External I/O Overview

PMX-057T-8A/ PMX-057T-8A-512

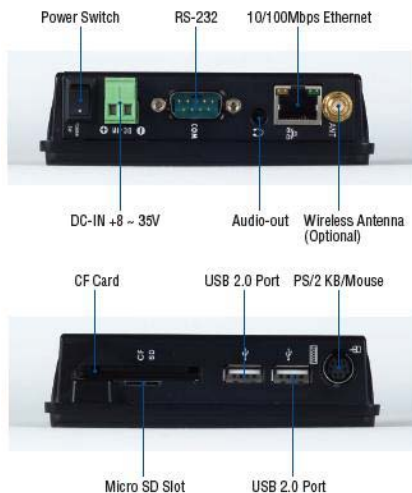

PMX-057T-5A/ PMX-057T-5A-512

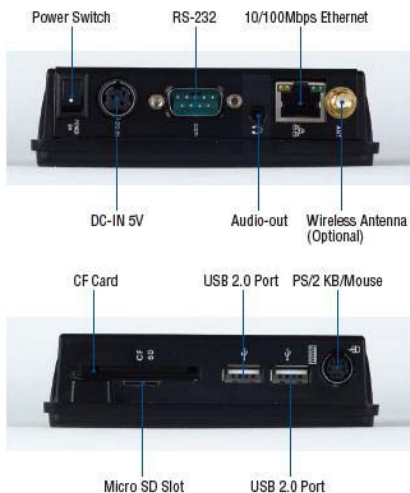


(Note1: Wireless is optional)


(Note2: COM1 RS232/422/485 is selected by BIOS setting)

2.5 External I/O Pin Assignment


Power Switch

	Pin #	Status
		ON
	O	OFF

 
Power Connector (5A)

	Pin #	Signal Name
	1	+5V
	2	GND
	3	NC

 
Power Connector (8A)

	Pin #	Signal Name
	1	+8 ~ 35V
	2	GND


J10: COM1 RS232/422/485 (Change setting by BIOS)

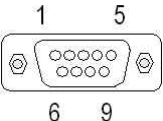	Pin #	Signal Name	Pin #	Signal Name
	1	DCD1/422TX-/RS485-	2	RXD1/422TX+/RS485+
	3	TXD1 / 422RX+	4	DTR1 / 422RX-
	5	GND	6	DSR1
	7	RTS1	8	CTS1
	9	RI1		


Audio Line-Out

 Line-out	Pin #	Signal Name
	1	GND
	2	LOUTL
	3	Open Touch
	4	Open Touch
	5	VREFOUT

 
USB

 4 1	Pin #	Signal Name
	1	VCC
	2	USB0-
	3	USB0+
	4	GND
	5	GGND
	6	GGND

 RJ45

 8 2, 1	Pin #	Signal Name	Pin #	Signal Name
	1	FTXD+	2	FTXD-
	3	FRXIN+	4	NC
	5	NC	6	FRXIN-
	7	NC	8	NC

PS/2 Keyboard/Mouse

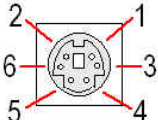 2 1 6 3 5 4	Pin #	Signal Name
	1	KBCLK
	2	PMCLK
	3	GND
	4	KBDAT
	5	PMDAT
	6	SB5V

2.6 System Mapping

Memory Mapping		
Address	Description	Usage
00000000-0009FFFF	System RAM	*
000A0000-000AFFFF	EGA/VGA Video Memory	*
000B0000-000B7FFF	MDA RAM, Hercules graphics display RAM	*
000B8000-000BFFFF	CGA display RAM	*
000C0000-000C7FFF	EGA/VGA BIOS ROM	*
000C8000-000CFFFF	Boot ROM enable	
000CC000-000CFFFF	Console Redirection enable	
000D0000-000D7FFF	Expansion ROM space	
000D8000-000DBFFF	SPI FLASH Emulation Floppy A Enable	
000DC000-000DFFFF	Expansion ROM space	
000E0000-000EFFFF	USB Legacy SCSI ROM space	
000F0000-000FFFFF	Motherboard BIOS	*
FEBD9000-FEBD90FF	Standard OpenHCD USB Host Controller	*
FEBD A000-FEBD A0FF	Standard OpenHCD USB Host Controller	*
FEBD B400-FEBD B4FF	On board Ethernet Adapter	*
FEBD B800-FEBD B8FF	Standard Enhanced PCI to USB Host Controller	*
FEBD BC00-FEBD BCFF	Standard Enhanced PCI to USB Host Controller	*

I/O Mapping		
I/O Address	Owner	Usage
0000h - 000Fh	DMA 8237-1	*
0010h - 0017h	COM 9	
0020h - 0021h	PIC 8259-1	*
0022h - 0023h	Indirect Access Registers (6117D configuration port)	*
002Eh - 002Fh	Forward to LPC BUS	
0040h - 0043h	Timer counter 8254	*

0048h - 004Bh	PWM counter 8254	*
004Eh - 004Fh	Forward to LPC BUS	
0060h	Keyboard / Mouse data port	*
0061h	Port B + NMI control port	*
0062h - 0063h	8051 download 4K address counter	*
0064h	Keyboard / Mouse status / command port	*
0065h	WatchDog0 reload counter	*
0066h	8051 download 8bit data port	*
0067h	WatchDog1 reload counter	*
0068h - 006Dh	WatchDog1 control register	*
0070h - 0071h	CMOS RAM port	*
0072h - 0075h	MTBF control register	*
0078h - 007Ch	GPIO port 0,1,2,3,4 default setup	*
0080h - 008Fh	DMA page register	*
0092h	System control register	*
0098h - 009Ch	GPIO direction control	*
00A0h - 00A1h	PIC 8259-2	*
00C0h - 00DFh	DMA 8237-2	*
00E0h - 00EFh	DOS 4G Page access	*
0170h - 0177h	IDE1 (IRQ 15)	*
01F0h - 01F7h	IDE0 (IRQ 14)	*
0220h - 0227h	COM8 Forward to LPC BUS	
0228h - 022Fh	COM7 Forward to LPC BUS	
0238h - 023Fh	COM6 Forward to LPC BUS	
0278h - 027Fh	Printer port (IRQ 7, DMA 0)	
02E8h - 02EFh	COM4 (IRQ 11)	
02F8h - 02FFh	COM2 (IRQ 3)	
0338h - 033Fh	COM5 Forward to LPC BUS	
0376h	IDE1 ATAPI device control write only register	*
03E8h - 03EFh	COM3 (IRQ 10)	
03F0h - 03F7h	Floppy Disk (IRQ 6, DMA 2)	
03F6h	IDE0 ATAPI device control write only register	*
03F8h - 03FFh	COM1 (IRQ 4)	*
0480h - 048Fh	DMA High page register	*
0490h - 0499h	Instruction counter register	*
04D0h - 04D1h	8259 Edge,/ level control register	*

0CF8h - 0CFFh	PCI configuration port	*
D400h - D4FFh	on board LAN	*
FC00h - FC05h	SPI Flash BIOS control register	*
FC08h - FC0Dh	External SPI BUS control register (output pin configurable GPIO3[0-3])	*

IRQ Mapping

IRQ#	Description	Usage
IRQ0	System Timer	*
IRQ1	Keyboard Controller	*
IRQ2	Cascade for IRQ8 - 15	
IRQ3	Serial Port 2	*
IRQ4	Serial Port 1	*
IRQ5	USB	*
IRQ6	USB	*
IRQ7	USB	*
IRQ8	Real Time Clock	*
IRQ9	USB / Ethernet 10/100M LAN	*
IRQ10	Serial Port 3	*
IRQ11	Serial Port 4	*
IRQ12	Mouse	*
IRQ13	Math Coprocessor	*
IRQ14	Hard Disk Controller#1	*
IRQ15	Hard Disk Controller#2	*

DMA Mapping

DMA#	Description	Usage
DMA0		
DMA1		
DMA2	Floppy Disk Controller	
DMA3		
DMA5		
DMA6		
DMA7		

2.7 Watchdog Timer

There are two watchdog timers in PMX-057T, we also provide DOS, Linux and WinCE example for your reference. For more technical support, please visit: <http://tech.icop.com.tw> or download the PDF file: <http://www.dmp.com.tw/tech>

Chapter 3

Driver Installation

VGA

The Vortex86MX processor is integrated RDC Display chip which is an ultra low powered graphics chipset with total power consumption at around 1-1.5 W.

LAN

The Vortex86MX processor is integrated 10/100Mbps Ethernet controller that supports both 10/100BASE-T and allows direct connection to your 10/100Mbps Ethernet based Local Area Network for full interaction with local servers, wide area networks such as the Internet.

I/O and IRQ settings can be done by software with the supplied utility software, or it can be set for Plug and Play compatibility. The controller supports: Half / Full-Duplex Ethernet function to double channel bandwidth, auto media detection.

AUDIO

The ALC262 series are 4-Channel High Definition Audio Codecs with UAA (Universal Audio Architecture) featuring two 24-bit stereo DACs and three 20-bit stereo ADCs, they are designed for high performance multimedia desktop and laptop systems. The ALC262 series incorporates proprietary converter technology to achieve over 100dB Signal-to-Noise ratio playback quality; easily meeting PC2001 requirements and also bringing PC sound quality closer to consumer electronic devices.

Operating system support

The PMX-057T provides the VGA and LAN drivers for Linux, Windows CE, Windows XP Professional, and Windows Embedded standard (XPE / WES2009).

Please get the drivers from ICOP official website: <http://tech.icop.com.tw/>.

PMX-057T also supports most of the popular Linux distributions, for more detail information, please visit DMP official website: <http://www.dmp.com.tw/tech/vortex86mx/>.

3.1. PMX-057T Development Note

<Primary /Secondary IDE: Master or Slave>

Micro SD: Primary Master

CF Slot: Secondary IDE: Master or Slave (User can use slide switch (in side of CF slot) to adjust Master or Slave

<Window CE6.0 development guide>

Windows Embedded CE 6.0 BSP, trial CE image and development notes, please visit technical website to get more information: <http://tech.icop.com.tw/>

<Linux installation note>

Please forced the IDE setting in BIOS to PIO mode before install Linux on PMX-057T as follows:

1-Go to the advanced BIOS setting and make the "Onboard IDE Operate Mode" is "Legacy Mode"

2-Go to the PCI/PnP and make the "PCI IDE BusMaster" is "Disable"

< XP professional /Home /Embedded and Windows 2000 installation note >

1-Please visit technical website to get more information: <http://tech.icop.com.tw/>

<Enhance CF to run the UDMA2/4>

1-Please select ICOP "ICF Card" to supporting UDMA 2/4 Mode.

<How to boot up from the Micro SD card>

1-Get into the BIOS setup Utility

2-Go to the Advanced

3-Choose Primary IDE Pin Select: SD card

4-Press "F10" to save configuration changes and exit setup

3.2. BIOS Default setting

If the system cannot be booted after BIOS changes are made, Please follow below procedures in order to restore the CMOS as default setting.

- Press “End” Key, when the power on



- Press to enter the AMI BIOS setup
- Press “F9” to Load Optimized Defaults
- Press “F10” to Save configuration changes and exit setup

Warranty

This product is warranted to be in good working order for a period of one year from the date of purchase. Should this product fail to be in good working order at any time during this period, we will, at our option, replace or repair it at no additional charge except as set forth in the following terms. This warranty does not apply to products damaged by misuse, modifications, accident or disaster. Vendor assumes no liability for any damages, lost profits, lost savings or any other incidental or consequential damage resulting from the use, misuse of, originality to use this product. Vendor will not be liable for any claim made by any other related party. Return authorization must be obtained from the vendor before returned merchandise will be accepted. Authorization can be obtained by calling or faxing the vendor and requesting a Return Merchandise Authorization (RMA) number. Returned goods should always be accompanied by a clear problem description.