


JetWave Antenna Arrestor

JWA-Arrestor-5803




- ▶ Wide-band Lightning Protector
- ▶ Frequency : 0~6GHz
- ▶ V.S.W.R : 0~5GHz 1 : 1.5 ; 5~6GHz 1 : 2.0
- ▶ Insertion Loss : 0.5dB
- ▶ Surge Discharge Current : 5KA (@8/20μs)
- ▶ Insulation Resistance : 1000mΩ
- ▶ Connector A : N-Type Female / N-Type Male
- ▶ Dimension : 68 x 22 mm
- ▶ Apply to all N-Type Female Antenna

Specification

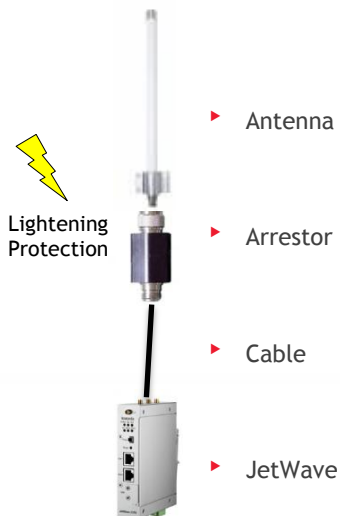

Features	
Frequency	0~6GHz
V.S.W.R(Max)	0~5GHz 1 : 1.5 5~6GHz 1 : 2.0
Insertion Loss	0.5dB
DC breakdown voltage	90±20% (@100V/S)
Impulse breakdown voltage	< 600V (@1KV/μs)
AC Discharge Current	5A (@50Hz)
Surge Discharge Current	5KA (@8/20μs)
Insulation Resistance	≥ 1000mΩ
Electrode Capacitance	< 1.5P
Mechanical & Environmental	
Connector	N-Type Female / N-Type Male
Dimension	68 x 22 mm
Temperature	-40~65°
Apply to	All N-Type Female Antenna

Dimension (Unit = mm)

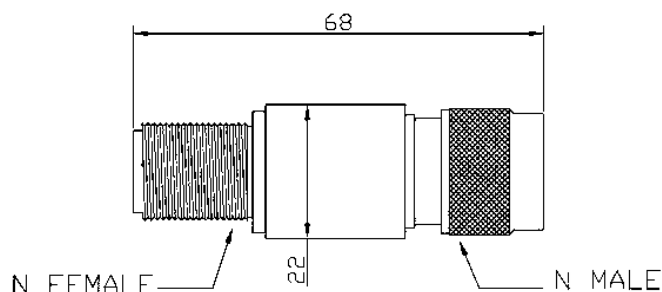

JETWAVE ANTENNA ACCESSORIES

RP-SMA Male to RP-SMA Female Cable

RSM-RSF-RG316-1M




- ▶ Connector : RP-SMA Male / RP-SMA Female
- ▶ Cable Type : RG-316
- ▶ Length : 1M
- ▶ Apply to : JetWave 2300/3000 to Default Antenna

Specification

Features	
Frequency	0~6GHz
V.S.W.R(Max)	1 : 1.5
Impedance	50 Ohm
Cable Loss	< 1.9dBi
Mechanical & Environmental	
Connector	RP-SMA Male to RP-SMA Female
Cable Type	RG-316
Length	1M
Apply Model & Antenna	
JetWave 2300 Series (RP-SMA Female)	Default Antenna (RP-SMA Male)
JetWave 3000 Series (RP-SMA Female)	Default Antenna (RP-SMA Male)

Dimension (Unit = mm)

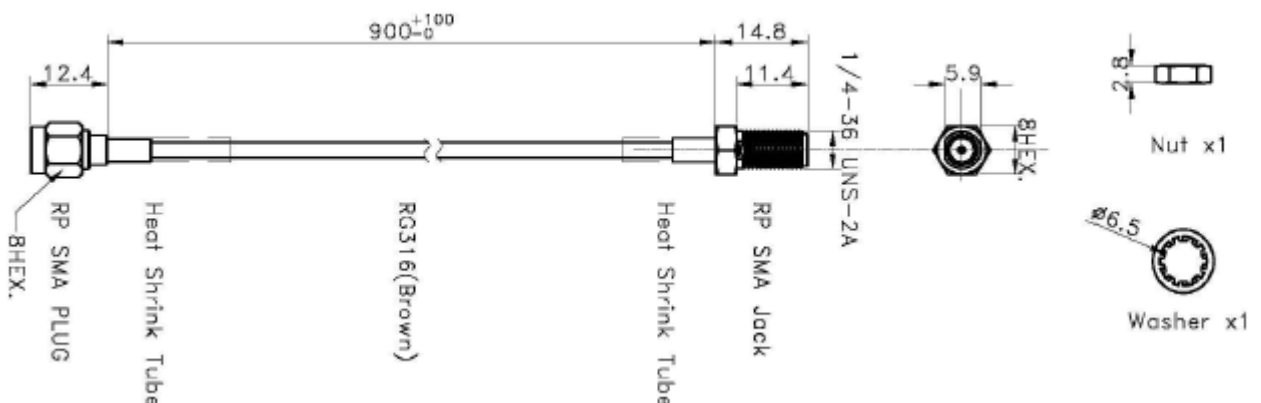

RP-SMA Male to N-Type Male Cable

RSM-NM-CFD200-1.5M




- ▶ Connector : RP-SMA Male / N-Type Male
- ▶ Cable Type : CFD-200
- ▶ Length : 1.5M
- ▶ Apply to : JetWave 2300/3000 to Optional Antenna

Specification

Features	
Frequency	0~6GHz
V.S.W.R(Max)	1 : 2.0
Impedance	50 Ohm
Cable Loss	< 0.61dBi
Mechanical & Environmental	
Connector	RP-SMA Male to N-Type Male
Cable Type	CFD-200
Length	1.5 M
Apply Model & Antenna	
JetWave 2300 Series (RP-SMA Female)	Optional Antenna (N-type Female)
JetWave 3000 Series (RP-SMA Female)	Optional Antenna (N-type Female)

Dimension (Unit = mm)

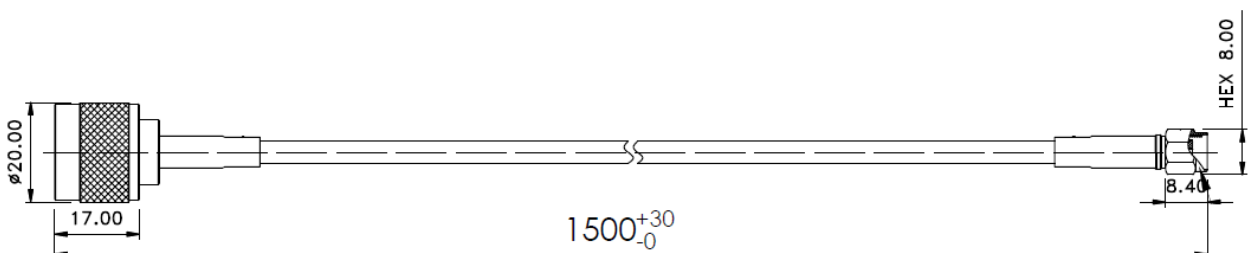

N-Type Male to N-Type Male Cable

NM-NM-CFD400-1M




- ▶ Connector : N-Type Male / N-Type Male
- ▶ Cable Type : CFD-400
- ▶ Length : 1M
- ▶ Apply to : JetWave 2800 to Optional Antenna

Specification

Features	
Frequency	0~3GHz
V.S.W.R(Max)	1 : 2.0
Impedance	50 Ohm
Cable Loss	< 0.5dBi
Power handling	50W Max
Mechanical & Environmental	
Connector	N-Type Male to N-Type Male
Cable Type	CFD-400
Length	1M
Apply Model & Antenna	
JetWave 2800 Series (N-Type Female)	Optional Antenna (N-type Female)

Dimension (Unit = mm)

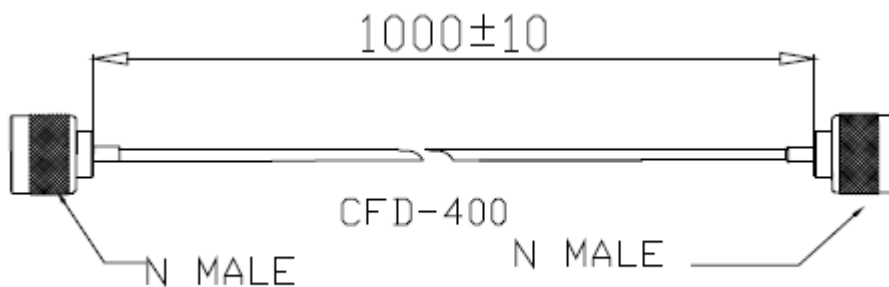

N-Type Female to N-Type Male Cable

NF-NM-CFD400-1M



- ▶ Connector : N-Type Female / N-Type Male
- ▶ Cable Type : CFD-400
- ▶ Length : 1M
- ▶ Apply to : JetWave 2400 to Optional Antenna

Specification

Features	
Frequency	0~3GHz
V.S.W.R(Max)	1 : 2.0
Impedance	50 Ohm
Cable Loss	< 0.5dBi
Power handling	50W Max
Mechanical & Environmental	
Connector	N-Type Female to N-Type Male
Cable Type	CFD-400
Length	1M
Apply Model & Antenna	
JetWave 2400 Series (N-Type Male)	Optional Antenna (N-type Female)

Dimension (Unit = mm)

