


COM Express™ conga-TCG

Type 6 Compact Module based on AMD Embedded G-Series SoC

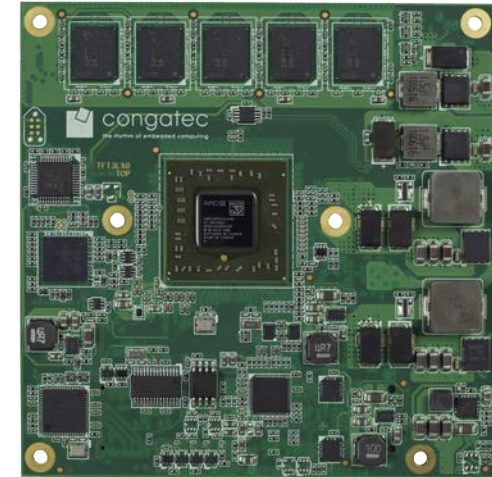

User's Guide

Revision 1.0

Revision History

Revision	Date (yyyy.mm.dd)	Author	Changes
0.1	2014.02.03	AEM	<ul style="list-style-type: none">Preliminary release
1.0	2015.03.05	AEM	<ul style="list-style-type: none">Added additional conga-TCG variants to "conga-TCG Options Information" in section 1 "Introduction".Updated caution notes in sections 2.7 "Environmental Specifications" and 4 "Heatspreader".Added the storage temperature range of industrial variants in section 2.7 "Environmental Specifications".Updated section 6.6 "OEM BIOS Customization".Added note about the configuration of fan_pwm pin as push-pull in section 7.3 "Thermal Management" and table 14 "Miscellaneous Signal Description".Official release.

Preface

This user's guide provides information about the components, features, connectors and BIOS Setup menus available on the conga-TCG. It is one of three documents that should be referred to when designing a COM Express™ application. The other reference documents that should be used include the following:

COM Express™ Design Guide
COM Express™ Specification

The links to these documents can be found on the congatec AG website at www.congatec.com

Disclaimer

The information contained within this user's guide, including but not limited to any product specification, is subject to change without notice.

congatec AG provides no warranty with regard to this user's guide or any other information contained herein and hereby expressly disclaims any implied warranties of merchantability or fitness for any particular purpose with regard to any of the foregoing. congatec AG assumes no liability for any damages incurred directly or indirectly from any technical or typographical errors or omissions contained herein or for discrepancies between the product and the user's guide. In no event shall congatec AG be liable for any incidental, consequential, special, or exemplary damages, whether based on tort, contract or otherwise, arising out of or in connection with this user's guide or any other information contained herein or the use thereof.

Intended Audience

This user's guide is intended for technically qualified personnel. It is not intended for general audiences.

Lead-Free Designs (RoHS)

All congatec AG designs are created from lead-free components and are completely RoHS compliant.

Electrostatic Sensitive Device



All congatec AG products are electrostatic sensitive devices and are packaged accordingly. Do not open or handle a congatec AG product except at an electrostatic-free workstation. Additionally, do not ship or store congatec AG products near strong electrostatic, electromagnetic, magnetic, or radioactive fields unless the device is contained within its original manufacturer's packaging. Be aware that failure to comply with these guidelines will void the congatec AG Limited Warranty.

Symbols

The following symbols are used in this user's guide:



Warning

Warnings indicate conditions that, if not observed, can cause personal injury.



Caution

Cautions warn the user about how to prevent damage to hardware or loss of data.



Note

Notes call attention to important information that should be observed.

Copyright Notice

Copyright © 2014, congatec AG. All rights reserved. All text, pictures and graphics are protected by copyrights. No copying is permitted without written permission from congatec AG.

congatec AG has made every attempt to ensure that the information in this document is accurate yet the information contained within is supplied "as-is".

Trademarks

Product names, logos, brands, and other trademarks featured or referred to within this user's guide, or the congatec website, are the property of their respective trademark holders. These trademark holders are not affiliated with congatec AG, our products, or our website.

Warranty

congatec AG makes no representation, warranty or guaranty, express or implied regarding the products except its standard form of limited warranty ("Limited Warranty") per the terms and conditions of the congatec entity, which the product is delivered from. These terms and conditions can be downloaded from www.congatec.com. congatec AG may in its sole discretion modify its Limited Warranty at any time and from time to time.

The products may include software. Use of the software is subject to the terms and conditions set out in the respective owner's license agreements, which are available at www.congatec.com and/or upon request.

Beginning on the date of shipment to its direct customer and continuing for the published warranty period, congatec AG represents that the products are new and warrants that each product failing to function properly under normal use, due to a defect in materials or workmanship or due to non conformance to the agreed upon specifications, will be repaired or exchanged, at congatec's option and expense.

Customer will obtain a Return Material Authorization ("RMA") number from congatec AG prior to returning the non conforming product freight prepaid. congatec AG will pay for transporting the repaired or exchanged product to the customer.

Repaired, replaced or exchanged product will be warranted for the repair warranty period in effect as of the date the repaired, exchanged or replaced product is shipped by congatec, or the remainder of the original warranty, whichever is longer. This Limited Warranty extends to congatec's direct customer only and is not assignable or transferable.

Except as set forth in writing in the Limited Warranty, congatec makes no performance representations, warranties, or guarantees, either express or implied, oral or written, with respect to the products, including without limitation any implied warranty (a) of merchantability, (b) of fitness for a particular purpose, or (c) arising from course of performance, course of dealing, or usage of trade.

congatec AG shall in no event be liable to the end user for collateral or consequential damages of any kind. congatec shall not otherwise be liable for loss, damage or expense directly or indirectly arising from the use of the product or from any other cause. The sole and exclusive remedy against congatec, whether a claim sound in contract, warranty, tort or any other legal theory, shall be repair or replacement of the product only.

Certification

congatec AG is certified to DIN EN ISO 9001 standard.



Technical Support

congatec AG technicians and engineers are committed to providing the best possible technical support for our customers so that our products can be easily used and implemented. We request that you first visit our website at www.congatec.com for the latest documentation, utilities

and drivers, which have been made available to assist you. If you still require assistance after visiting our website then contact our technical support department by email at support@congatec.com

Terminology

Term	Description
GB	Gigabyte (1,073,741,824 bytes)
GHz	Gigahertz (one billion hertz)
kB	Kilobyte (1024 bytes)
MB	Megabyte (1,048,576 bytes)
Mbit	Megabit (1,048,576 bits)
KHz	Kilohertz (one thousand hertz)
MHz	Megahertz (one million hertz)
TDP	Thermal Design Power
PCIe	PCI Express
SATA	Serial ATA
HDMI	High-Definition Multimedia Interface
DVI	Digital Visual Interface
SoC	System on Chip
DDI	Digital Display Interface
CGOS API	congatec Operating system Application Programming interface
HDA	High Definition Audio
I/F	Interface
N.C.	Not connected
N.A.	Not available
cBC	congatec Board Controller
TBD	To be determined

Contents

1	Introduction	10	5.1.4	Gigabit Ethernet	27
2	Specifications	13	5.1.5	LPC Bus.....	27
2.1	Feature List	13	5.1.6	I ² C Bus Fast Mode	27
2.2	Supported Operating Systems	14	5.1.7	PCI Express™.....	27
2.3	Mechanical Dimensions	14	5.1.8	ExpressCard™	28
2.4	Supply Voltage Standard Power	15	5.1.9	VGA/CRT	28
2.4.1	Electrical Characteristics	15	5.1.10	LVDS/eDP.....	28
2.4.2	Rise Time	15	5.1.11	General Purpose Serial Interface	28
2.5	Power Consumption	16	5.1.12	Power Control.....	29
2.5.1	conga-TCG AMD Embedded GX-420CA SoC 2.0 GHz Quad Core 2MB L2 Cache	17	5.1.13	Power Management.....	31
2.5.2	conga-TCG AMD Embedded GX-415GA SoC 1.5 GHz Quad Core 2MB L2 Cache	17	5.2	Secondary Connector Rows C and D.....	32
2.5.3	conga-TCG AMD Embedded GX-217GA SoC 1.65 GHz Dual Core 1MB L2 Cache	18	5.2.1	PCI Express™	32
2.5.4	conga-TCG AMD Embedded GX-210HA SoC 1.0 GHz Dual Core 1MB L2 Cache.....	18	5.2.2	PCI Express Graphics (PEG)	32
2.5.5	conga-TCG AMD Embedded GX-411GA SoC 1.1 GHz Quad Core 2MB L2 Cache (ext. temp).....	19	5.2.3	Digital Display Interface (DDI).....	32
2.5.6	conga-TCG AMD Embedded GX-209HA SoC 1.0 GHz Dual Core 1MB L2 Cache (ext. temp)	19	5.2.3.1	High-Definition Multimedia Interface (HDMI)	33
2.6	Supply Voltage Battery Power	20	5.2.3.2	Digital Visual Interface (DVI)	33
2.6.1	CMOS Battery Power Consumption	20	5.2.3.3	DisplayPort (DP)	33
2.7	Environmental Specifications	20	5.2.4	USB 3.0	34
3	Block Diagram.....	21	6	Additional Features.....	35
4	Heatspreader	22	6.1	congatec Board Controller (cBC)	35
4.1	Heatspreader Dimensions.....	23	6.2	Board Information	35
5	Connector Subsystems Rows A, B, C, D	25	6.3	Watchdog	35
5.1	Primary Connector Rows A and B.....	26	6.4	I ² C Bus.....	35
5.1.1	Serial ATA™ (SATA).....	26	6.5	Power Loss Control	35
5.1.2	USB 2.0	26	6.6	OEM BIOS Customization.....	36
5.1.3	High Definition Audio (HDA) Interface	26	6.6.1	OEM Default Settings	36
			6.6.2	OEM Boot Logo.....	36
			6.6.3	OEM POST Logo	36
			6.6.4	OEM BIOS Code/Data.....	36
			6.6.5	OEM DXE Driver	37
			6.7	congatec Battery Management Interface	37
			6.8	API Support (CGOS)	37
			6.9	Security Features.....	38
			6.10	Suspend to Ram.....	38
			7	conga Tech Notes	39

7.1	AHCI	39	10.4.8	Trusted Computing Submenu.....	82
7.2	AMD Processor Features	39	10.4.9	CPU Submenu.....	83
7.2.1	AMD64 Technology	39	10.4.10	SATA Submenu	84
7.2.2	Power Management.....	39	10.4.11	SDIO Submenu	84
7.2.3	AMD Virtualization™ Technology	40	10.4.11.1	SD Controller Submenu	85
7.3	Thermal Management	40	10.4.12	USB Submenu	85
7.4	ACPI Suspend Modes and Resume Events.....	41	10.4.12.1	USB Port & Controller Configuration Submenu.....	86
7.5	USB Host Controller.....	42	10.4.13	SMART Settings Submenu.....	87
8	Signal Descriptions and Pinout Tables.....	43	10.4.14	Super I/O Submenu	87
8.1	A-B Connector Signal Descriptions	44	10.4.15	Serial Port Console Redirection Submenu	88
8.2	A-B Connector Pinout.....	52	10.4.15.1	Console Redirection Settings Submenu	88
8.3	C-D Connector Signal Descriptions.....	54	10.4.16	UEFI Network Stack Submenu	89
8.4	C-D Connector Pinout	64	10.4.17	Intel® I210 Gigabit Network Connection Submenu.....	89
8.5	Boot Strap Signals	66	10.4.18	NIC Configuration Submenu	90
9	System Resources	67	10.4.19	PC Speaker Configuration Submenu	90
9.1	I/O Address Assignment.....	67	10.5	Chipset Setup	90
9.1.1	LPC Bus.....	67	10.5.1	Chipset Settings Configuration.....	90
9.2	PCI Configuration Space Map	68	10.5.1.1	Memory Configuration Submenu	91
9.3	PCI Interrupt Routing Map.....	69	10.6	Boot Setup.....	92
9.4	I²C Bus	70	10.6.1	Boot Settings Configuration	92
9.5	SM Bus.....	70	10.6.1.1	CSM & Option ROM Control Submenu.....	94
10	BIOS Setup Description	71	10.7	Security Setup.....	94
10.1	Entering the BIOS Setup Program.....	71	10.7.1	Security Settings	94
10.1.1	Boot Selection Popup.....	71	10.7.1.1	BIOS Security Features	95
10.2	Setup Menu and Navigation.....	71	10.7.1.2	Hard Disk Security Features	96
10.3	Main Setup Screen.....	72	10.8	Save & Exit Menu.....	97
10.4	Advanced Setup	73	11	Additional BIOS Features	98
10.4.1	Graphics Submenu.....	73	11.1	Supported Flash Devices	98
10.4.2	Watchdog Submenu	75	11.2	Updating the BIOS.....	98
10.4.3	Hardware Health Monitoring Submenu	77	12	Industry Specifications	99
10.4.4	Module Serial Ports.....	77			
10.4.5	PCI & PCI Express Submenu.....	78			
10.4.5.1	PCI Express Settings Submenu	79			
10.4.5.2	PCI Express Port Configuration Submenu	80			
10.4.5.3	PIRQ Routing & IRQ Reservation Submenu.....	81			
10.4.6	RTC Wake Submenu	82			
10.4.7	ACPI Submenu.....	82			

List of Tables

Table 1	Feature Summary	13
Table 2	Display Combination	32
Table 3	Signal Tables Terminology Descriptions	43
Table 4	High Definition Audio Link Signals Descriptions	44
Table 5	Gigabit Ethernet Signal Descriptions.....	44
Table 6	Serial ATA Signal Descriptions	45
Table 7	PCI Express Signal Descriptions (general purpose)	45
Table 8	ExpressCard Support Pins Descriptions.....	46
Table 9	LPC Signal Descriptions	46
Table 10	USB 2.0 Signal Descriptions.....	47
Table 11	CRT Signal Descriptions.....	48
Table 12	LVDS Signal Descriptions.....	48
Table 13	SPI BIOS Flash Interface Signal Descriptions.....	49
Table 14	Miscellaneous Signal Descriptions.....	49
Table 15	General Purpose I/O Signal Descriptions	50
Table 16	Power and System Management Signal Descriptions	50
Table 17	General Purpose Serial Interface Signal Descriptions.....	51
Table 18	Power and GND Signal Descriptions.....	51
Table 19	Connector A-B Pinout.....	52
Table 20	PCI Express Signal Descriptions (general purpose)	54
Table 21	USB SuperSpeed Signal Descriptions.....	54
Table 22	PCI Express Signal Descriptions (x16 Graphics).....	55
Table 23	DDI Signal Description.....	57
Table 24	SDVO Signal Descriptions	59
Table 25	HDMI/DVI Signal Descriptions.....	60
Table 26	DisplayPort (DP) Signal Descriptions	61
Table 27	Module Type Definition Signal Description	63
Table 28	Power and GND Signal Descriptions	63
Table 29	Connector C-D Pinout	64
Table 30	Boot Strap Signal Descriptions	66
Table 31	PCI Configuration Space Map	68
Table 32	PCI Interrupt Routing Map.....	69

1 Introduction

COM Express™ Concept

COM Express™ is an open industry standard defined specifically for COMs (computer on modules). Its creation provides the ability to make a smooth transition from legacy parallel interfaces to the newest technologies based on serial buses available today. COM Express™ modules are available in following form factors:

- Compact 95mm x 95mm
- Basic 125mm x 95mm
- Extended 155mm x 110mm

The COM Express™ specification 2.1 defines seven different pinout types.

Types	Connector Rows	PCI Express Lanes	PCI	IDE Channels	LAN ports	USB 2.0/ USB 3.0	Display Interfaces
Type 1	A-B	Up to 6			1	8 / 0	VGA, LVDS
Type 2	A-B C-D	Up to 22	32 bit	1	1	8 / 0	VGA, LVDS, PEG/SDVO
Type 3	A-B C-D	Up to 22	32 bit		3	8 / 0	VGA, LVDS, PEG/SDVO
Type 4	A-B C-D	Up to 32		1	1	8 / 0	VGA, LVDS, PEG/SDVO
Type 5	A-B C-D	Up to 32			3	8 / 0	VGA, LVDS, PEG/SDVO
Type 6	A-B C-D	Up to 24			1	8 / 4	VGA, LVDS, PEG, 3x DDI
Type 10	A-B	Up to 4			1	8 / 0	1x DDI

The conga-TCG modules use the Type 6 pinout definition and comply with COM Express 2.1 specification. They are equipped with two high performance connectors that ensure stable data throughput.

The COM (computer on module) integrates all the core components and is mounted onto an application specific carrier board. COM modules are a legacy-free design (no Super I/O, PS/2 keyboard and mouse) and provide most of the functional requirements for any application. These functions include, but are not limited to, a rich complement of contemporary high bandwidth serial interfaces such as PCI Express, Serial ATA, USB 2.0, and Gigabit Ethernet. The Type 6 pinout provides the ability to offer PCI Express, Serial ATA, and LPC options thereby expanding the range of potential peripherals. The robust thermal and mechanical concept, combined with extended power-management capabilities, is perfectly suited for all applications.

Carrier board designers can use as little or as many of the I/O interfaces as deemed necessary. The carrier board can therefore provide all the interface connectors required to attach the system to the application specific peripherals. This versatility allows the designer to create a dense and optimized package, which results in a more reliable product while simplifying system integration. Most importantly, COM Express™ modules are scalable, which means once an application has been created there is the ability to diversify the product range through the use of different performance class or form factor size modules. Simply unplug one module and replace it with another, no redesign is necessary.

conga-TCG Options Information

The conga-TCG is available in ten variants (eight commercial and two industrial). This user's guide describes all of these variants and the table below shows the different configurations available. Check for the Part No. that applies to your product. This will tell you what options described in this user's guide are available on your particular module.

conga-TCG (commercial variants)

Part-No.	042000	042001	042002	042003	042004
SoC	AMD Embedded GX-420CA SoC	AMD Embedded GX-415GA SoC	AMD Embedded GX-217GA SoC	AMD Embedded GX-210HA SoC	AMD Embedded GX-420CA SoC
CPU Freq.	2.0 GHz Quad Core	1.5 GHz Quad Core	1.65 GHz Dual Core	1.0 GHz Dual Core	2.0 GHz Quad Core
L2 Cache	2 MB (Shared)	2 MB (Shared)	1 MB (Shared)	1 MB (Shared)	2 MB (Shared)
GPU Freq.	600 MHz	500 MHz	450 MHz	300 MHz	600 MHz
Graphic Engine	AMD Radeon™ HD 8400E	AMD Radeon™ HD 8330E	AMD Radeon™ HD 8280E	AMD Radeon™ HD 8210E	AMD Radeon™ HD 8400E
Onboard Memory	2 GB ECC DDR3L-1600	2 GB ECC DDR3L-1600	2 GB ECC DDR3L-1600	2 GB ECC DDR3L-1333	4 GB ECC DDR3L-1600
PCIe	4x	4x	4x	4x	4x
USB 3.0	2x	2x	2x	2x	2x
DDI	1x Dual-mode DP 1.2	1x Dual-mode DP 1.2	1x Dual-mode DP 1.2	1x Dual-mode DP 1.2	1x Dual-mode DP 1.2
LVDS/eDP	LVDS	LVDS	LVDS	LVDS	LVDS
SoC TDP	25 W	15 W	15 W	9 W	25 W

Part-No.	042020	042021	042022
SoC	AMD Embedded GX-424CC SoC	AMD Embedded GX-412HC SoC	AMD Embedded GX-212JC SoC
CPU Freq.	2.4 GHz Quad Core	1.2/1.6 GHz Dual Core	1.2/1.4 GHz Dual Core
L2 Cache	2 MB (Shared)	1 MB (Shared)	2 MB (Shared)
GPU Freq.	497/800 MHz	300/400 MHz	300/350 MHz
Graphic Engine	AMD Radeon™ HD 8400E	AMD Radeon™ HD 8210E	AMD Radeon™ HD 8400E
Onboard Memory	4 GB ECC DDR3L-1600	4 GB ECC DDR3L-1333	2 GB ECC DDR3L-1300
PCIe	4x	4x	4x
USB 3.0	2x	2x	2x
DDI	1x Dual-mode DP 1.2	1x Dual-mode DP 1.2	1x Dual-mode DP 1.2
LVDS/eDP	LVDS	LVDS	LVDS
SoC TDP	25 W	7 W	6 W

conga-TCG (Industrial variants)

Part-No.	042010	042011
SoC	AMD Embedded GX-411GA SoC	AMD Embedded GX-209HA SoC
CPU Freq.	1.1 GHz Quad Core	1.0 GHz Dual Core
L2 Cache	2 MB (Shared)	1 MB (Shared)
GPU Freq.	300 MHz	225 MHz
Graphic Engine	AMD Radeon™ HD 8210E	AMD Radeon™ HD 8180E
Onboard Memory	2 GB ECC DDR3-1066	2 GB ECC DDR3-1066
PCIe	4x	4x
USB 3.0	2x	2x
DDI	1x Dual-mode DP 1.2	1x Dual-mode DP 1.2
LVDS/eDP	LVDS	LVDS
SoC TDP	15 W (Ext Temp)	9 W (Ext Temp)

2 Specifications

2.1 Feature List

Table 1 Feature Summary

Form Factor	Based on COM Express™ standard pinout Type 6 (Compact size 95 x 95 mm). Compliant with COM Express 2.1 specification.	
SoC	AMD Embedded G-Series SoC up to 25W TDP	
Memory	Up to 8GB ECC DDR3L-1600	
Chipset	Integrated in the SoC	
Audio	High Definition Audio (HDA) interface with support for multiple codecs	
Ethernet	Gigabit Ethernet via Intel® Ethernet Controller I210.	
Graphics Options	AMD Radeon™ HD 8000E Series Graphics with support for Video Compressing Engine (VCE 2.0), Unified Video Decoder (UVD 4.2), OpenGL 4.2, OpenCL™ 1.2, DirectX®11.2 and up to two independent displays.	
	LVDS (Integrated flat panel interface with 25-112MHz single/dual-channel Transmitter). Supports: <ul style="list-style-type: none">- Single-channel LVDS interface: 1 x 18 bpp or 1 x 24 bpp.- Dual-channel LVDS interface : 2 x 18 bpp or 2 x 24 bpp.- VESA standard or JEIDA data mapping- Automatic Panel Detection via Embedded Panel Interface based on VESA EDID™ 1.3.- Resolution up to 1920x1200 in dual channel LVDS mode. Optional eDP interface NOTE: Either eDP or LVDS signals supported. Both not supported.	1x DDI (Digital Display Interface) with support for 1x DisplayPort 1.2 (resolution up to 2560x1600 @ 60Hz). 1x HDMI 1.4a port (requires external level shifter) 1x DVI port (requires external level shifter). 1x VGA (CRT Interface with resolutions up to 2048x1536 @ 60Hz. Supports auto monitor detection and automatic power down for VGA DAC, when there is no monitor attached.) NOTE: To support HDMI/DVI, an external level shifter (e.g PTN 3360D) should be implemented on the user's carrier board.
Peripheral Interfaces	2x Serial ATA® (up to 6 Gb/s). 4x PCI Express® Ports (5 Gb/s), supporting x1, x2 and x4 configurations. 8x USB 2.0 (EHCI) 2x USB 3.0 (XHCI) SDIO interface (shared with GPIOs).	2x ExpressCard LPC Bus I²C Bus, Fast Mode, multimaster SM Bus
BIOS	AMI Aptio® UEFI 2.x firmware; 8 MByte serial flash memory with congatec Embedded BIOS features	
Power Management	ACPI compliant with battery support. Also supports Suspend to RAM (S3).	



Some of the features mentioned in the above Feature Summary are optional. Check the article number of your module and compare it to the option information list on page 11 of this user's guide to determine what options are available on your particular module.


2.2 Supported Operating Systems

The conga-TCG supports the following operating systems.

- Microsoft® Windows® 8
- Microsoft® Windows® 7
- Microsoft® Windows® Embedded Compact 7
- Microsoft® Windows® 7/8 Embedded Standard
- Linux

2.3 Mechanical Dimensions


- 95.0 mm x 95.0 mm (3.74" x 3.74")
- Height approximately 18 or 21mm (including heatspreader) depending on the carrier board connector that is used. If the 5mm (height) carrier board connector is used then approximate overall height is 18mm. If the 8mm (height) carrier board connector is used then approximate overall height is 21mm.

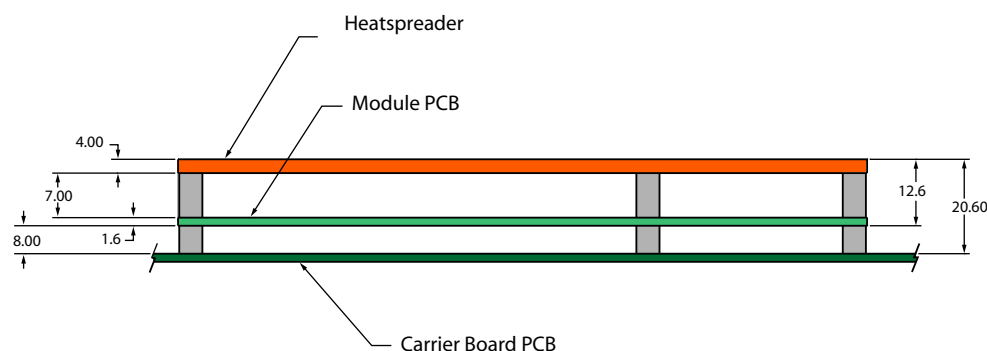

2.4 Supply Voltage Standard Power

- 12V DC \pm 5%

The dynamic range shall not exceed the static range.

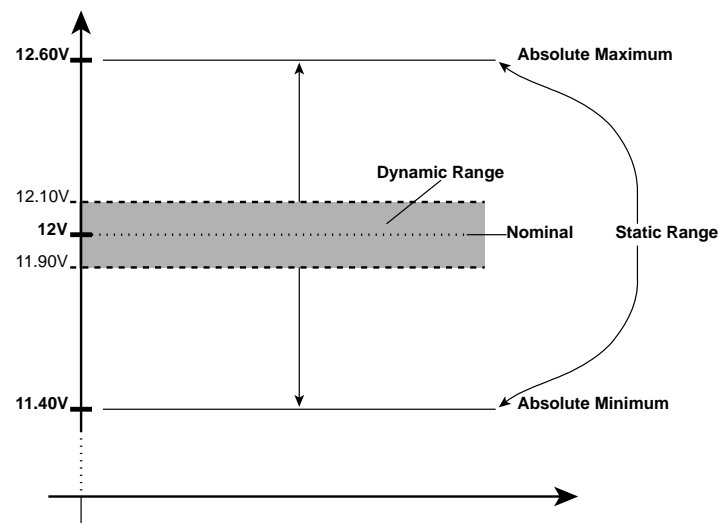

2.4.1 Electrical Characteristics

Power supply pins on the module's connectors limit the amount of input power. The following table provides an overview of the limitations for pinout Type 6 (dual connector, 440 pins).

Power Rail	Module Pin Current Capability (Amps)	Nominal Input (Volts)	Input Range (Volts)	Derated Input (Volts)	Max. Input Ripple (10Hz to 20MHz) (mV)	Max. Module Input Power (w. derated input) (Watts)	Assumed Conversion Efficiency	Max. Load Power (Watts)
VCC_12V	12	12	11.4-12.6	11.4	+/- 100	137	85%	116
VCC_5V-SBY	2	5	4.75-5.25	4.75	+/- 50	9		
VCC_RTC	0.5	3	2.0-3.3		+/- 20			

2.4.2 Rise Time

The input voltages shall rise from 10% of nominal to 90% of nominal at a minimum slope of 250V/s. The smooth turn-on requires that, during the 10% to 90% portion of the rise time, the slope of the turn-on waveform must be positive.

2.5 Power Consumption

The power consumption values listed in this document were measured under a controlled environment. The hardware used for testing includes a conga-TCG module, congatec debug carrier board, TFT monitor, SATA drive, and USB keyboard. The SATA drive was powered externally by an ATX power supply so that it does not influence the power consumption value that is measured for the module. The USB keyboard was detached once the module was configured within the OS. All recorded values were averaged over a 30 second time period. Cooling of the module was done by the module specific heatspreader and a fan cooled heatsink to measure the power consumption under normal thermal conditions.

Each module was measured while running Windows 7 Professional 64Bit, PowerNow enabled, CPU Turbo Core enabled and Power Plan set to "Power Saver". This setting ensures that core processors run in lowest frequency mode with minimal core voltage during desktop idle. Each module tested was equipped with onboard 2GB memory.

To measure the worst case power consumption the cooling solution was removed and the CPU core temperature was allowed to run up to between 95° and 100°C while running 100% workload with the Power Plan set to "Balanced". The peak current value was then recorded. This value should be taken into consideration when designing the system's power supply to ensure that the power supply is sufficient during worst case scenarios.

Power consumption values were recorded during the following stages:

Windows 7 (64 bit)

- Desktop Idle (power plan = Power Saver)
- 100% CPU workload (see note below, power plan = Power Saver)
- 100% CPU workload at approximately 100°C peak power consumption (power plan = Balanced)
- Suspend to RAM. Supply power for S3 mode is 5V.



Note

A software tool was used to stress the CPU to Max Turbo Core Frequency.

Processor Information

The tables below provide additional information about the power consumption data for each of the conga-TCG variants offered. The values are recorded at various operating mode.

Commercial Variants

2.5.1 conga-TCG AMD Embedded GX-420CA SoC 2.0 GHz Quad Core 2MB L2 Cache

SoC TDP: 25 W

conga-TCG Art. No. 042000	AMD Embedded GX-420CA SoC 2.0 GHz Quad Core 2MB L2 Cache (28nm) Layout Rev. TFT3LA0 /BIOS Rev. TFT3R002				
Turbo Frequency	n/a				
Memory Size	2x 2GB				
Operating System	Windows 7 (64 bit)				
Power State	Desktop Idle	100% workload	100% workload approx. 100°C CPU temp (peak)	Suspend to Ram (S3) 5V Input Power	Max. Power Consumption [W]
Power consumption (Amperes/Watts)	0.25 A/3.0 W (12V)	1.88 A/22.6 W (12V)	2.37 A/28.4 W (12V)	0.12 A/0.6 W (5V)	28.4

2.5.2 conga-TCG AMD Embedded GX-415GA SoC 1.5 GHz Quad Core 2MB L2 Cache

SoC TDP: 15 W

conga-TCG Art. No. 042001	AMD Embedded GX-415GA SoC 1.5 GHz Quad Core 2MB L2 Cache (28nm) Layout Rev. TFT3LA0 /BIOS Rev. TFT3R002				
Turbo Frequency	n/a				
Memory Size	2x 2GB				
Operating System	Windows 7 (64 bit)				
Power State	Desktop Idle	100% workload	100% workload approx. 100°C CPU temp (peak)	Suspend to Ram (S3) 5V Input Power	Max. Power Consumption [W]
Power consumption (Amperes/Watts)	0.25 A/3.0 W (12V)	1.08 A/12.9 W (12V)	1.39 A/16.7 W (12V)	0.14 A/0.7 W (5V)	16.7

2.5.3 conga-TCG AMD Embedded GX-217GA SoC 1.65 GHz Dual Core 1MB L2 Cache

SoC TDP: 15 W

conga-TCG Art. No. 042002	AMD Embedded GX-217GA SoC 1.65 GHz Dual Core 1MB L2 Cache (28nm) Layout Rev. TFT3LA0 /BIOS Rev. TFT3R003				
Turbo Frequency	n/a				
Memory Size	2GB				
Operating System	Windows 7 (64 bit)				
Power State	Desktop Idle	100% workload	100% workload approx. 100°C CPU temp (peak)	Suspend to Ram (S3) 5V Input Power	Max. Power Consumption [W]
Power consumption (Amperes/Watts)	0.18 A/2.2 W (12V)	1.02 A/12.2 W (12V)	1.34 A/16.1 W (12V)	0.08 A/0.4 W (5V)	16.1

2.5.4 conga-TCG AMD Embedded GX-210HA SoC 1.0 GHz Dual Core 1MB L2 Cache

SoC TDP: 9 W

conga-TCG Art. No. 042003	AMD Embedded GX-210HA SoC 1.0 GHz Dual Core 1MB L2 Cache (28nm) Layout Rev. TFT3LA0 /BIOS Rev. TFT3R003				
Turbo Frequency	n/a				
Memory Size	2GB				
Operating System	Windows 7 (64 bit)				
Power State	Desktop Idle	100% workload	100% workload approx. 100°C CPU temp (peak)	Suspend to Ram (S3) 5V Input Power	Max. Power Consumption [W]
Power consumption (Amperes/Watts)	0.22 A/2.6 W (12V)	0.56 A/6.7 W (12V)	0.91 A/10.9 W (12V)	0.12 A/0.6 W (5V)	10.9

2.5.5 conga-TCG AMD Embedded GX-411GA SoC 1.1 GHz Quad Core 2MB L2 Cache (ext. temp)

SoC TDP: 15 W

conga-TCG Art. No. 042010	AMD Embedded GX-411GA SoC 1.1 GHz Quad Core 2MB L2 Cache (28nm) Layout Rev. TFT3LA0 /BIOS Rev. TFT3R002				
Turbo Frequency	n/a				
Memory Size	2GB				
Operating System	Windows 7 (64 bit)				
Power State	Desktop Idle	100% workload	100% workload approx. 100°C CPU temp (peak)	Suspend to Ram (S3) 5V Input Power	Max. Power Consumption [W]
Power consumption (Amperes/Watts)	0.29 A/3.5 W (12V)	0.93 A/11.1 W (12V)	1.25 A/15.0 W (12V)	0.14 A/0.7 W (5V)	15.4

2.5.6 conga-TCG AMD Embedded GX-209HA SoC 1.0 GHz Dual Core 1MB L2 Cache (ext. temp)

SoC TDP: 9 W

conga-TCG Art. No. 042011	AMD Embedded GX-209HA SoC 1.0 GHz Dual Core 1MB L2 Cache (28nm) Layout Rev. TFT3LA0 /BIOS Rev. TFT3R002				
Turbo Frequency	n/a				
Memory Size	2GB				
Operating System	Windows 7 (64 bit)				
Power State	Desktop Idle	100% workload	100% workload approx. 100°C CPU temp (peak)	Suspend to Ram (S3) 5V Input Power	Max. Power Consumption [W]
Power consumption (Amperes/Watts)	0.19 A/2.3 W (12V)	0.63 A/7.6 W (12V)	0.88 A/10.6 W (12V)	0.16 A/0.8 W (5V)	10.6



All recorded power consumption values are approximate and only valid for the controlled environment described earlier. 100% workload refers to the CPU workload and not the maximum workload of the complete module. Supply power for S3 mode is 5V while all other measured modes are supplied with 12V power. Power consumption results will vary depending on the workload of other components such as graphics engine, memory, etc.

2.6 Supply Voltage Battery Power

- 2.0V-3.5V DC
- Typical 3V DC

2.6.1 CMOS Battery Power Consumption

RTC @ 20°C	Voltage	Current
Integrated in the SoC	3V DC	3.3 μ A

The CMOS battery power consumption value listed above should not be used to calculate CMOS battery lifetime. You should measure the CMOS battery power consumption in your customer specific application in worst case conditions, for example during high temperature and high battery voltage. The self-discharge of the battery must also be considered when determining CMOS battery lifetime. For more information about calculating CMOS battery lifetime refer to application note AN9_RTC_Battery_Lifetime.pdf, which can be found at www.congatec.com.

2.7 Environmental Specifications

Temperature (commercial variants)	Operation: 0° to 60°C	Storage: -20° to +80°C
Temperature (industrial variants)	Operation: -40° to 85°C	Storage: -40° to 85°C
Humidity	Operation: 10% to 90%	Storage: 5% to 95%




Caution

The above operating temperatures must be strictly adhered to at all times. The congatec heatspreader is only suitable for use within commercial temperature ranges (0° to 60°C). It is not designed to be used within industrial temperature ranges (-40° to 85°C). When using a heatspreader with conga-TCG commercial grade variants, the maximum operating temperature refers to any measurable spot on the heatspreader's surface.

congatec AG strongly recommends that you use the appropriate congatec module heatspreader as a thermal interface between the module and your application specific cooling solution when used in a commercial temperature range. If for some reason it is not possible to use the appropriate congatec module heatspreader as a thermal interface for conga-TCG commercial grade variants or if an industrial grade variant of conga-TCG is being used within industrial temperature ranges, then it is the responsibility of the operator to ensure that all components found on the module operate within the component manufacturer's specified temperature range.

Humidity specifications are for non-condensing conditions.

3 Block Diagram

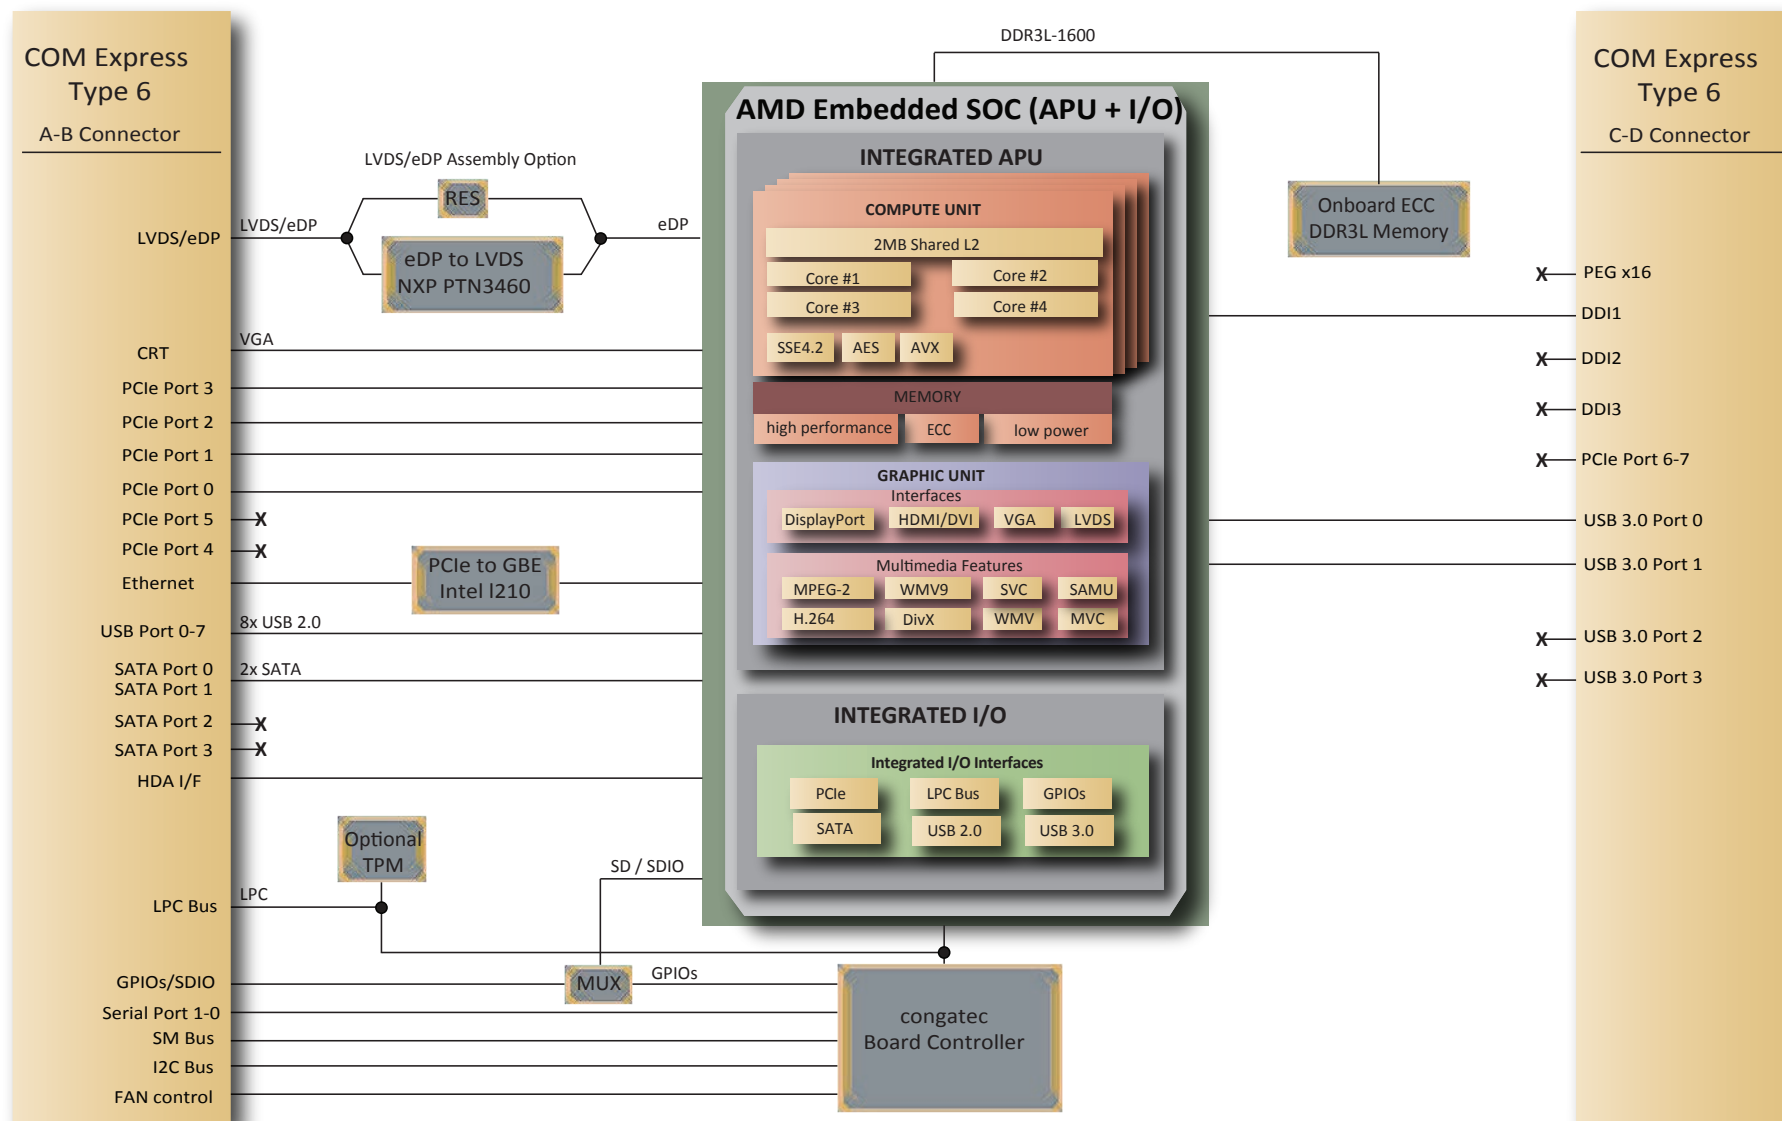

4 Heatspreader

An important factor for each system integration is the thermal design. The heatspreader acts as a thermal coupling device to the module and although it is the thermal interface where most of the heat generated by the module is dissipated, it is not to be considered as a heatsink. It has been designed as a thermal interface between the module and the application specific thermal solution.

The application specific thermal solution may use heatsinks with fans, and/or heat pipes, which can be attached to the heatspreader. Some thermal solutions may also require that the heatspreader is attached directly to the systems chassis thereby using the whole chassis as a heat dissipater.

For additional information about the conga-TCG heatspreader, refer to section 4.1 of this document.



Caution


congatec heatspreaders have been specifically designed for use within commercial temperature ranges (0° to 60°C) only. When using industrial temperature variants of the conga-TCG in industrial temperature ranges (-40° to 85°C), use of the conga-TCG heatspreaders is not recommended by congatec. The use of the congatec heatspreader in industrial temperature range is at the risk of the end user.

It is the responsibility of the end user to design an optimized thermal solution that meets the needs of their application within the industrial environmental conditions it is required to operate in. Attention must be given to the mounting solution used to mount the heatspreader and module into the system chassis. Do not use a threaded heatspreader together with threaded carrier board standoffs. The combination of the two threads may be staggered, which could lead to stripping or cross-threading of the threads in either the standoffs of the heatspreader or carrier board.

Only heatspreaders that feature fixing post that secure the thermal stacks should be used for applications that require the heatspreader to be mounted vertically. It cannot be guaranteed that the thermal stacks will not move if a heatspreader that does not have the fixing post feature is used in vertically mounted applications.

Additionally, the gap pad material used on all heatspreaders contains silicon oil that can seep out over time depending on the environmental conditions it is subjected to. For more information about this subject, contact your local congatec sales representative and request the gap pad material manufacturer's specification.

4.1 Heatspreader Dimensions

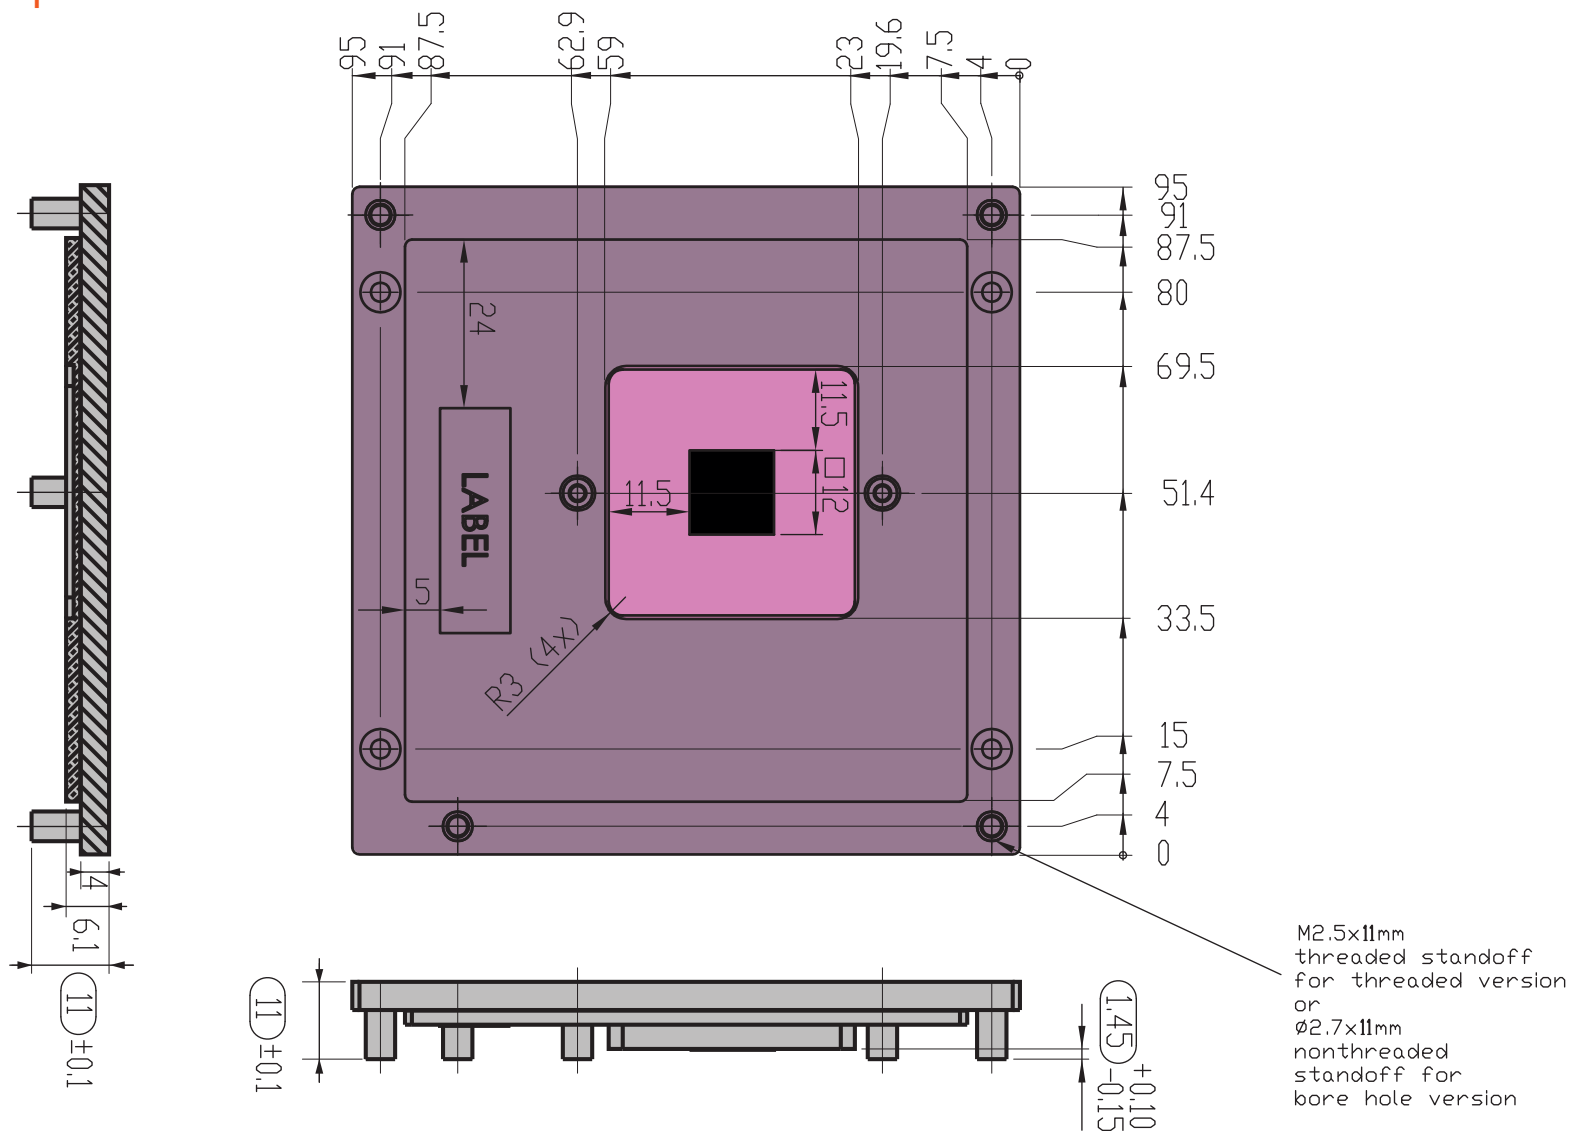

Note

All measurements are in millimeters. Maximum torque specification for heatspreader screws is 0.3 Nm. Mechanical system assembly mounting shall follow the valid DIN/ISO specifications.



Caution


Exceeding the maximum torque specification for heatspreader screws may damage the module or/and the carrier board.

When using the heatspreader in a high shock and/or vibration environment, congatec recommends the use of a thread-locking fluid on the heatspreader screws to ensure the above mentioned torque specification is maintained.

5 Connector Subsystems Rows A, B, C, D

The conga-TCG is connected to the carrier board via two 220-pin connectors (COM Express Type 6 pinout) for a total of 440 pins connectivity. These connectors are broken down into four rows. The primary connector consists of rows A and B while the secondary connector consists of rows C and D.

In this view the connectors are seen "through" the module.

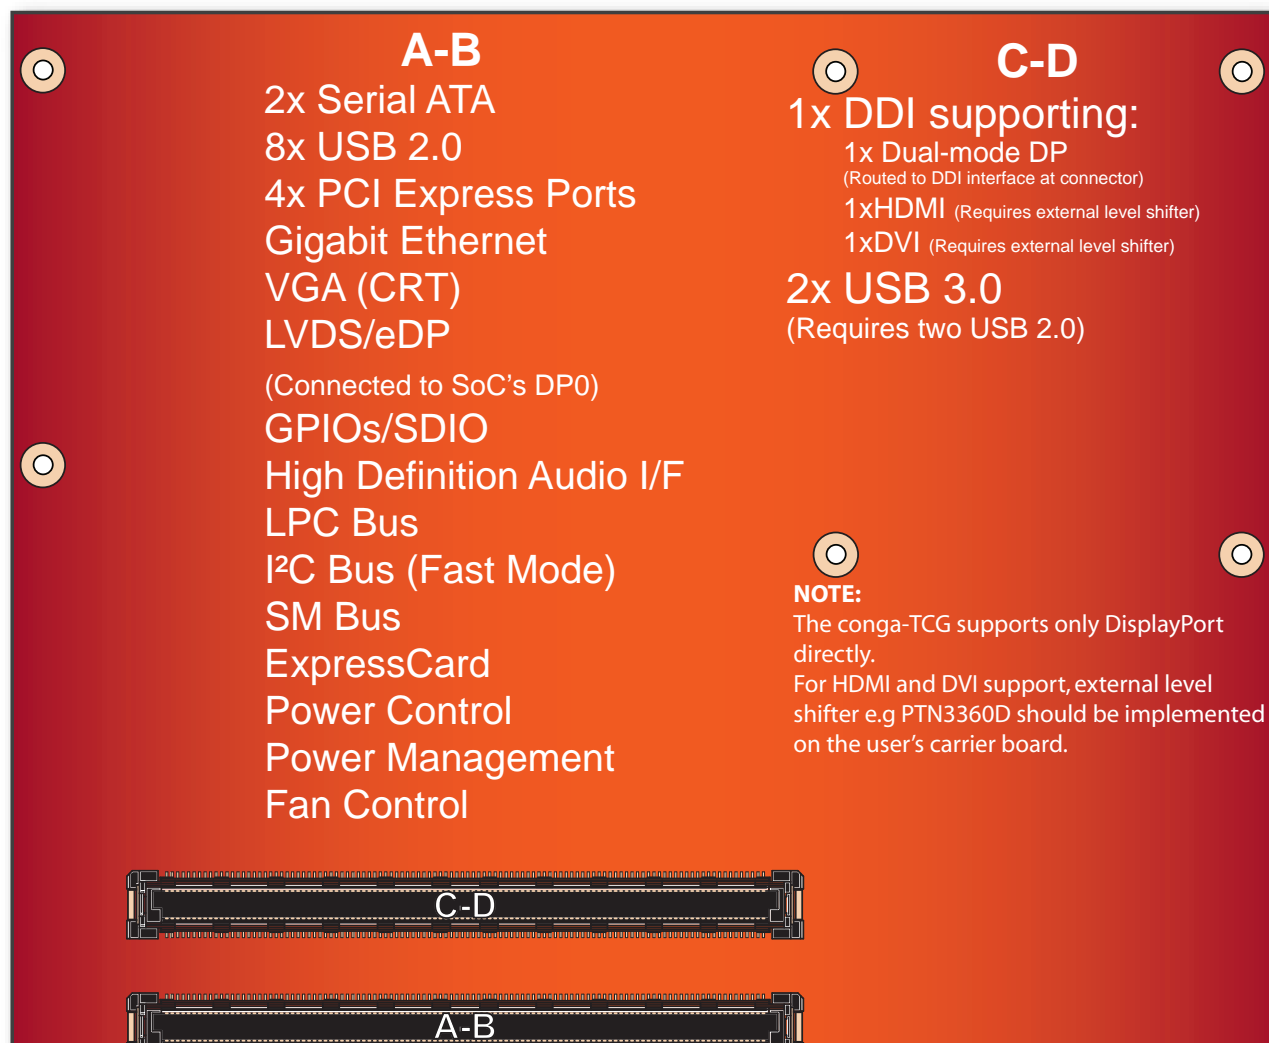

5.1 Primary Connector Rows A and B

The following subsystems can be found on the primary connector rows A and B.

5.1.1 Serial ATA™ (SATA)

The conga-TCG offers two Serial ATA ports (SATA 0-1) on the AB connector rows. These SATA ports are Gen 3 compliant, capable of up to 6.0 Gb/s transfer rate. Any of the ports can be configured to a lower transfer rate of 1.5 Gb/s for saving power.

The SATA controller supports two modes of operation - IDE and AHCI mode.

5.1.2 USB 2.0

The conga-TCG offers eight USB 2.0 via the OHCI and EHCI controllers provided by the integrated controller hub. These controllers comply with USB 1.1 and 2.0 specifications. The USB ports are routed to connector rows A and B and each port is capable of supporting USB 1.1 and 2.0 compliant devices. For more information about how the USB host controllers are routed, see section 7.5.



Note

USB 2.0 ports 0 and 1 are connected to XHCI controller when USB 3.0 ports are enabled.

5.1.3 High Definition Audio (HDA) Interface

The conga-TCG offers a HDA interface on the COM Express A-B connector rows. This interface supports the connection of external HD audio codecs over the HD audio link and is routed from the HD audio controller integrated in the controller hub. The HD audio controller supports up to four audio codecs and each codec has its own data input for the HD Audio interface



Note

COM Express modules only support up to three data inputs (HDA_SDIN[0:2]) as described in COM Express Specification 2.1.

The conga-TCG does not support AC'97 codecs.

5.1.4 Gigabit Ethernet

The conga-TCG offers Gigabit Ethernet with the integration of Intel i210 Ethernet Controller. The Ethernet interface consists of 4 pairs of low voltage differential pair signals designated from GBE0_MDI0± to GBE0_MDI3± plus control signals for link activity indicators. These signals can be used to connect to a 10/100/1000 BaseT RJ45 connector with integrated or external isolation magnetics on the carrier board.



Note

The GBE0_LINK# output is only active during a 100Mbit or 1Gbit connection, it is not active during a 10Mbit connection. The GBE0_LINK# signal is a logic AND of the GBE0_LINK100# and GBE0_LINK1000# signals on the conga-TCG module.

5.1.5 LPC Bus

conga-TCG offers the Low Pin Count (LPC) bus via the integrated controller hub. The LPC bus corresponds approximately to a serialized ISA bus yet with a significantly reduced number of signals. Due to the software compatibility to the ISA bus, I/O extensions such as additional serial ports can be easily implemented on an application specific baseboard using this bus. Many devices are available for this cost-efficient, low-speed interface designed to support low bandwidth and legacy devices.

The LPC host bus controller supports one master DMA device. TPM version 1.1/1.2 devices are also supported. See section 9.1.1 for more information about the LPC Bus.

5.1.6 I²C Bus Fast Mode

The I²C bus is implemented through the congatec board controller and is accessed through the congatec CGOS driver and API. The controller provides a Fast Mode multi-master I²C Bus that has maximum I²C bandwidth.

5.1.7 PCI Express™

The controller hub integrated in the AMD G-Series SoC provides four x1 general purpose PCI Express ports. The conga-TCG offers these four PCI Express™ ports externally on the AB connector rows. These ports are PCI Express™ Gen. 2 compliant and can be configured as 4x1, 1x2 + 2x1, 2x2 or 1x4 links.

The PCI Express interface is based on the PCI Express Specification 2.0 with Gen 1 and Gen 2 speeds.

5.1.8 ExpressCard™

The conga-TCG supports the implementation of two ExpressCards, which require the dedication of USB port or x1 PCI Express link for each ExpressCard used.

5.1.9 VGA/CRT

The conga-TCG supports one VGA interface on rows A-B of the COM Express connector. The VGA signalling levels are natively supported by the Graphics engine of the AMD G-Series SoC. The interface supports a maximum resolution of 2048x1536 at a refresh rate of 60 Hz and 30 bpp.

5.1.10 LVDS/eDP

The conga-TCG offers an LVDS interface on the AB connector. The single/dual channel LVDS interface is provided by routing the onboard eDP to LVDS bridge device (NXP PTN3460) to one of the dedicated DisplayPort interfaces (DP0) of the G-Series SoC.

The eDP to LVDS bridge processes incoming DisplayPort stream and converts the DP protocol to LVDS, before transmitting the processed stream in LVDS format. The bridge supports single and dual channel signalling with color depths of 18 bits or 24 bits per pixel and pixel clock frequency up to 112 MHz.



Note

The conga-TCG can support eDP interface instead of the default LVDS interface by assembly option. The customized variant will be available upon request but may require additional cost. For more information, contact congatec support team.

5.1.11 General Purpose Serial Interface

Two TTL compatible two wire ports are available on Type 6 COM Express modules. These pins are designated SER0_TX, SER0_RX, SER1_TX and SER1_RX. Data out of the module is on the _TX pins. Hardware handshaking and hardware flow control are not supported. The module asynchronous serial ports are intended for general purpose use and for use with debugging software that make use of the “console redirect” features available in many operating systems.

The conga-TCG offers two UART interfaces via the congatec Board Controller. The UART controllers integrated in the cBC support up to 1MBit/s and can operate in low-speed, full-speed and high-speed modes. The UART interfaces are routed to the AB connector and require congatec driver to function.



Note

The UART interfaces do not support legacy COM port emulation.

5.1.12 Power Control

PWR_OK

Power OK from main power supply or carrier board voltage regulator circuitry. A high value indicates that the power is good and the module can start its onboard power sequencing. The PWR_OK is a 3.3V signal according to the COM Express Specification. The use of this input is optional.

Carrier board hardware must drive this signal low until all power rails and clocks are stable. Releasing PWR_OK too early or not driving it low at all can cause numerous boot up problems. It is a good design practice to delay the PWR_OK signal a little (typically 100ms) after all carrier board power rails are up, to ensure a stable system. Although the PWR_OK input is not mandatory for the onboard power-up sequencing, it is strongly recommended that the carrier board hardware drives the signal low until it is safe to let the module boot-up.

A sample screenshot is shown below:





Note

The module is kept in reset as long as the PWR_OK is driven by carrier board hardware.

The three typical usage scenarios for a carrier board design are:

- Connect PWR_OK to the “power good” signal of an ATX type power supply.
- Connect PWR_OK to the last voltage regulator in the chain on the carrier board.
- Simply pull PWR_OK with a 1k resistor to the carrier board 3.3V power rail.

With this solution, it must be ensured that by the time the 3.3V is up, all carrier board hardware is fully powered and all clocks are stable.

The conga-TCG module is capable of generating its own power good through the use of an internal monitor on the $+12V \pm 5\%$ input voltage and/or the internal power supplies. The conga-TCG also provides support for controlling ATX-style power supplies. When not using an ATX power supply then the conga-TCG's pins SUS_S3#/PS_ON, 5V_SB, and PWRBTN# should be left unconnected

SUS_S3#/PS_ON#

The SUS_S3#/PS_ON# (pin A15 on the A-B connector) signal is an active-low output that can be used to turn on the main outputs of an ATX-style power supply. In order to accomplish this the signal must be inverted with an inverter/transistor that is supplied by standby voltage and is located on the carrier board.

PWRBTN#

When using ATX-style power supplies PWRBTN# (pin B12 on the A-B connector) is used to connect to a momentary-contact, active-low debounced push-button input while the other terminal on the push-button must be connected to ground. This signal is internally pulled up to 3V_SB using a 10k resistor. When PWRBTN# is asserted it indicates that an operator wants to turn the power on or off. The response to this signal from the system may vary as a result of modifications made in BIOS settings or by system software.

Power Supply Implementation Guidelines

12 volt input power is the sole operational power source for the conga-TCG. The remaining necessary voltages are internally generated on the module using onboard voltage regulators. A carrier board designer should be aware of the following important information when designing a power supply for a conga-TCG application:

- It has also been noticed that on some occasions, problems occur when using a 12V power supply that produces non monotonic voltage when powered up. The problem is that some internal circuits on the module (e.g. clock-generator chips) will generate their own reset signals when the supply voltage exceeds a certain voltage threshold. A voltage dip after passing this threshold may lead to these circuits becoming confused resulting in a malfunction. It must be mentioned that this problem is quite rare but has been observed in some mobile power

supply applications. The best way to ensure that this problem is not encountered is to observe the power supply rise waveform through the use of an oscilloscope to determine if the rise is indeed monotonic and does not have any dips. This should be done during the power supply qualification phase therefore ensuring that the above mentioned problem doesn't arise in the application. For more information about this issue visit www.formfactors.org and view page 25 figure 7 of the document "ATX12V Power Supply Design Guide V2.2".

5.1.13 Power Management

ACPI 3.0 compliant with battery support. Also supports Suspend to RAM (S3).

5.2 Secondary Connector Rows C and D

The following subsystems can be found on the secondary connector rows C and D.

5.2.1 PCI Express™

The conga-TCG does not offer PCI Express lanes on the CD connector. For more information on supported PCI Express lanes, see section 5.1.7.

5.2.2 PCI Express Graphics (PEG)

The conga-TCG does not support PCI Express Graphics.

5.2.3 Digital Display Interface (DDI)

The conga-TCG supports one Digital Display Interface on the COM Express CD connector. This interface supports only dual-mode DisplayPort 1.2 on the conga-TCG. To support HDMI/DVI, an external level shifter e.g PTN3360D should be implemented on the user's carrier board.

The processor on the conga-TCG supports High-bandwidth Digital Content Protection (HDCP) for playing high definition content over digital interfaces. Integrated in the processor is a dedicated mini HD audio controller which drives audio on integrated digital display interfaces such as HDMI and DisplayPort. The conga-TCG supports up to two independent displays and any combination of DDI, LVDS and VGA is possible, as shown in the table below: 2048x1536

Table 2 Display Combination

Display 1	Display 2	Display 1 Max. Resolution	Display 2 Max. Resolution
DDI (DP/HDMI/DVI)	LVDS/eDP	DP: 2560x1600 @60Hz HDMI/DVI: 1920x1200 @60Hz	1920x1200 @60Hz
DDI (DP/HDMI/DVI)	VGA	DP: 2560x1600 @60Hz HDMI/DVI: 1920x1200 @60Hz	2048x1536 @60Hz
LVDS/eDP	DDI (DP/HDMI/DVI)	1920x1200 @60Hz	DP: 2560x1600 @60Hz HDMI/DVI: 1920x1200 @60Hz
LVDS/eDP	VGA	1920x1200 @60Hz	2048x1536 @60Hz
VGA	LVDS	2048x1536 @60Hz	1920x1200 @60Hz
VGA	DDI (DP/HDMI/DVI)	2048x1536 @60Hz	DP: 2560x1600 @60Hz HDMI/DVI: 1920x1200 @60Hz

5.2.3.1 High-Definition Multimedia Interface (HDMI)

The conga-TCG offers an HDMI interface on the Digital Display Interface of the COM Express CD connector. The interface is based on HDMI 1.4a specification with support for 3D, 4K, Deep Color, maximum display resolution of 1920x1200 at 60Hz. Supported audio formats are AC-3 Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS-HD, DTS-HD Master Audio.

The HDMI interface can be combined with LVDS/eDP or VGA interface to support two independent displays.



Note

To support the HDMI interface, an external level translator/shifter (e.g PTN3360D) should be implemented on the user's baseboard.

5.2.3.2 Digital Visual Interface (DVI)

The conga-TCG offers one single-link DVI interface on the Digital Display Interface of the COM Express CD connector. The interface supports a maximum display resolution of 1920x1200 at 60 Hz and can be combined with LVDS/eDP or VGA interface to support two independent displays.



Note

To support the DVI interface, an external level translator/shifter (e.g PTN3360D) should be implemented on the user's baseboard.

5.2.3.3 DisplayPort (DP)

The conga-TCG offers a dual-mode DisplayPort 1.2 interface on the DDI of the COM Express CD connector. The interface supports all mandatory features of the VESA DisplayPort Standard versions 1.2 including Multi-Stream Transport (MST) for monitor daisy-chaining, stereoscopic 3D frame transport, maximum bit rate of 5.4 Gbps and maximum display resolution of 2560x1600 at 60 Hz. Supported audio formats are linear PCM, Dolby Digital (AC-3), Dolby TrueHD, DTS, DTS-HD Master Audio and up to 8 channels.

The DP interface can be combined with LVDS/eDP or VGA interface to support two independent displays.

5.2.4 USB 3.0

The conga-TCG offers two RX and TX differential signal pairs on the COM Express CD connector to support two USB 3.0 ports (USB 0 -1). Each USB 3.0 port requires corresponding USB 2.0 differential data pairs for USB 3.0 support.

The xHCI host controller provided by the SoC's controller hub controls these ports and allows data transfers of up to 5 Gb/s with SuperSpeed, highspeed, full-speed and low-speed traffic support. For more information about how the USB host controllers are routed, see section 7.5.



USB 2.0 ports 0 and 1 are connected to XHCI controller when USB 3.0 ports are enabled.

6 Additional Features

6.1 congatec Board Controller (cBC)

The conga-TCG is equipped with Texas Instruments Tiva™ TM4E1231H6ZRBI microcontroller. This onboard microcontroller plays an important role for most of the congatec embedded/industrial PC features. It fully isolates some of the embedded features such as system monitoring or the I²C bus from the x86 core architecture, which results in higher embedded feature performance and more reliability, even when the x86 processor is in a low power mode. It also ensures that the congatec embedded feature set is fully compatible amongst all congatec modules.

6.2 Board Information

The cBC provides a rich data-set of manufacturing and board information such as serial number, EAN number, hardware and firmware revisions, and so on. It also keeps track of dynamically changing data like runtime meter and boot counter.

6.3 Watchdog

The conga-TCG is equipped with a multi stage watchdog solution that is triggered by software. The COM Express™ Specification does not provide support for external hardware triggering of the Watchdog, which means the conga-TCG does not support external hardware triggering. For more information about the Watchdog feature see the BIOS setup description section 10.4.2 of this document and application note AN3_Watchdog.pdf on the congatec AG website at www.congatec.com.



Note

The conga-TCG module does not support the watchdog NMI mode.

6.4 I²C Bus

The conga-TCG supports I²C bus. The I²C bus is accessed through the CGOS driver and API. It is multi-master capable and runs at fast mode.

6.5 Power Loss Control

The cBC has full control of the power-up of the module and therefore can be used to specify the behaviour of the system after an AC power loss condition. Supported modes are "Always On", "Remain Off" and "Last State".

6.6 OEM BIOS Customization

The conga-TCG is equipped with congatec Embedded BIOS, which is based on American Megatrends Inc. Aptio UEFI firmware. The congatec Embedded BIOS allows system designers to modify the BIOS. For more information about customizing the congatec Embedded BIOS, refer to the congatec System Utility user's guide, which is called CGUTLm1x.pdf and can be found on the congatec website at www.congatec.com or contact technical support.

The customization features supported are described below:

6.6.1 OEM Default Settings

This feature allows system designers to create and store their own BIOS default configuration. Customized BIOS development by congatec for OEM default settings is no longer necessary because customers can easily perform this configuration by themselves using the congatec system utility CGUTIL. See congatec application note AN8_Create_OEM_Default_Map.pdf on the congatec website for details on how to add OEM default settings to the congatec Embedded BIOS.

6.6.2 OEM Boot Logo

This feature allows system designers to replace the standard text output displayed during POST with their own BIOS boot logo. Customized BIOS development by congatec for OEM Boot Logo is no longer necessary because customers can easily perform this configuration by themselves using the congatec system utility CGUTIL. See congatec application note AN8_Create_And_Add_Bootlogo.pdf on the congatec website for details on how to add OEM boot logo to the congatec Embedded BIOS.

6.6.3 OEM POST Logo

This feature allows system designers to replace the congatec POST logo displayed in the upper left corner of the screen during BIOS POST with their own BIOS POST logo. Use the congatec system utility CGUTIL 1.5.4 or later to replace/add the OEM POST logo.

6.6.4 OEM BIOS Code/Data

With the congatec embedded BIOS it is possible for system designers to add their own code to the BIOS POST process. The congatec Embedded BIOS first calls the OEM code before handing over control to the OS loader.

Except for custom specific code, this feature can also be used to support Win XP SLP installation, Window 7 SLIC table (OA2.0), Windows 8 OEM activation (OA3.0), verb tables for HDA codecs, PCI/PCIe opROMs, bootloaders, rare graphic modes and Super I/O controller initialization.



Note

The OEM BIOS code of the new UEFI based firmware is only called when the CSM (Compatibility Support Module) is enabled in the BIOS setup menu. Contact congatec technical support for more information on how to add OEM code.

6.6.5 OEM DXE Driver

This feature allows designers to add their own UEFI DXE driver to the congatec embedded BIOS. Contact congatec technical support for more information on how to add an OEM DXE driver.

6.7 congatec Battery Management Interface

In order to facilitate the development of battery powered mobile systems based on embedded modules, congatec AG has defined an interface for the exchange of data between a CPU module (using an ACPI operating system) and a Smart Battery system. A system developed according to the congatec Battery Management Interface Specification can provide the battery management functions supported by an ACPI capable operating system (e.g. charge state of the battery, information about the battery, alarms/events for certain battery states, ...) without the need for any additional modifications to the system BIOS.

In addition to the ACPI-Compliant Control Method Battery mentioned above, the latest versions of the conga-TCG BIOS and board controller firmware also support LTC1760 battery manager from Linear Technology and a battery only solution (no charger). All three battery solutions are supported on the I2C bus and the SMBus. This gives the system designer more flexibility when choosing the appropriate battery sub-system.

For more information about this subject visit the congatec website and view the following documents:

- congatec Battery Management Interface Specification
- Battery System Design Guide
- conga-SBM³ User's Guide

6.8 API Support (CGOS)

In order to benefit from the above mentioned non-industry standard feature set, congatec provides an API that allows application software developers to easily integrate all these features into their code. The CGOS API (congatec Operating System Application Programming Interface) is the congatec proprietary API that is available for all commonly used Operating Systems such as Win32, Win64, Win CE, Linux. The architecture of the CGOS API driver provides the ability to write application software that runs unmodified on all congatec CPU modules.

All the hardware related code is contained within the congatec embedded BIOS on the module. See section 1.1 of the CGOS API software developers guide, which is available on the congatec website .

6.9 Security Features

The conga-TCG can be equipped optionally with a “Trusted Platform Module” (TPM 1.2). The TPM 1.2 includes co-processors to calculate efficient hash and RSA algorithms with key lengths up to 2,048 bits, as well as a real random number generator. Security sensitive applications like gaming and e-commerce will benefit also with improved authentication, integrity and confidence levels.

6.10 Suspend to Ram

The Suspend to RAM feature is available on the conga-TCG.

7 conga Tech Notes

The conga-TCG has some technological features that require additional explanation. The following section will give the reader a better understanding of some of these features. This information will also help to gain a better understanding of the information found in the System Resources section of this user's guide as well as some of the setup nodes found in the BIOS Setup Program description section.

7.1 AHCI

The integrated controller hub in the AMD G-Series SoC provides hardware support for Advanced Host Controller Interface (AHCI), a new programming interface for SATA host controllers. Platforms supporting AHCI may take advantage of performance features such as no master/slave designation for SATA devices (each device is treated as a master) and hardware-assisted native command queuing. AHCI also provides usability enhancements such as Hot-Plug.

7.2 AMD Processor Features

7.2.1 AMD64 Technology

- AMD64 technology instruction-set extensions
- 64-bit integer registers, 48-bit virtual addresses, and 40-bit physical addresses
- Sixteen 64-bit integer registers
- Sixteen 128-bit SSE/SSE2/SSE3/SSE4a registers

For more information about AMD64 Technology, visit <http://www.amd.com>.

7.2.2 Power Management

- Multiple low-power states
- AMD AllDay™ power technology
- System Management Mode (SMM)
- ACPI-compliant, including support for processor performance states (P-states)
- Supports processor power states C0, C1, CC6, and PC6
- Supports sleep states including S0, S3, S4, and S5

-
- PCIe® core power gating
 - PCIe speed power policy

For more information about AMD64 Technology, visit <http://www.amd.com>.

7.2.3 AMD Virtualization™ Technology

- SVM pause count capability
- SVM disable and lock
- Rapid virtualization indexing (nested paging)
- Improved world-switch speed

For more information about AMD64 Technology, visit <http://www.amd.com>.



Note

congatec does not offer virtual machine monitor (VMM) software. All VMM software support questions and queries should be directed to the VMM software vendor and not congatec technical support.

7.3 Thermal Management

ACPI is responsible for allowing the operating system to play an important part in the system's thermal management. This results in the operating system having the ability to take control of the operating environment by implementing cooling decisions according to the demands put on the CPU by the application.

The conga-TCG ACPI thermal solution offers three different cooling policies:

- **Passive Cooling**

When the temperature in the thermal zone must be reduced, the operating system can decrease the power consumption of the processor by throttling the processor clock. One of the advantages of this cooling policy is that passive cooling devices (in this case the processor) do not produce any noise. Use the "passive cooling trip point" setup node in the BIOS setup program to determine the temperature threshold that the operating system will use to start or stop the passive cooling procedure.

- **Active Cooling**

During this cooling policy the operating system is turning the fan on/off. Although active cooling devices consume power and produce noise, they also have the ability to cool the thermal zone without having to reduce the overall system performance. Use the "active cooling trip point"

setup node in the BIOS setup program to determine the temperature threshold that the operating system will use to start the active cooling device. It is stopped again when the temperature goes below the threshold (5°C hysteresis).



Note

The congatec COM Express Type 6 and Type 10 modules use a Push-Pull output for the fan_pwm signal instead of the open drain output specified in the COM Express specification. Although this does not comply with the COM Express specification 2.0, the benefits are obvious. The Push-Pull output optimizes the power consumed by the fan_pwm signal without functional change.

- **Critical Trip Point**

If the temperature in the thermal zone reaches a critical point then the operating system will perform a system shut down in an orderly fashion in order to ensure that there is no damage done to the system as result of high temperatures. Use the "critical trip point" setup node in the BIOS setup program to determine the temperature threshold that the operating system will use to shut down the system



Note

The end user must determine the cooling preferences for the system by using the setup nodes in the BIOS setup program to establish the appropriate trip points. If passive cooling is activated and the processor temperature is above the trip point the processor clock is throttled. See section 12 of the ACPI Specification 2.0 C for more information about passive cooling.

7.4 ACPI Suspend Modes and Resume Events

conga-TCG supports S3 (STR= Suspend to RAM). For more information about S3 wake events see section 10.4.7 "ACPI Submenu".

S4 (Suspend to Disk) is not supported by the BIOS (S4_BIOS) but it is supported by the following operating systems (S4_OS= Hibernate):

- Windows 7, Windows 8, Linux

This table lists the "Wake Events" that resume the system from S3 unless otherwise stated in the "Conditions/Remarks" column:


Wake Event	Conditions/Remarks
Power Button	Wakes unconditionally from S3-S5.
Onboard LAN Event	Device driver must be configured for Wake On LAN support.
SMBALERT#	Wakes unconditionally from S3-S5.
PCI Express WAKE#	Wakes unconditionally from S3-S5.
USB Mouse/Keyboard Event	When Standby mode is set to S3, the following must be done for a USB Mouse/Keyboard Event to be used as a Wake Event. USB Hardware must be powered by standby power source. Set USB Device Wakeup from S3/S4 to ENABLED in the ACPI setup menu (if setup node is available in BIOS setup program).
RTC Alarm	Activate and configure Resume On RTC Alarm in the Power setup menu. Only available in S5.
Watchdog Power Button Event	Wakes unconditionally from S3-S5.

7.5 USB Host Controller

The conga-TCG offers up to eight USB 2.0 ports. Two of these ports (0 and 1) can be used together with the SuperSpeed signals on the CD connector to support USB 3.0. In general, the conga-TCG supports up to eight USB 2.0 or up to six USB 2.0 and two USB 3.0.

The integrated controller hub in the SoC supports these ports with one xHCI controller and three OHCI/EHCI controller pairs. The routing diagram is shown below:

Routing Diagram

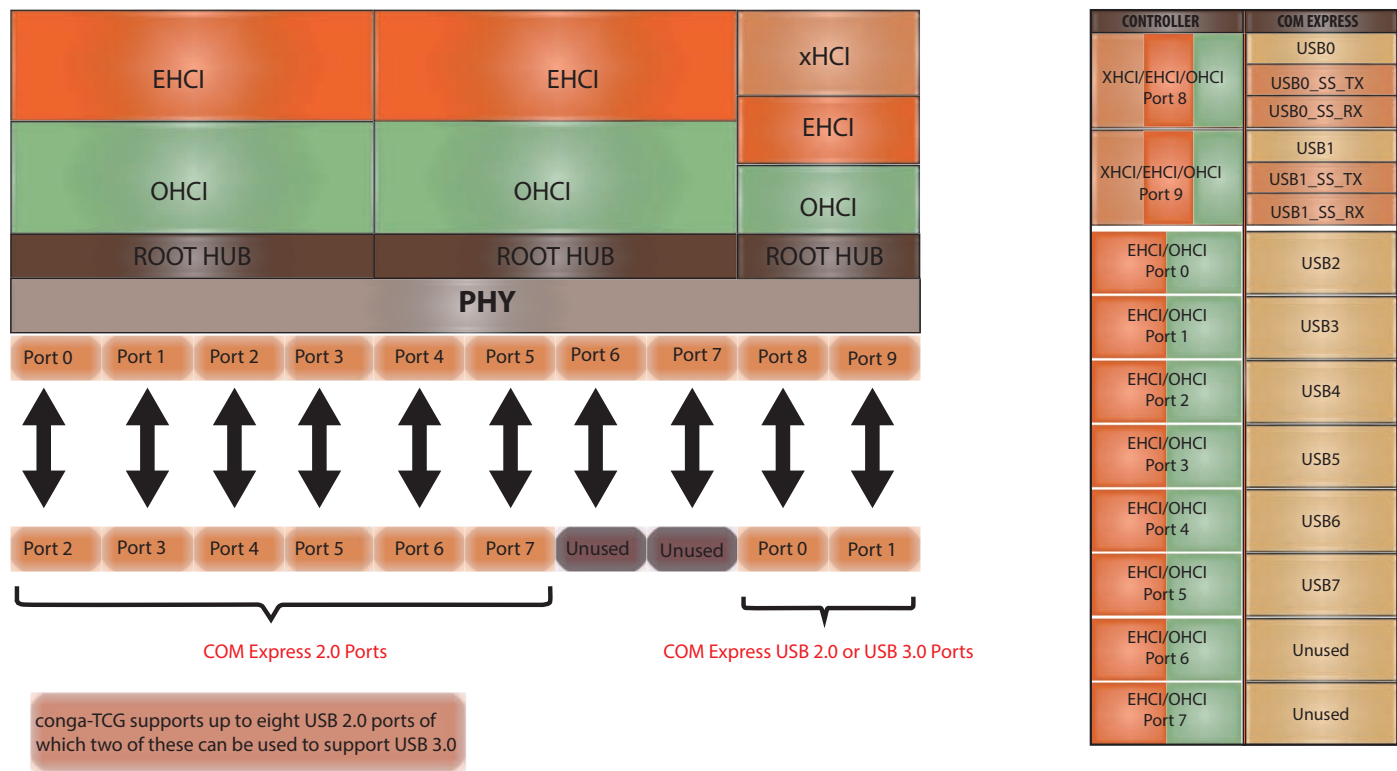

8 Signal Descriptions and Pinout Tables

The following section describes the signals found on COM Express™ Type 6 connectors used for congatec AG modules. The pinout of the modules complies with COM Express Type 6 Rev. 2.1.

Table 3 describes the terminology used in this section for the Signal Description tables. The PU/PD column indicates if a COM Express™ module pull-up or pull-down resistor has been used, if the field entry area in this column for the signal is empty, then no pull-up or pull-down resistor has been implemented on module.

The “#” symbol at the end of the signal name indicates that the active or asserted state occurs when the signal is at a low voltage level. When “#” is not present, the signal is asserted when at a high voltage level.

Table 3 Signal Tables Terminology Descriptions

Term	Description
PU	Implemented pull-up resistor
PD	Implemented pull-down resistor
I/O 3.3V	Bi-directional signal 3.3V tolerant
I/O 5V	Bi-directional signal 5V tolerant
I 3.3V	Input 3.3V tolerant
I 5V	Input 5V tolerant
I/O 3.3VSB	Bi-directional signal 3.3V tolerant active in standby state
O 3.3V	Output 3.3V signal level
O 5V	Output 5V signal level
OD	Open drain output
O 3.3V/12V	Output 3.3V/12V tolerant
I 3.3V/12V	Input 3.3V/12V tolerant
P	Power Input
DDC	Display Data Channel
PCIE	In compliance with PCI Express Base Specification, Revision 2.0
PEG	PCI Express Graphics
SATA	In compliance with Serial ATA specification, Revision 3.0.
REF	Reference voltage output. May be sourced from a module power plane.
PDS	Pull-down strap. A module output pin that is either tied to GND or is not connected. Used to signal module capabilities (pinout type) to the Carrier Board.

8.1 A-B Connector Signal Descriptions

Table 4 High Definition Audio Link Signals Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
AC/HDA_RST#	A30	High Definition Audio Reset: This signal is the master hardware reset to external codec(s).	O 3.3VSB		AC'97 codecs are not supported.
AC/HDA_SYNC	A29	High Definition Audio Sync: This signal is a 48 kHz fixed rate sample sync to the codec(s). It is also used to encode the stream number.	O 3.3VSB		AC'97 codecs are not supported.
AC/HDA_BITCLK	A32	High Definition Audio Bit Clock Output: This signal is a 24.000MHz serial data clock generated by the High Definition Audio controller.	O 3.3VSB		AC'97 codecs are not supported.
AC/HDA_SDOUT	A33	High Definition Audio Serial Data Out: This signal is the serial TDM data output to the codec(s). This serial output is double-pumped for a bit rate of 48 Mb/s for High Definition Audio.	O 3.3VSB		AC'97 codecs are not supported.
AC/HDA_SDIN[2:0]	B28-B30	High Definition Audio Serial Data In [0]: These signals are serial TDM data inputs from the three codecs. The serial input is single-pumped for a bit rate of 24 Mb/s for High Definition Audio.	I 3.3VSB	PD 47K	AC'97 codecs are not supported.

Table 5 Gigabit Ethernet Signal Descriptions

Gigabit Ethernet	Pin #	Description				I/O	PU/ PD	Comment	
GBE0_MDI0+ GBE0_MDI0- GBE0_MDI1+ GBE0_MDI1- GBE0_MDI2+ GBE0_MDI2- GBE0_MDI3+ GBE0_MDI3-	A13 A12 A10 A9 A7 A6 A3 A2	Gigabit Ethernet Controller 0: Media Dependent Interface Differential Pairs 0, 1, 2, 3. The MDI can operate in 1000, 100, and 10Mbit/sec modes. Some pairs are unused in some modes according to the following:				I/O Analog		Twisted pair signals for external transformer.	
	1000	100	10						
MDI[0]+/-	B1_DA+/-	TX+/-	TX+/-						
MDI[1]+/-	B1_DB+/-	RX+/-	RX+/-						
MDI[2]+/-	B1_DC+/-								
MDI[3]+/-	B1_DD+/-								
Gigabit Ethernet Controller 0 activity indicator, active low.				O 3.3VSB					
Gigabit Ethernet Controller 0 link indicator, active low.				O 3.3VSB					
Gigabit Ethernet Controller 0 100Mbit/sec link indicator, active low.				O 3.3VSB					
Gigabit Ethernet Controller 0 1000Mbit/sec link indicator, active low.				O 3.3VSB					
GBE0_CTREF	A14	Reference voltage for Carrier Board Ethernet channel 0 magnetics center tap. The reference voltage is determined by the requirements of the module PHY and may be as low as 0V and as high as 3.3V. The reference voltage output shall be current limited on the module. In the case in which the reference is shorted to ground, the current shall be limited to 250mA or less.						Not connected	



Note

The GBE0_LINK# output is only active during a 100Mbit or 1Gbit connection, it is not active during a 10Mbit connection. The GBE0_LINK# signal is a logic AND of the GBE0_LINK100# and GBE0_LINK1000# signals on the conga-TCG module.

Table 6 Serial ATA Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
SATA0_RX+ SATA0_RX-	A19 A20	Serial ATA channel 0, Receive Input differential pair.	I SATA		Supports Serial ATA specification, Revision 3.0
SATA0_TX+ SATA0_TX-	A16 A17	Serial ATA channel 0, Transmit Output differential pair.	O SATA		Supports Serial ATA specification, Revision 3.0
SATA1_RX+ SATA1_RX-	B19 B20	Serial ATA channel 1, Receive Input differential pair.	I SATA		Supports Serial ATA specification, Revision 3.0
SATA1_TX+ SATA1_TX-	B16 B17	Serial ATA channel 1, Transmit Output differential pair.	O SATA		Supports Serial ATA specification, Revision 3.0
SATA2_RX+ SATA2_RX-	A25 A26	Serial ATA channel 2, Receive Input differential pair.	I SATA		Not connected
SATA2_TX+ SATA2_TX-	A22 A23	Serial ATA channel 2, Transmit Output differential pair.	O SATA		Not connected
SATA3_RX+ SATA3_RX-	B25 B26	Serial ATA channel 3, Receive Input differential pair.	I SATA		Not connected
SATA3_TX+ SATA3_TX-	B22 B23	Serial ATA channel 3, Transmit Output differential pair.	O SATA		Not connected
(S)ATA_ACT#	A28	ATA (parallel and serial) or SAS activity indicator, active low.	O 3.3V		

Table 7 PCI Express Signal Descriptions (general purpose)

Signal	Pin #	Description	I/O	PU/PD	Comment
PCIE_RX0+ PCIE_RX0-	B68 B69	PCI Express channel 0, Receive Input differential pair.	I PCIE		Supports PCI Express Base Specification, Revision 2.0
PCIE_TX0+ PCIE_TX0-	A68 A69	PCI Express channel 0, Transmit Output differential pair.	O PCIE		Supports PCI Express Base Specification, Revision 2.0
PCIE_RX1+ PCIE_RX1-	B64 B65	PCI Express channel 1, Receive Input differential pair.	I PCIE		Supports PCI Express Base Specification, Revision 2.0
PCIE_TX1+ PCIE_TX1-	A64 A65	PCI Express channel 1, Transmit Output differential pair.	O PCIE		Supports PCI Express Base Specification, Revision 2.0
PCIE_RX2+ PCIE_RX2-	B61 B62	PCI Express channel 2, Receive Input differential pair.	I PCIE		Supports PCI Express Base Specification, Revision 2.0
PCIE_TX2+ PCIE_TX2-	A61 A62	PCI Express channel 2, Transmit Output differential pair.	O PCIE		Supports PCI Express Base Specification, Revision 2.0
PCIE_RX3+ PCIE_RX3-	B58 B59	PCI Express channel 3, Receive Input differential pair.	I PCIE		Supports PCI Express Base Specification, Revision 2.0. Not connected in variants where SoC TDP < 9W.

PCIE_TX3+ PCIE_TX3-	A58 A59	PCI Express channel 3, Transmit Output differential pair.	O PCIE		Supports PCI Express Base Specification, Revision 2.0. Not connected in variants where SoC TDP < 9W.
PCIE_RX4+ PCIE_RX4-	B55 B56	PCI Express channel 4, Receive Input differential pair.	I PCIE		Not connected
PCIE_TX4+ PCIE_TX4-	A55 A56	PCI Express channel 4, Transmit Output differential pair.	O PCIE		Not connected
PCIE_RX5+ PCIE_RX5-	B52 B53	PCI Express channel 5, Receive Input differential pair.	I PCIE		Not connected
PCIE_TX5+ PCIE_TX5-	A52 A53	PCI Express channel 5, Transmit Output differential pair.	O PCIE		Not connected
PCIE_CLK_REF+ PCIE_CLK_REF-	A88 A89	PCI Express Reference Clock output for all PCI Express and PCI Express Graphics Lanes.	O PCIE		A PCI Express Gen2/3 compliant clock buffer chip must be used on the carrier board if more than one PCI Express device is designed in.

Table 8 ExpressCard Support Pins Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
EXCD0_CPPE# EXCD1_CPPE#	A49 B48	ExpressCard capable card request.	I 3.3VSB	PU 10k 3.3VSB	
EXCD0_PERST# EXCD1_PERST#	A48 B47	ExpressCard Reset	O 3.3V		

Table 9 LPC Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
LPC_AD[0:3]	B4-B7	LPC multiplexed address, command and data bus	I/O 3.3V	PU 47K 3.3V	
LPC_FRAME#	B3	LPC frame indicates the start of an LPC cycle	O 3.3V		
LPC_DRQ[0:1]#	B8-B9	LPC serial DMA request	I 3.3V	PU 47K 3.3V	LPC_DRQ1# is not connected
LPC_SERIRQ	A50	LPC serial interrupt	I/OD 3.3V	PU 47K 3.3V	
LPC_CLK	B10	LPC clock output - 33MHz nominal	O 3.3V		

Table 10 USB 2.0 Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
USB0+	A46	USB Port 0, data + or D+	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB0-	A45	USB Port 0, data - or D-	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB1+	B46	USB Port 1, data + or D+	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB1-	B45	USB Port 1, data - or D-	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB2+	A43	USB Port 2, data + or D+	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB2-	A42	USB Port 2, data - or D-	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB3+	B43	USB Port 3, data + or D+	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB3-	B42	USB Port 3, data - or D-	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB4+	A40	USB Port 4, data + or D+	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB4-	A39	USB Port 4, data - or D-	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB5+	B40	USB Port 5, data + or D+	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB5-	B39	USB Port 5, data - or D-	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB6+	A37	USB Port 6, data + or D+	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB6-	A36	USB Port 6, data - or D-	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB7+	B37	USB Port 7, data + or D+	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB7-	B36	USB Port 7, data - or D-	I/O		USB 2.0 compliant. Backwards compatible to USB 1.1
USB_0_1_OC#	B44	USB over-current sense, USB ports 0 and 1. A pull-up for this line shall be present on the module. An open drain driver from a USB current monitor on the carrier board may drive this line low.	I 3.3VSB	PU 10k 3.3VSB	Do not pull this line high on the carrier board.
USB_2_3_OC#	A44	USB over-current sense, USB ports 2 and 3. A pull-up for this line shall be present on the module. An open drain driver from a USB current monitor on the carrier board may drive this line low. .	I 3.3VSB	PU 10k 3.3VSB	Do not pull this line high on the carrier board.
USB_4_5_OC#	B38	USB over-current sense, USB ports 4 and 5. A pull-up for this line shall be present on the module. An open drain driver from a USB current monitor on the carrier board may drive this line low.	I 3.3VSB	PU 10k 3.3VSB	Do not pull this line high on the carrier board.
USB_6_7_OC#	A38	USB over-current sense, USB ports 6 and 7. A pull-up for this line shall be present on the module. An open drain driver from a USB current monitor on the carrier board may drive this line low.	I 3.3VSB	PU 10k 3.3VSB	Do not pull this line high on the carrier board.

Table 11 CRT Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
VGA_RED	B89	Red for monitor. Analog DAC output, designed to drive a 37.5-Ohm equivalent load.	O Analog	PD 150R	Analog output
VGA_GRN	B91	Green for monitor. Analog DAC output, designed to drive a 37.5-Ohm equivalent load.	O Analog	PD 150R	Analog output
VGA_BLU	B92	Blue for monitor. Analog DAC output, designed to drive a 37.5-Ohm equivalent load.	O Analog	PD 150R	Analog output
VGA_HSYNC	B93	Horizontal sync output to VGA monitor	O 3.3V		
VGA_VSYNC	B94	Vertical sync output to VGA monitor	O 3.3V		
VGA_I2C_CK	B95	DDC clock line (I ² C port dedicated to identify VGA monitor capabilities)	I/OD	PU 4.7K 3.3V	
VGA_I2C_DAT	B96	DDC data line.	I/OD	PU 4.7K 3.3V	

Table 12 LVDS Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
LVDS_A0+	A71	LVDS Channel A differential pairs	O LVDS		
LVDS_A0-	A72				
LVDS_A1+	A73				
LVDS_A1-	A74				
LVDS_A2+	A75				
LVDS_A2-	A76				
LVDS_A3+	A78				
LVDS_A3-	A79				
LVDS_A_CK+	A81	LVDS Channel A differential clock	O LVDS		
LVDS_A_CK-	A82				
LVDS_B0+	B71	LVDS Channel B differential pairs	O LVDS		
LVDS_B0-	B72				
LVDS_B1+	B73				
LVDS_B1-	B74				
LVDS_B2+	B75				
LVDS_B2-	B76				
LVDS_B3+	B77				
LVDS_B3-	B78				
LVDS_B_CK+	B81	LVDS Channel B differential clock	O LVDS		
LVDS_B_CK-	B82				
LVDS_VDD_EN	A77	LVDS panel power enable	O 3.3V	PD 10K	
LVDS_BKLT_EN	B79	LVDS panel backlight enable	O 3.3V	PD 10K	
LVDS_BKLT_CTRL	B83	LVDS panel backlight brightness control	O 3.3V		
LVDS_I2C_CK	A83	DDC lines used for flat panel detection and control.	OD 3.3V	PU 2.2K 3.3V	
LVDS_I2C_DAT	A84	DDC lines used for flat panel detection and control.	I/OD 3.3V	PU 2.2K 3.3V	

Table 13 SPI BIOS Flash Interface Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
SPI_CS#	B97	Chip select for Carrier Board SPI BIOS Flash.	O 3.3VSB	PU 10K 3.3VSB	
SPI_MISO	A92	Data in to module from carrier board SPI BIOS flash.	I 3.3VSB	PD 50K	
SPI_MOSI	A95	Data out from module to carrier board SPI BIOS flash.	O 3.3VSB		
SPI_CLK	A94	Clock from module to carrier board SPI BIOS flash.	O 3.3VSB		
SPI_POWER	A91	Power source for carrier board SPI BIOS flash. SPI_POWER shall be used to power SPI BIOS flash on the carrier only.	P 3.3VSB		
BIOS_DIS0#	A34	Selection strap to determine the BIOS boot device.	I 3.3VSB	PU 10K 3.3VSB	Carrier shall pull to GND or left as no-connect.
BIOS_DIS1#	B88	Selection strap to determine the BIOS boot device.	I 3.3VSB	PU 10K 3.3VSB	Carrier shall pull to GND or left as no-connect

Table 14 Miscellaneous Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
I2C_CK	B33	General purpose I ² C port clock output/input	I/OD 3.3VSB	PU 2.2K 3.3VSB	
I2C_DAT	B34	General purpose I ² C port data I/O line	I/OD 3.3VSB	PU 2.2K 3.3VSB	
SPKR	B32	Output for audio enunciator, the “speaker” in PC-AT systems	O 3.3V	PD 10K	
WDT	B27	Output indicating that a watchdog time-out event has occurred.	O 3.3V	PD 10K	
FAN_PWMOUT	B101	Fan speed control. Uses the Pulse Width Modulation (PWM) technique to control the fan’s RPM.	O 3.3V/12V		Signal is driven to logic 1 only. External Pull down is required.
FAN_TACHIN	B102	Fan tachometer input.	I 3.3V/12V	PU 47K 3.3V	Requires a fan with two-pulse output.
TPM_PP	A96	Physical Presence pin of Trusted Platform Module (TPM). Active high. TPM chip has an internal pull-down. This signal is used to indicate Physical Presence to the TPM.	I 3.3V	PD 10K	Trusted Platform Module chip is optional.

**Note**

The congatec COM Express Type 6 and Type 10 modules use a Push-Pull output for the fan_pwm signal instead of the open drain output specified in the COM Express specification. Although this does not comply with the COM Express specification 2.0, the benefits are obvious. The Push-Pull output optimizes the power consumed by the fan_pwm signal without functional change.

Table 15 General Purpose I/O Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
GPO0	A93	General purpose output pins. Shared with SD_CLK. Output from COM Express, input to SD	O 3.3V		
GPO1	B54	General purpose output pins. Shared with SD_CMD. Output from COM Express, input to SD	O 3.3V		
GPO2	B57	General purpose output pins. Shared with SD_WP. Input to COM Express, output from SD	O 3.3V / I 3.3V	SD mode: PU 47K 3.3V	
GPO3	B63	General purpose output pins. Shared with SD_CD. Input to COM Express, output from SD	O 3.3V / I 3.3V	SD mode: PU 47K 3.3V	
GPI0	A54	General purpose input pins. Pulled high internally on the module. Shared with SD_DATA0. Bidirectional signal	I 3.3V	PU 10K 3.3V	
GPI1	A63	General purpose input pins. Pulled high internally on the module. Shared with SD_DATA1. Bidirectional signal	I 3.3V	PU 10K 3.3V	
GPI2	A67	General purpose input pins. Pulled high internally on the module. Shared with SD_DATA2. Bidirectional signal	I 3.3V	PU 10K 3.3V	
GPI3	A85	General purpose input pins. Pulled high internally on the module. Shared with SD_DATA3. Bidirectional signal.	I 3.3V	PU 10K 3.3V	

Table 16 Power and System Management Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
PWRBTN#	B12	Power button to bring system out of S5 (soft off), active on rising edge.	I 3.3VSB	PU 10K 3.3VSB	
SYS_RESET#	B49	Reset button input. Active low input. Edge triggered. System will not be held in hardware reset while this input is kept low.	I 3.3VSB	PU 10K 3.3VSB	
CB_RESET#	B50	Reset output from module to Carrier Board. Active low. Issued by module chipset and may result from a low SYS_RESET# input, a low PWR_OK input, a VCC_12V power input that falls below the minimum specification, a watchdog timeout, or may be initiated by the module software.	O 3.3V		
PWR_OK	B24	Power OK from main power supply. A high value indicates that the power is good.	I 3.3V	PU 10K 3.3V	
SUS_STAT#	B18	Indicates imminent suspend operation; used to notify LPC devices.	O 3.3VSB		
SUS_S3#	A15	Indicates system is in Suspend to RAM state. Active-low output. An inverted copy of SUS_S3# on the carrier board (also known as "PS_ON") may be used to enable the non-standby power on a typical ATX power supply.	O 3.3VSB		
SUS_S4#	A18	Indicates system is in Suspend to Disk state. Active low output.	O 3.3VSB		Not supported
SUS_S5#	A24	Indicates system is in Soft Off state.	O 3.3VSB		
WAKE0#	B66	PCI Express wake up signal.	I 3.3VSB	PU 10K 3.3VSB	
WAKE1#	B67	General purpose wake up signal. May be used to implement wake-up on PS/2 keyboard or mouse activity.	I 3.3VSB	PU 10K 3.3VSB	

Signal	Pin #	Description	I/O	PU/PD	Comment
BATLOW#	A27	Battery low input. This signal may be driven low by external circuitry to signal that the system battery is low, or may be used to signal some other external power-management event.	I 3.3VSB	PU 10K 3.3VSB	
THRM#	B35	Input from off-module temp sensor indicating an over-temp situation.	I 3.3V	PU 10k 3.3V	
THRMTRIP#	A35	Active low output indicating that the CPU has entered thermal shutdown.	O 3.3V	PU 10k 3.3V	Not supported
SMB_CK	B13	System Management Bus bidirectional clock line.	I/OD 3.3VSB	PU 2.2K 3.3VSB	
SMB_DAT#	B14	System Management Bus bidirectional data line.	I/OD 3.3VSB	PU 2.2K 3.3VSB	
SMB_ALERT#	B15	System Management Bus Alert – active low input can be used to generate an SMI# (System Management Interrupt) or to wake the system.	I 3.3VSB	PU 10K 3.3VSB	
LID#	A103	Lid button. Used by the ACPI operating system for a LID switch.	I 3.3V/12V	PU 47K 3.3VSB	
SLEEP	B103	Sleep button. Used by the ACPI operating system to bring the system to sleep state or to wake it up again.	I 3.3V/12V	PU 47K 3.3VSB	

Table 17 General Purpose Serial Interface Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
SER0_TX	A98	General purpose serial port transmitter	O 3.3V/12V		Signal is driven to logic 1 only. External PD is required.
SER1_TX	A101	General purpose serial port transmitter	O 3.3V/12V		Signal is driven to logic1 only. External PD is required.
SER0_RX	A99	General purpose serial port receiver	I 3.3V/12V	PU 47K 3.3V	
SER1_RX	A102	General purpose serial port receiver	I 3.3V/12V	PU 47K 3.3V	

Table 18 Power and GND Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
VCC_12V	A104-A109 B104-B109	Primary power input: +12V nominal. All available VCC_12V pins on the connector(s) shall be used.	P		
VCC_5V_SBY	B84-B87	Standby power input: +5.0V nominal. If VCC5_SBY is used, all available VCC_5V_SBY pins on the connector(s) shall be used. Only used for standby and suspend functions. May be left unconnected if these functions are not used in the system design.	P		
VCC_RTC	A47	Real-time clock circuit-power input. Nominally +3.0V.	P		
GND	A1, A11, A21, A31, A41, A51, A57, A60, A66, A70, A80, A90, A100, A110, B1, B11, B21, B31, B41, B51, B60, B70, B80, B90, B100, B110	Ground - DC power and signal and AC signal return path. All available GND connector pins shall be used and tied to Carrier Board GND plane.	P		

8.2 A-B Connector Pinout

Table 19 Connector A-B Pinout

Pin	Row A	Pin	Row B	Pin	Row A	Pin	Row B
A1	GND (FIXED)	B1	GND (FIXED)	A56	PCIE_TX4- (*)	B56	PCIE_RX4- (*)
A2	GBE0_MDI3-	B2	GBE0_ACT#	A57	GND	B57	GPO2
A3	GBE0_MDI3+	B3	LPC_FRAME#	A58	PCIE_TX3+	B58	PCIE_RX3+
A4	GBE0_LINK100#	B4	LPC_AD0	A59	PCIE_TX3-	B59	PCIE_RX3-
A5	GBE0_LINK1000#	B5	LPC_AD1	A60	GND (FIXED)	B60	GND (FIXED)
A6	GBE0_MDI2-	B6	LPC_AD2	A61	PCIE_TX2+	B61	PCIE_RX2+
A7	GBE0_MDI2+	B7	LPC_AD3	A62	PCIE_TX2-	B62	PCIE_RX2-
A8	GBE0_LINK#	B8	LPC_DRQ0#	A63	GPI1	B63	GPO3
A9	GBE0_MDI1-	B9	LPC_DRQ1# (*)	A64	PCIE_TX1+	B64	PCIE_RX1+
A10	GBE0_MDI1+	B10	LPC_CLK	A65	PCIE_TX1-	B65	PCIE_RX1-
A11	GND (FIXED)	B11	GND (FIXED)	A66	GND	B66	WAKE0#
A12	GBE0_MDI0-	B12	PWRBTN#	A67	GPI2	B67	WAKE1#
A13	GBE0_MDI0+	B13	SMB_CK	A68	PCIE_TX0+	B68	PCIE_RX0+
A14	GBE0_CTREF (*)	B14	SMB_DAT	A69	PCIE_TX0-	B69	PCIE_RX0-
A15	SUS_S3#	B15	SMB_ALERT#	A70	GND (FIXED)	B70	GND (FIXED)
A16	SATA0_TX+	B16	SATA1_TX+	A71	LVDS_A0+	B71	LVDS_B0+
A17	SATA0_TX-	B17	SATA1_TX-	A72	LVDS_A0-	B72	LVDS_B0-
A18	SUS_S4# (*)	B18	SUS_STAT#	A73	LVDS_A1+	B73	LVDS_B1+
A19	SATA0_RX+	B19	SATA1_RX+	A74	LVDS_A1-	B74	LVDS_B1-
A20	SATA0_RX-	B20	SATA1_RX-	A75	LVDS_A2+	B75	LVDS_B2+
A21	GND (FIXED)	B21	GND (FIXED)	A76	LVDS_A2-	B76	LVDS_B2-
A22	SATA2_TX+ (*)	B22	SATA3_TX+ (*)	A77	LVDS_VDD_EN	B77	LVDS_B3+
A23	SATA2_TX- (*)	B23	SATA3_TX- (*)	A78	LVDS_A3+	B78	LVDS_B3-
A24	SUS_S5#	B24	PWR_OK	A79	LVDS_A3-	B79	LVDS_BKLT_EN
A25	SATA2_RX+ (*)	B25	SATA3_RX+ (*)	A80	GND (FIXED)	B80	GND (FIXED)
A26	SATA2_RX- (*)	B26	SATA3_RX- (*)	A81	LVDS_A_CK+	B81	LVDS_B_CK+
A27	BATLOW#	B27	WDT	A82	LVDS_A_CK-	B82	LVDS_B_CK-
A28	(S)ATA_ACT#	B28	AC/HDA_SDIN2	A83	LVDS_I2C_CK	B83	LVDS_BKLT_CTRL
A29	AC/HDA_SYNC	B29	AC/HDA_SDIN1	A84	LVDS_I2C_DAT	B84	VCC_5V_SBY
A30	AC/HDA_RST#	B30	AC/HDA_SDIN0	A85	GPI3	B85	VCC_5V_SBY
A31	GND (FIXED)	B31	GND (FIXED)	A86	RSVD	B86	VCC_5V_SBY
A32	AC/HDA_BITCLK	B32	SPKR	A87	RSVD	B87	VCC_5V_SBY
A33	AC/HDA_SDOUT	B33	I2C_CK	A88	PCIE0_CK_REF+	B88	BIOS_DIS1#
A34	BIOS_DIS0#	B34	I2C_DAT	A89	PCIE0_CK_REF-	B89	VGA_RED
A35	THRMTRIP# (*)	B35	THRM#	A90	GND (FIXED)	B90	GND (FIXED)
A36	USB6-	B36	USB7-	A91	SPI_POWER	B91	VGA_GRN

Pin	Row A	Pin	Row B	Pin	Row A	Pin	Row B
A37	USB6+	B37	USB7+	A92	SPI_MISO	B92	VGA_BLU
A38	USB_6_7_OC#	B38	USB_4_5_OC#	A93	GPO0	B93	VGA_HSYNC
A39	USB4-	B39	USB5-	A94	SPI_CLK	B94	VGA_VSYNC
A40	USB4+	B40	USB5+	A95	SPI_MOSI	B95	VGA_I2C_CK
A41	GND (FIXED)	B41	GND (FIXED)	A96	TPM_PP	B96	VGA_I2C_DAT
A42	USB2-	B42	USB3-	A97	TYPE10#	B97	SPI_CS#
A43	USB2+	B43	USB3+	A98	SER0_TX	B98	RSVD
A44	USB_2_3_OC#	B44	USB_0_1_OC#	A99	SER0_RX	B99	RSVD
A45	USB0-	B45	USB1-	A100	GND (FIXED)	B100	GND (FIXED)
A46	USB0+	B46	USB1+	A101	SER1_TX	B101	FAN_PWMOUT
A47	VCC_RTC	B47	EXCD1_PERST#	A102	SER1_RX	B102	FAN_TACHIN
A48	EXCD0_PERST#	B48	EXCD1_CPPE#	A103	LID#	B103	SLEEP#
A49	EXCD0_CPPE#	B49	SYS_RESET#	A104	VCC_12V	B104	VCC_12V
A50	LPC_SERIRQ	B50	CB_RESET#	A105	VCC_12V	B105	VCC_12V
A51	GND (FIXED)	B51	GND (FIXED)	A106	VCC_12V	B106	VCC_12V
A52	PCIE_TX5+ (*)	B52	PCIE_RX5+ (*)	A107	VCC_12V	B107	VCC_12V
A53	PCIE_TX5- (*)	B53	PCIE_RX5- (*)	A108	VCC_12V	B108	VCC_12V
A54	GPIO	B54	GPO1	A109	VCC_12V	B109	VCC_12V
A55	PCIE_TX4+ (*)	B55	PCIE_RX4+ (*)	A110	GND (FIXED)	B110	GND (FIXED)

Note

The signals marked with an asterisk symbol () are not supported on the conga-TCG.*

8.3 C-D Connector Signal Descriptions

Table 20 PCI Express Signal Descriptions (general purpose)

Signal	Pin #	Description	I/O	PU/PD	Comment
PCIE_RX6+ PCIE_RX6-	C19 C20	PCI Express channel 6, Receive Input differential pair.	I PCIE		Not connected
PCIE_TX6+ PCIE_TX6-	D19 D20	PCI Express channel 6, Transmit Output differential pair.	O PCIE		Not connected
PCIE_RX7+ PCIE_RX7-	C22 C23	PCI Express channel 7, Receive Input differential pair.	I PCIE		Not connected
PCIE_TX7+ PCIE_TX7-	D22 D23	PCI Express channel 7, Transmit Output differential pair.	O PCIE		Not connected

Table 21 USB SuperSpeed Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
USB_SSRX0+	C4	Additional receive signal differential pairs for the Superspeed USB data path	I		
USB_SSRX0-	C3		I		
USB_SSTX0+	D4	Additional transmit signal differential pairs for the Superspeed USB data path	O		
USB_SSTX0-	D3		O		
USB_SSRX1+	C7	Additional receive signal differential pairs for the Superspeed USB data path	I		
USB_SSRX1-	C6		I		
USB_SSTX1+	D7	Additional transmit signal differential pairs for the Superspeed USB data path	O		
USB_SSTX1-	D6		O		
USB_SSRX2+	C10	Additional receive signal differential pairs for the Superspeed USB data path	I		Not connected
USB_SSRX2-	C9		I		Not connected
USB_SSTX2+	D10	Additional transmit signal differential pairs for the Superspeed USB data path	O		Not connected
USB_SSTX2-	D9		O		Not connected
USB_SSRX3+	C13	Additional receive signal differential pairs for the Superspeed USB data path	I		Not connected
USB_SSRX3-	C12		I		Not connected
USB_SSTX3+	D13	Additional transmit signal differential pairs for the Superspeed USB data path	O		Not connected
USB_SSTX3-	D12		O		Not connected

Table 22 PCI Express Signal Descriptions (x16 Graphics)

Signal	Pin #	Description	I/O	PU/PD	Comment
PEG_RX0+	C52	PCI Express Graphics Receive Input differential pairs.	I PCIE		Not connected.
PEG_RX0-	C53				
PEG_RX1+	C55				
PEG_RX1-	C56				
PEG_RX2+	C58				
PEG_RX2-	C59				
PEG_RX3+	C61				
PEG_RX3-	C62				
PEG_RX4+	C65				
PEG_RX4-	C66				
PEG_RX5+	C68				
PEG_RX5-	C69				
PEG_RX6+	C71				
PEG_RX6-	C72				
PEG_RX7+	C74				
PEG_RX7-	C75				
PEG_RX8+	C78				
PEG_RX8-	C79				
PEG_RX9+	C81				
PEG_RX9-	C82				
PEG_RX10+	C85				
PEG_RX10-	C86				
PEG_RX11+	C88				
PEG_RX11-	C89				
PEG_RX12+	C91				
PEG_RX12-	C92				
PEG_RX13+	C94				
PEG_RX13-	C95				
PEG_RX14+	C98				
PEG_RX14-	C99				
PEG_RX15+	C101				
PEG_RX15-	C102				

Signal	Pin #	Description	I/O	PU/PD	Comment
PEG_TX0+	D52	PCI Express Graphics Transmit Output differential pairs.	O PCIE		Not connected.
PEG_TX0-	D53				
PEG_TX1+	D55				
PEG_TX1-	D56				
PEG_TX2+	D58				
PEG_TX2-	D59				
PEG_TX3+	D61				
PEG_TX3-	D62				
PEG_TX4+	D65				
PEG_TX4-	D66				
PEG_TX5+	D68				
PEG_TX5-	D69				
PEG_TX6+	D71				
PEG_TX6-	D72				
PEG_TX7+	D74				
PEG_TX7-	D75				
PEG_TX8+	D78				
PEG_TX8-	D79				
PEG_TX9+	D81				
PEG_TX9-	D82				
PEG_TX10+	D85				
PEG_TX10-	D86				
PEG_TX11+	D88				
PEG_TX11-	D89				
PEG_TX12+	D91				
PEG_TX12-	D92				
PEG_TX13+	D94				
PEG_TX13-	D95				
PEG_TX14+	D98				
PEG_TX14-	D99				
PEG_TX15+	D101				
PEG_TX15-	D102				
PEG_LANE_RV#	D54	PCI Express Graphics lane reversal input strap. Pull low on the carrier board to reverse lane order.	I		Not connected.

Note

conga-TCG does not support PCI Express Graphics (PEG).

Table 23 DDI Signal Description

Signal	Pin #	Description	I/O	PU/PD	Comment
DDI1_PAIR0+	D26	Multiplexed with SDVO1_RED+, DP1_LANE0+ and TMDS1_DATA2+.	O PCIE		
DDI1_PAIR0-	D27	Multiplexed with SDVO1_RED-, DP1_LANE0- and TMDS1_DATA2-.			
DDI1_PAIR1+	D29	Multiplexed with SDVO1_GRN+, DP1_LANE1+ and TMDS1_DATA1+.	O PCIE		
DDI1_PAIR1-	D30	Multiplexed with SDVO1_GRN-, DP1_LANE1- and TMDS1_DATA1-.			
DDI1_PAIR2+	D32	Multiplexed with SDVO1_BLU+, DP1_LANE2+ and TMDS1_DATA0+.	O PCIE		
DDI1_PAIR2-	D33	Multiplexed with SDVO1_BLU-, DP1_LANE2- and TMDS1_DATA0-.			
DDI1_PAIR3+	D36	Multiplexed with SDVO1_CK+, DP1_LANE3+ and TMDS1_CLK+.	O PCIE		
DDI1_PAIR3-	D37	Multiplexed with SDVO1_CK-, DP1_LANE3- and TMDS1_CLK-.			
DDI1_PAIR4+	C25	Multiplexed with SDVO1_INT+.			Not connected
DDI1_PAIR4-	C26	Multiplexed with SDVO1_INT-.			
DDI1_PAIR5+	C29	Multiplexed with SDVO1_TVCLKIN+.			Not connected
DDI1_PAIR5-	C30	Multiplexed with SDVO1_TVCLKIN-.			
DDI1_PAIR6+	C15	Multiplexed with SDVO1_FLDSTALL+.			Not connected
DDI1_PAIR6-	C16	Multiplexed with SDVO1_FLDSTALL-.			
DDI1_HPD	C24	Multiplexed with DP1_HPD and HDMI1_HPD.	I 3.3V	PD 100K	
DDI1_CTRLCLK_AUX+	D15	Multiplexed with SDVO1_CTRLCLK, DP1_AUX+ and HDMI1_CTRLCLK. DP AUX+ function if DDI1_DDC_AUX_SEL is no connect. HDMI/DVI I2C CTRLCLK if DDI1_DDC_AUX_SEL is pulled high	I/O PCIE OD 3.3V	PD100K	
DDI1_CTRLDATA_AUX-	D16	Multiplexed with SDVO1_CTRLDATA, DP1_AUX- and HDMI1_CTRLDATA. DP AUX- function if DDI1_DDC_AUX_SEL is no connect. HDMI/DVI I2C CTRLDATA if DDI1_DDC_AUX_SEL is pulled high	I/O PCIE I/OD 3.3V	PU 100K 3.3V	
DDI1_DDC_AUX_SEL	D34	Selects the function of DDI1_CTRLCLK_AUX+ and DDI1_CTRLDATA_AUX-. This pin shall have a 1M pull-down to logic ground on the module. If this input is floating, the AUX pair is used for the DP AUX+/- signals. If pulled-high, the AUX pair contains the CTRLCLK and CTRLDATA signals.	I 3.3V	PD 1M	
DDI2_PAIR0+	D39	Multiplexed with DP2_LANE0+ and TMDS2_DATA2+.	O PCIE		Not supported by default assembly variants.
DDI2_PAIR0-	D40	Multiplexed with DP2_LANE0- and TMDS2_DATA2-.			
DDI2_PAIR1+	D42	Multiplexed with DP2_LANE1+ and TMDS2_DATA1+.	O PCIE		Not supported by default assembly variants.
DDI2_PAIR1-	D43	Multiplexed with DP2_LANE1- and TMDS2_DATA1-.			
DDI2_PAIR2+	D46	Multiplexed with DP2_LANE2+ and TMDS2_DATA0+.	O PCIE		Not supported by default assembly variants.
DDI2_PAIR2-	D47	Multiplexed with DP2_LANE2- and TMDS2_DATA0-.			
DDI2_PAIR3+	D49	Multiplexed with DP2_LANE3+ and TMDS2_CLK+.	O PCIE		Not supported by default assembly variants.
DDI2_PAIR3-	D50	Multiplexed with DP2_LANE3- and TMDS2_CLK-.			
DDI2_HPD	D44	Multiplexed with DP2_HPD and HDMI2_HPD.	I 3.3V	PD 100K	Not supported by default assembly variants.
DDI2_CTRLCLK_AUX+	C32	Multiplexed with DP2_AUX+ and HDMI2_CTRLCLK. DP AUX+ function if DDI2_DDC_AUX_SEL is no connect. HDMI/DVI I2C CTRLCLK if DDI2_DDC_AUX_SEL is pulled high	I/O PCIE OD 3.3V	PD 100K	Not supported by default assembly variants.
DDI2_CTRLDATA_AUX-	C33	Multiplexed with DP2_AUX- and HDMI2_CTRLDATA. DP AUX- function if DDI2_DDC_AUX_SEL is no connect. HDMI/DVI I2C CTRLDATA if DDI2_DDC_AUX_SEL is pulled high.	I/O PCIE I/OD 3.3V	PU 100K 3.3V	Not supported by default assembly variants.

Signal	Pin #	Description	I/O	PU/PD	Comment
DDI2_DDC_AUX_SEL	C34	Selects the function of DDI2_CTRLCLK_AUX+ and DDI2_CTRLDATA_AUX-. This pin shall have a 1M pull-down to logic ground on the module. If this input is floating, the AUX pair is used for the DP AUX+/- signals. If pulled-high, the AUX pair contains the CTRLCLK and CTRLDATA signals	I 3.3V	PD 1M	Not supported by default assembly variants.
DDI3_PAIR0+	C39	Multiplexed with DP3_LANE0+ and TMDS3_DATA2+.	O PCIE		Not connected
DDI3_PAIR0-	C40	Multiplexed with DP3_LANE0- and TMDS3_DATA2-.			
DDI3_PAIR1+	C42	Multiplexed with DP3_LANE1+ and TMDS3_DATA1+.	O PCIE		Not connected
DDI3_PAIR1-	C43	Multiplexed with DP3_LANE1- and TMDS3_DATA1-.			
DDI3_PAIR2+	C46	Multiplexed with DP3_LANE2+ and TMDS3_DATA0+.	O PCIE		Not connected
DDI3_PAIR2-	C47	Multiplexed with DP3_LANE2- and TMDS3_DATA0-.			
DDI3_PAIR3+	C49	Multiplexed with DP3_LANE3+ and TMDS3_CLK+.	O PCIE		Not connected
DDI3_PAIR3-	C50	Multiplexed with DP3_LANE3- and TMDS3_CLK-.			
DDI3_HPD	C44	Multiplexed with DP3_HPD and HDMI3_HPD.	I 3.3V	PD 100K	Not connected
DDI3_CTRLCLK_AUX+	C36	Multiplexed with DP3_AUX+ and HDMI3_CTRLCLK. DP AUX+ function if DDI3_DDC_AUX_SEL is no connect. HDMI/DVI I2C CTRLCLK if DDI3_DDC_AUX_SEL is pulled high	I/O PCIE OD 3.3V	PD 100k	Not connected
DDI3_CTRLDATA_AUX-	C37	Multiplexed with DP3_AUX- and HDMI3_CTRLDATA. DP AUX- function if DDI3_DDC_AUX_SEL is no connect. HDMI/DVI I2C CTRLDATA if DDI3_DDC_AUX_SEL is pulled high.	I/O PCIE I/OD 3.3V	PU 100k	Not connected
DDI3_DDC_AUX_SEL	C38	Selects the function of DDI3_CTRLCLK_AUX+ and DDI3_CTRLDATA_AUX-. This pin shall have a 1M pull-down to logic ground on the module. If this input is floating, the AUX pair is used for the DP AUX+/- signals. If pulled-high, the AUX pair contains the CTRLCLK and CTRLDATA signals	I 3.3V	PD 1M	Not connected



The conga-TCG supports one DDI interface on the COM Express CD connector. This interface supports only dual-mode DisplayPort 1.2 on the connector. To support HDMI/DVI, an external level shifter e.g. PTN3360D should be implemented on the user's carrier board.

For supported display combinations, refer to section 5.2.3 "Digital Display Interface (DDI)".

Table 24 SDVO Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
SDVO1_RED+ SDVO1_RED-	D26 D27	Serial Digital Video red output differential pair. Multiplexed with DDI1_PAIR0+ and DDI1_PAIR0- pair.	O PCIE		Not supported
SDVO1_GRN+ SDVO1_GRN-	D29 D30	Serial Digital Video green output differential pair. Multiplexed with DDI1_PAIR1+ and DDI1_PAIR1-.	O PCIE		Not supported
SDVO1_BLU+ SDVO1_BLU-	D32 D33	Serial Digital Video blue output differential pair. Multiplexed with DDI1_PAIR2+ and DDI1_PAIR2-.	O PCIE		Not supported
SDVO1_CK+ SDVO1_CK-	D36 D37	Serial Digital Video clock output differential pair. Multiplexed with DDI1_PAIR3+ and DDI1_PAIR3-.	O PCIE		Not supported
SDVO1_INT+ SDVO1_INT-	C25 C26	Serial Digital Video Interrupt input differential pair. Multiplexed with DDI1_PAIR4+ and DDI1_PAIR4-.	I PCIE		Not supported
SDVO1_TVCLKIN+ SDVO1_TVCLKIN-	C29 C30	Serial Digital Video TVOUT synchronization clock pair. Multiplexed with DDI1_PAIR5+ and DDI1_PAIR5-.	I PCIE		Not supported
SDVO1_FLDSTALL+ SDVO1_FLDSTALL-	C15 C16	Serial Digital Video Field Stall input differential pair. Multiplexed with DDI1_PAIR6+ and DDI1_PAIR6-.	I PCIE		Not supported
SDVO1_CTRLCLK	D15	SDVO I ² C clock line - to set up SDVO peripherals. Multiplexed with DDI1_CTRLCLK_AUX+.	I/O OD 3.3V		Not supported
SDVO1_CTRLDATA	D16	SDVO I ² C data line - to set up SDVO peripherals. Multiplexed with DDI1_CTRLDATA_AUX-.	I/O OD 3.3V		Not supported



SDVO is not supported on the conga-TCG.

Table 25 HDMI/DVI Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
TMDS1_CLK + TMDS1_CLK -	D36 D37	HDMI/DVI TMDS Clock output differential pair. Multiplexed with DDI1_PAIR3+ and DDI1_PAIR3-.	O PCIE		Not supported
TMDS1_DATA0+ TMDS1_DATA0-	D32 D33	HDMI/DVI TMDS differential pair. Multiplexed with DDI1_PAIR2+ and DDI1_PAIR2-.	O PCIE		Not supported
TMDS1_DATA1+ TMDS1_DATA1-	D29 D30	HDMI/DVI TMDS differential pair. Multiplexed with DDI1_PAIR1+ and DDI1_PAIR1-.	O PCIE		Not supported
TMDS1_DATA2+ TMDS1_DATA2-	D26 D27	HDMI/DVI TMDS differential pair. Multiplexed with DDI1_PAIR0+ and DDI1_PAIR0-.	O PCIE		Not supported
HDMI1_HPD	C24	HDMI/DVI Hot-plug detect. Multiplexed with DDI1_HPD.	I PCIE	PD 100K	Not supported
HDMI1_CTRLCLK	D15	HDMI/DVI I ² C Control Clock Multiplexed with DDI1_CTRLCLK_AUX+	OD 3.3V	PD 100K	Not supported
HDMI1_CTRLDATA	D16	HDMI/DVI I ² C Control Data Multiplexed with DDI1_CTRLDATA_AUX-	I/OD 3.3V	PU 100K 3.3V	Not supported
TMDS2_CLK + TMDS2_CLK -	D49 D50	HDMI/DVI TMDS Clock output differential pair.. Multiplexed with DDI2_PAIR3+ and DDI2_PAIR3-.	O PCIE		Not Supported
TMDS2_DATA0+ TMDS2_DATA0-	D46 D47	HDMI/DVI TMDS differential pair. Multiplexed with DDI2_PAIR2+ and DDI2_PAIR2-.	O PCIE		Not Supported
TMDS2_DATA1+ TMDS2_DATA1-	D42 D43	HDMI/DVI TMDS differential pair. Multiplexed with DDI2_PAIR1+ and DDI2_PAIR1-.	O PCIE		Not Supported
TMDS2_DATA2+ TMDS2_DATA2-	D39 D40	HDMI/DVI TMDS differential pair. Multiplexed with DDI2_PAIR0+ and DDI2_PAIR0-.	O PCIE		Not Supported
HDMI2_HPD	D44	HDMI/DVI Hot-plug detect. Multiplexed with DDI2_HPD	I PCIE	PD 100K	Not Supported
HDMI2_CTRLCLK	C32	HDMI/DVI I ² C Control Clock Multiplexed with DDI2_CTRLCLK_AUX+	OD 3.3V	PD 100K	Not Supported
HDMI2_CTRLDATA	C33	HDMI/DVI I ² C Control Data Multiplexed with DDI2_CTRLDATA_AUX-	I/OD 3.3V	PU 100K 3.3V	Not Supported
TMDS3_CLK + TMDS3_CLK -	C49 C50	HDMI/DVI TMDS Clock output differential pair.. Multiplexed with DDI3_PAIR3+ and DDI3_PAIR3-.	O PCIE		Not Supported
TMDS3_DATA0+ TMDS3_DATA0-	C46 C47	HDMI/DVI TMDS differential pair. Multiplexed with DDI3_PAIR2+ and DDI3_PAIR2-.	O PCIE		Not Supported
TMDS3_DATA1+ TMDS3_DATA1-	C42 C43	HDMI/DVI TMDS differential pair. Multiplexed with DDI3_PAIR1+ and DDI3_PAIR1-.	O PCIE		Not Supported
TMDS3_DATA2+ TMDS3_DATA2-	C39 C40	HDMI/DVI TMDS differential pair. Multiplexed with DDI3_PAIR0+ and DDI3_PAIR0-.	O PCIE		Not Supported
HDMI3_HPD	C44	HDMI/DVI Hot-plug detect. Multiplexed with DDI3_HPD.	I PCIE	PD 100K	Not Supported
HDMI3_CTRLCLK	C36	HDMI/DVI I ² C Control Clock Multiplexed with DDI3_CTRLCLK_AUX+	OD 3.3V	PD 100K	Not Supported

Signal	Pin #	Description	I/O	PU/PD	Comment
HDMI3_CTRLDATA	C37	HDMI/DVI I ² C Control Data Multiplexed with DDI3_CTRLDATA_AUX-	I/OD 3.3V	PU 100K 3.3V	Not Supported



The conga-TCG supports one DDI interface on the COM Express CD connector. This interface supports only dual-mode DisplayPort 1.2 on the connector. To support HDMI/DVI, an external level shifter e.g PTN3360D should be implemented on the user's carrier board.

Table 26 DisplayPort (DP) Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
DP1_LANE3+ DP1_LANE3-	D36 D37	Uni-directional main link for the transport of isochronous streams and secondary data. Multiplexed with DDI1_PAIR3+ and DDI1_PAIR3-.	O PCIE		
DP1_LANE2+ DP1_LANE2-	D32 D33	Uni-directional main link for the transport of isochronous streams and secondary data. Multiplexed with DDI1_PAIR2+ and DDI1_PAIR2-.	O PCIE		
DP1_LANE1+ DP1_LANE1-	D29 D30	Uni-directional main link for the transport of isochronous streams and secondary data. Multiplexed with DDI1_PAIR1+ and DDI1_PAIR1-.	O PCIE		
DP1_LANE0+ DP1_LANE0-	D26 D27	Uni-directional main link for the transport of isochronous streams and secondary data. Multiplexed with DDI1_PAIR0+ and DDI1_PAIR0-.	O PCIE		
DP1_HPD	C24	Detection of Hot Plug / Unplug and notification of the link layer. Multiplexed with DDI1_HPD.	I 3.3V	PD 100K	
DP1_AUX+	D15	Half-duplex bi-directional AUX channel for services such as link configuration or maintenance and EDID access.	I/O PCIE	PD 100K	
DP1_AUX-	D16	Half-duplex bi-directional AUX channel for services such as link configuration or maintenance and EDID access.	I/O PCIE	PU 100K 3.3V	
DP2_LANE3+ DP2_LANE3-	D49 D50	Uni-directional main link for the transport of isochronous streams and secondary data. Multiplexed with DDI2_PAIR3+ and DDI2_PAIR3-	O PCIE		Not supported by default assembly variants.
DP2_LANE2+ DP2_LANE2-	D46 D47	Uni-directional main link for the transport of isochronous streams and secondary data. Multiplexed with DDI2_PAIR2+ and DDI2_PAIR2-	O PCIE		Not supported by default assembly variants.
DP2_LANE1+ DP2_LANE1-	D42 D43	Uni-directional main link for the transport of isochronous streams and secondary data. Multiplexed with DDI2_PAIR1+ and DDI2_PAIR1-	O PCIE		Not supported by default assembly variants.

Signal	Pin #	Description	I/O	PU/PD	Comment
DP2_LANE0+ DP2_LANE0-	D39 D40	Uni-directional main link for the transport of isochronous streams and secondary data. Multiplexed with DDI2_PAIR0+ and DDI1_PAIR0-	O PCIE		Not supported by default assembly variants.
DP2_HPD	D44	Detection of Hot Plug / Unplug and notification of the link layer. Multiplexed with DDI2_HPD.	I 3.3V	PD 100K	Not supported by default assembly variants.
DP2_AUX+	C32	Half-duplex bi-directional AUX channel for services such as link configuration or maintenance and EDID access.	I/O PCIE	PD 100K	Not supported by default assembly variants.
DP2_AUX-	C33	Half-duplex bi-directional AUX channel for services such as link configuration or maintenance and EDID access.	I/O PCIE	PU 100K 3.3V	Not supported by default assembly variants.
DP3_LANE3+ DP3_LANE3-	C49 C50	Uni-directional main link for the transport of isochronous streams and secondary data. Multiplexed with DDI3_PAIR3+ and DDI3_PAIR3-.	O PCIE		Not connected
DP3_LANE2+ DP3_LANE2-	C46 C47	Uni-directional main link for the transport of isochronous streams and secondary data. Multiplexed with DDI3_PAIR2+ and DDI3_PAIR2-.	O PCIE		Not connected
DP3_LANE1+ DP3_LANE1-	C42 C43	Uni-directional main link for the transport of isochronous streams and secondary data. Multiplexed with DDI3_PAIR1+ and DDI3_PAIR1-.	O PCIE		Not connected
DP3_LANE0+ DP3_LANE0-	C39 C40	Uni-directional main link for the transport of isochronous streams and secondary data. Multiplexed with DDI3_PAIR0+ and DDI3_PAIR0-.	O PCIE		Not connected
DP3_HPD	C44	Detection of Hot Plug / Unplug and notification of the link layer. Multiplexed with DDI3_HPD.	I 3.3V	PD 100K	Not connected
DP3_AUX+	C36	Half-duplex bi-directional AUX channel for services such as link configuration or maintenance and EDID access.	I/O PCIE	PD 100k	Not connected
DP3_AUX-	C37	Half-duplex bi-directional AUX channel for services such as link configuration or maintenance and EDID access.	I/O PCIE	PU 100k 3.3V	Not connected



The conga-TCG supports one DDI interface on the COM Express CD connector. This interface supports only dual-mode DisplayPort 1.2 on the connector. To support HDMI/DVI, an external level shifter e.g PTN3360D should be implemented on the user's carrier board.

Table 27 Module Type Definition Signal Description

Signal	Pin #	Description				I/O	Comment
TYPE0#	C54	The TYPE pins indicate to the Carrier Board the Pin-out Type that is implemented on the module. The pins are tied on the module to either ground (GND) or are no-connects (NC). For Pinout Type 1, these pins are don't care (X).				PDS	TYPE[0:2]# signals are available on all modules following the Type 2-6 Pinout standard. The conga-TCG is based on the COM Express Type 6 pinout therefore the pins 0 and 1 are not connected and pin 2 is connected to GND.
TYPE1#	C57						
TYPE2#	D57	TYPE2#	TYPE1#	TYPE0#			
		X	X	X	Pinout Type 1		
		NC	NC	NC	Pinout Type 2		
		NC	NC	GND	Pinout Type 3 (no IDE)		
		NC	GND	NC	Pinout Type 4 (no PCI)		
		NC	GND	GND	Pinout Type 5 (no IDE, no PCI)		
		GND	NC	NC	Pinout Type 6 (no IDE, no PCI)		
		The Carrier Board should implement combinatorial logic that monitors the module TYPE pins and keeps power off (e.g deactivates the ATX_ON signal for an ATX power supply) if an incompatible module pin-out type is detected. The Carrier Board logic may also implement a fault indicator such as an LED.					
TYPE10#	A97	Dual use pin. Indicates to the carrier board that a Type 10 module is installed. Indicates to the carrier that a Rev. 1.0/2.0 module is installed.				PDS	Not connected to indicate "Pinout R2.0".
		TYPE10#					
		NC PD 12V		Pinout R2.0 Pinout Type 10 pull down to ground with 4.7k resistor Pinout R1.0			
		This pin is reclaimed from VCC_12V pool. In R1.0 modules this pin will connect to other VCC_12V pins. In R2.0 this pin is defined as a no-connect for Types 1-6. A carrier can detect a R1.0 module by the presence of 12V on this pin. R2.0 module Types 1-6 will no-connect this pin. Type 10 modules shall pull this pin to ground through a 4.7k resistor.					

Table 28 Power and GND Signal Descriptions

Signal	Pin #	Description	I/O	PU/PD	Comment
VCC_12V	C104-C109 D104-D109	Primary power input: +12V nominal. All available VCC_12V pins on the connector(s) shall be used.	P		
GND	C1, C2, C5, C8, C11, C14, C21, C31, C41, C51, C60, C70, C73, C76, C80, C84, C87, C90, C93, C96, C100, C103, C110, D1, D2, D5, D8, D11, D14, D21, D31, D41, D51, D60, D67, D70, D73, D76, D80, D84, D87, D90, D93, D96, D100, D103, D110	Ground - DC power and signal and AC signal return path. All available GND connector pins shall be used and tied to carrier board GND plane.	P		

8.4 C-D Connector Pinout

Table 29 Connector C-D Pinout

Pin	Row C	Pin	Row D	Pin	Row C	Pin	Row D
C1	GND (FIXED)	D1	GND (FIXED)	C56	PEG_RX1- (*)	D56	PEG_TX1- (*)
C2	GND	D2	GND	C57	TYPE1#	D57	TYPE2#
C3	USB_SSRX0-	D3	USB_SSTX0-	C58	PEG_RX2+ (*)	D58	PEG_TX2+ (*)
C4	USB_SSRX0+	D4	USB_SSTX0+	C59	PEG_RX2- (*)	D59	PEG_TX2- (*)
C5	GND	D5	GND	C60	GND (FIXED)	D60	GND (FIXED)
C6	USB_SSRX1-	D6	USB_SSTX1-	C61	PEG_RX3+ (*)	D61	PEG_TX3+ (*)
C7	USB_SSRX1+	D7	USB_SSTX1+	C62	PEG_RX3- (*)	D62	PEG_TX3- (*)
C8	GND	D8	GND	C63	RSVD	D63	RSVD
C9	USB_SSRX2- (*)	D9	USB_SSTX2- (*)	C64	RSVD	D64	RSVD
C10	USB_SSRX2+ (*)	D10	USB_SSTX2+ (*)	C65	PEG_RX4+ (*)	D65	PEG_TX4+ (*)
C11	GND (FIXED)	D11	GND (FIXED)	C66	PEG_RX4- (*)	D66	PEG_TX4- (*)
C12	USB_SSRX3- (*)	D12	USB_SSTX3- (*)	C67	RSVD	D67	GND
C13	USB_SSRX3+ (*)	D13	USB_SSTX3+ (*)	C68	PEG_RX5+ (*)	D68	PEG_TX5+ (*)
C14	GND	D14	GND	C69	PEG_RX5- (*)	D69	PEG_TX5- (*)
C15	DDI1_PAIR6+ (*)	D15	DDI1_CTRLCLK_AUX+	C70	GND (FIXED)	D70	GND (FIXED)
C16	DDI1_PAIR6- (*)	D16	DDI1_CTRLDATA_AUX-	C71	PEG_RX6+ (*)	D71	PEG_TX6+ (*)
C17	RSVD	D17	RSVD	C72	PEG_RX6- (*)	D72	PEG_TX6- (*)
C18	RSVD	D18	RSVD	C73	GND	D73	GND
C19	PCIE_RX6+ (*)	D19	PCIE_TX6+ (*)	C74	PEG_RX7+ (*)	D74	PEG_TX7+ (*)
C20	PCIE_RX6- (*)	D20	PCIE_TX6- (*)	C75	PEG_RX7- (*)	D75	PEG_TX7- (*)
C21	GND (FIXED)	D21	GND (FIXED)	C76	GND	D76	GND
C22	PCIE_RX7+ (*)	D22	PCIE_TX7+ (*)	C77	RSVD	D77	RSVD
C23	PCIE_RX7- (*)	D23	PCIE_TX7- (*)	C78	PEG_RX8+ (*)	D78	PEG_TX8+ (*)
C24	DDI1_HPDP	D24	RSVD	C79	PEG_RX8- (*)	D79	PEG_TX8- (*)
C25	DDI1_PAIR4+ (*)	D25	RSVD	C80	GND (FIXED)	D80	GND (FIXED)
C26	DDI1_PAIR4- (*)	D26	DDI1_PAIR0+	C81	PEG_RX9+ (*)	D81	PEG_TX9+ (*)
C27	RSVD	D27	DDI1_PAIR0-	C82	PEG_RX9- (*)	D82	PEG_TX9- (*)
C28	RSVD	D28	RSVD	C83	RSVD	D83	RSVD
C29	DDI1_PAIR5+ (*)	D29	DDI1_PAIR1+	C84	GND	D84	GND
C30	DDI1_PAIR5- (*)	D30	DDI1_PAIR1-	C85	PEG_RX10+ (*)	D85	PEG_TX10+ (*)
C31	GND (FIXED)	D31	GND (FIXED)	C86	PEG_RX10- (*)	D86	PEG_TX10- (*)
C32	DDI2_CTRLCLK_AUX+ (*)	D32	DDI1_PAIR2+	C87	GND	D87	GND
C33	DDI2_CTRLDATA_AUX- (*)	D33	DDI1_PAIR2-	C88	PEG_RX11+ (*)	D88	PEG_TX11+ (*)
C34	DDI2_DDC_AUX_SEL (*)	D34	DDI1_DDC_AUX_SEL	C89	PEG_RX11- (*)	D89	PEG_TX11- (*)
C35	RSVD	D35	RSVD	C90	GND (FIXED)	D90	GND (FIXED)
C36	DDI3_CTRLCLK_AUX+ (*)	D36	DDI1_PAIR3+	C91	PEG_RX12+ (*)	D91	PEG_TX12+ (*)

Pin	Row C	Pin	Row D	Pin	Row C	Pin	Row D
C37	DDI3_CTRLDATA_AUX- (*)	D37	DDI1_PAIR3-	C92	PEG_RX12- (*)	D92	PEG_TX12- (*)
C38	DDI3_DDC_AUX_SEL (*)	D38	RSVD	C93	GND	D93	GND
C39	DDI3_PAIR0+ (*)	D39	DDI2_PAIR0+ (*)	C94	PEG_RX13+ (*)	D94	PEG_TX13+ (*)
C40	DDI3_PAIR0- (*)	D40	DDI2_PAIR0- (*)	C95	PEG_RX13- (*)	D95	PEG_TX13- (*)
C41	GND (FIXED)	D41	GND (FIXED)	C96	GND	D96	GND
C42	DDI3_PAIR1+ (*)	D42	DDI2_PAIR1+ (*)	C97	RVSD	D97	RSVD
C43	DDI3_PAIR1- (*)	D43	DDI2_PAIR1- (*)	C98	PEG_RX14+ (*)	D98	PEG_TX14+ (*)
C44	DDI3_HPD (*)	D44	DDI2_HPD (*)	C99	PEG_RX14- (*)	D99	PEG_TX14- (*)
C45	RSVD	D45	RSVD	C100	GND (FIXED)	D100	GND (FIXED)
C46	DDI3_PAIR2+ (*)	D46	DDI2_PAIR2+ (*)	C101	PEG_RX15+ (*)	D101	PEG_TX15+ (*)
C47	DDI3_PAIR2- (*)	D47	DDI2_PAIR2- (*)	C102	PEG_RX15- (*)	D102	PEG_TX15- (*)
C48	RSVD	D48	RSVD	C103	GND	D103	GND
C49	DDI3_PAIR3+ (*)	D49	DDI2_PAIR3+ (*)	C104	VCC_12V	D104	VCC_12V
C50	DDI3_PAIR3- (*)	D50	DDI2_PAIR3- (*)	C105	VCC_12V	D105	VCC_12V
C51	GND (FIXED)	D51	GND (FIXED)	C106	VCC_12V	D106	VCC_12V
C52	PEG_RX0+ (*)	D52	PEG_TX0+ (*)	C107	VCC_12V	D107	VCC_12V
C53	PEG_RX0- (*)	D53	PEG_TX0- (*)	C108	VCC_12V	D108	VCC_12V
C54	TYPE0#	D54	PEG_LANE_RV# (*)	C109	VCC_12V	D109	VCC_12V
C55	PEG_RX1+ (*)	D55	PEG_TX1+ (*)	C110	GND (FIXED)	D110	GND (FIXED)



The signals marked with an asterisk symbol () are not supported on the conga-TCG.*

8.5 Boot Strap Signals

Table 30 Boot Strap Signal Descriptions

Signal	Pin #	Description of Boot Strap Signal	I/O	PU/PD	Comment
LPC_FRAME#	B3	LPC frame indicates the start of an LPC cycle	O 3.3V	PU 10K 3.3V	
LPC_CLK	B10	LPC clock output - 33MHz nominal	O 3.3V	PU 10K 3.3V	
VGA_HSYNC	B93	Horizontal sync output to VGA monitor	O 3.3V	PU 1k 3.3V	



Caution

The signals listed in the table above are used as chipset configuration straps during system reset. In this condition (during reset), they are inputs that are pulled to the correct state by either COM Express™ internally implemented resistors or chipset internally implemented resistors that are located on the module. No external DC loads or external pull-up or pull-down resistors should change the configuration of the signals listed in the above table. External resistors may override the internal strap states and cause the COM Express™ module to malfunction and/or cause irreparable damage to the module.

9 System Resources

9.1 I/O Address Assignment

The I/O address assignment of the conga-TCG module is functionally identical with a standard PC/AT.

The BIOS assigns PCI and PCI Express I/O resources from FFF0h downwards. Non PnP/PCI/PCI Express compliant devices must not consume I/O resources in that area.

9.1.1 LPC Bus

On the conga-TCG, the PCI Express Bus acts as the subtractive decoding agent. All I/O cycles that are not positively decoded are forwarded to the PCI Express Bus. Only specified I/O ranges are forwarded to the LPC Bus. In the congatec Embedded BIOS, the following I/O address ranges are sent to the LPC Bus:

2Eh-2Fh	4Eh-4Fh	60h, 64h
220h-227h	228h-22Fh	230h-233h
238h-23Fh	240h-253h	260h-273h
278h-27Fh	280h-293h	2E8h-2EFh
2F8h-2FFh	338h-33Fh	378h-37Fh
3BCh-3BFh	3E8h-3EFh	3F8h-3FFh
678h-67Fh	778h-77Fh	7BCh-7BFh
A00h-BFFh	E00h-FFFh	

Some of these ranges are not available for customer use if a Super I/O is present and enabled on the carrier board or on the module. The I/O range E38h to EBFh is always used by on module LPC devices.

If you require additional LPC Bus resources other than those mentioned above or more information about this subject, contact congatec technical support for assistance.

9.2 PCI Configuration Space Map

Table 31 PCI Configuration Space Map

Bus Number (hex)	Device Number (hex)	Function Number (hex)	PCI Interrupt Routing	Description
00h	00h	00h	N.A.	Root Complex
00h	01h	00h	Internal	Integrated Graphics Controller (VGA)
00h	01h	01h	Internal	HDMI / DisplayPort HDA Controller (for HDMI/DisplayPort integrated audio only)
00h	02h	00h	N.A.	Host Bridge
00h (see Note 1)	02h	01h	Internal	PCIExpress Root Bridge 0
00h (see Note 1)	02h	02h	Internal	PCIExpress Root Bridge 1
00h (see Note 1)	02h	03h	Internal	PCIExpress Root Bridge 2
00h (see Note 1)	02h	04h	Internal	PCIExpress Root Bridge 3
00h (see Note 1)	02h	05h	Internal	PCIExpress Root Bridge 4
00h	10h	00h	Internal	XHCI Host Controller
00h	11h	00h	Internal	Serial ATA Controller
00h	12h	00h	Internal	OHCI Host Controller 0
00h	12h	02h	Internal	EHCI Host Controller 0
00h	13h	00h	Internal	OHCI Host Controller 1
00h	13h	02h	Internal	EHCI Host Controller 1
00h	14h	00h	N.A.	SMBus Host Controller
00h	14h	02h	Internal	High Definition Audio Controller
00h	14h	03h	N.A.	PCI to LPC Bridge
00h	14h	07h	Internal	SD Controller
00h	16h	00h	Internal	OHCI Host Controller 2
00h	16h	02h	Internal	EHCI Host Controller 2
00h	18h	00h	N.A.	Chipset Configuration Registers
00h	18h	01h	N.A.	Chipset Configuration Registers
00h	18h	02h	N.A.	Chipset Configuration Registers
00h	18h	03h	N.A.	Chipset Configuration Registers
00h	18h	04h	N.A.	Chipset Configuration Registers
00h	18h	05h	N.A.	Chipset Configuration Registers
01h (see Note 2)	00h	00h	Internal	Onboard Gigabit LAN Controller
02h (see Note 2)	00h	00h	Internal	PCI Express Port 0
03h (see Note 2)	00h	00h	Internal	PCI Express Port 1
04h (see Note 2)	00h	00h	Internal	PCI Express Port 2
05h (see Note 2)	00h	00h	Internal	PCI Express Port 3



Note

1. The PCI Express ports are visible only if the PCI Express port is set to "Enabled" in the BIOS setup program and a device is attached to the corresponding PCI Express port on the carrier board.
2. The above table represents a case when a single function PCI Express device is connected to all possible slots on the carrier board. The given bus numbers will change based on actual hardware configuration.

9.3 PCI Interrupt Routing Map

Table 32 PCI Interrupt Routing Map

PIRQ	VGA	HDA (HDMI/DP)	XHCI0	OHCI0	EHCI 0	OHCI1	EHCI 1	OHCI2	EHCI 2	SM Bus	SATA (IDE)	HDA (Main)
A												20
B					17		17		17			
C			18	18		18		18				
D											19	
E	44											
F		45										
G												
H												

PIRQ	PCI-EX Root Bridge 0	PCI-EX Root Bridge 1	PCI-EX Root Bridge 2	PCI-EX Root Bridge 3	PCI-EX Root Bridge 4	LAN	PCI-EX Port 0	PCI-EX Port 1	PCI-EX Port 2	PCI-EX Port 3
A	24		32		40	24		32		40
B								33		41
C								34		42
D								35		43
E		28		36			28		36	
F							29		37	
G							30		38	
H							31		39	



The given numbers specify the APIC interrupt numbers assigned to the respective devices.

9.4 I²C Bus

There are no onboard resources connected to the I²C bus. Address 16h is reserved for congatec Battery Management solutions.

9.5 SM Bus

System Management (SM) bus signals are connected to the AMD Chipset and the SM bus is not intended to be used by off-board non-system management devices. For more information about this subject contact congatec technical support.

10 BIOS Setup Description

The following section describes the BIOS setup program. The BIOS setup program can be used to view and change the BIOS settings for the module. Only experienced users should change the default BIOS settings.

10.1 Entering the BIOS Setup Program.

The BIOS setup program can be accessed by pressing the or <F2> key during POST.

10.1.1 Boot Selection Popup

Press the <F11> key during POST to access the Boot Selection Popup menu. A selection menu displays immediately after POST, allowing the operator to select either the boot device that should be used or an option to enter the BIOS setup program.

10.2 Setup Menu and Navigation

The congatec BIOS setup screen is composed of the menu bar, left frame and right frame. The menu bar is shown below:

Main	Advanced	Chipset	Boot	Security	Save & Exit
------	----------	---------	------	----------	-------------

The left frame displays all the options that can be configured in the selected menu. Grayed-out options cannot be configured. Only the blue options can be configured. When an option is selected, it is highlighted in white.

The right frame displays the key legend. Above the key legend is an area reserved for text messages. These text messages explain the options and the possible impacts when changing the selected option in the left frame.



Note

Entries in the option column that are displayed in bold indicate BIOS default values.

The setup program uses a key-based navigation system. Most of the keys can be used at any time while in setup. The table below explains the supported keys:

Key	Description
← → Left/Right	Select a setup menu (e.g. Main, Boot, Exit).
↑ ↓ Up/Down	Select a setup item or sub menu.
+ - Plus/Minus	Change the field value of a particular setup item.
Tab	Select setup fields (e.g. in date and time).
F1	Display General Help screen.
F2	Load previous settings.
F9	Load optimal default settings.
F10	Save changes and exit setup.
ESC	Discard changes and exit setup.
ENTER	Display options of a particular setup item or enter submenu.

10.3 Main Setup Screen

When you enter the BIOS setup, you will see the Main setup screen. The Main screen reports BIOS, processor, memory and board information and is for configuring the system date and time. You can always return to the Main setup screen by selecting the Main tab.

Feature	Options	Description
Main BIOS Version	no option	Displays the main BIOS version.
OEM BIOS Version	no option	Displays the additional OEM BIOS version.
Build Date	no option	Displays the date the BIOS was built
Product Revision	no option	Displays the hardware revision of the board.
Serial Number	no option	Displays the serial number of the board.
BC Firmware Rev.	no option	Displays the revision of the congatec board controller.
MAC Address	no option	Displays the MAC address of the onboard ethernet controller.
Boot Counter	no option	Displays the number of boot-ups. (max. 16777215).
Running Time	no option	Displays the time the board is running [in hours max. 65535].
Memory Information	no option	
Total Memory	no option	Displays the total amount of installed memory.
System Date	Day of week, month/ day/year	Specifies the current system date. Note: The date is in month-day-year format.
System Time	Hour:Minute:Second	Specifies the current system time. Note: The time is in 24-hour format.

10.4 Advanced Setup

Select the advanced tab from the setup menu to enter the advanced BIOS setup screen. The menu is used for setting advanced features and only features described within this user's guide are listed.

Main	Advanced	Chipset	Boot	Security	Save & Exit
	Graphics				
	Watchdog				
	Hardware Health Monitoring				
	Module Serial Ports				
	PCI & PCI Express				
	RTC Wake				
	ACPI				
	Trusted Computing				
	CPU				
	SATA				
	SDIO				
	USB				
	SMART Settings				
	Super IO				
	Serial Port Console Redirection				
	UEFI Network Stack				
	Intel® I210 Gigabit Network Connection				
	PC Speaker Configuration				

10.4.1 Graphics Submenu

Feature	Options	Description
Primary Graphics Device	IGD PCI/PCIe	Select primary graphics adapter to be used during boot up. IGD: Internal Graphics Device PCI/PCIe: Try to use external PCI Express or PCI Graphics Device. If not present, IGD is used.
Integrated Graphics Device	Auto Disabled Manual Configuration	Deactivate IGD or select framebuffer configuration mode. In auto mode, the framebuffer size will be defined based on the amount of physical memory present.

Feature	Options	Description
IGD Framebuffer Size	32M 64M 128M 256M 512M 1G	Only visible if IGD is set to manual configuration. Set fixed graphics framebuffer size for IGD. The graphics driver might allocate additional memory.
CRT Interface	Disabled Enabled	Enable or disable the CRT interface.
Digital Display Interface	Disabled Auto Selection	Configure the digital display interface. Display Port or HDMI/DVI is supported and automatically detected and configured.
LFP Interface	Disabled Enabled	Enable or disable the local flat panel (LFP) interface.
Always Try Auto Panel Detect	No Yes	If set to 'Yes' the BIOS will first look for an EDID data set in an external EEPROM to configure the Local Flat Panel . Only if no external EDID data set can be found, the data set selected under 'Local Flat Panel Type' will be used as fallback data set.
Local Flat Panel Type	Auto VGA 640x480 1x18 (002h) VGA 640x480 1x18 (013h) WVGA 800x480 1x24 (01Bh) SVGA 800x600 1x18 (01Ah) XGA 1024x768 1x18 (006h) XGA 1024x768 2x18 (007h) XGA 1024x768 1x24 (008h) XGA 1024x768 2x24 (012h) WXGA 1280x800 1x18 (01Eh) WXGA 1280x768 1x24 (01Ch) SXGA 1280x1024 2x24 (00Ah) SXGA 1280x1024 2x24 (018h) UXGA 1600x1200 2x24 (00Ch) HD 1920x1080 (01Dh) WUXGA 1920x1200 2x18 (015h) WUXGA 1920x1200 2x24 (00Dh) Customized EDID™ 1 Customized EDID™ 2 Customized EDID™ 3	Select a predefined LFP type or choose Auto to let the BIOS automatically detect and configure the attached LVDS panel. Auto detection is performed by reading an EDID data set via the video I²C bus. The number in brackets specifies the congatec internal number of the respective panel data set. Note: Customized EDID™ utilizes an OEM defined EDID™ data set stored in the BIOS flash device.
Backlight Inverter Type	None PWM I2C	Select the type of backlight inverter used. PWM = Use module PWM output signal. I2C = Use I2C backlight inverter device connected to the video I²C bus.
PWM Inverter Frequency (Hz)	200-40000	Only visible if Backlight Inverter Type is set to PWM. Set the PWM inverter frequency in Hertz.

Feature	Options	Description
Backlight Setting	0%, 10%, 25%, 40%, 50%, 60%, 75%, 90%, 100%	Actual backlight value in percent of the maximum setting.
Inhibit Backlight	No Permanent Until End Of POST	Decide whether the backlight on signal should be activated when the panel is activated or whether it should remain inhibited until the end of BIOS POST or permanently.
Invert Backlight Setting	No Yes	Allow to invert backlight control values if required for the actual I2C type backlight hardware controller.
LVDS SSC	Disabled , 0.5%, 1.0%, 1.5%, 2.0%, 2.5%	Configure LVDS spread spectrum clock modulation depth. Using center spreading and a fixed modulation frequency of 32.9kHz

10.4.2 Watchdog Submenu

Feature	Options	Description
POST Watchdog	Disabled 30sec 1min 2min 5min 10min 30min	Select the timeout value for the POST watchdog. The watchdog is only active during the power-on-self-test of the system and provides a facility to prevent errors during boot up by performing a reset.
Stop Watchdog For User Interaction	No Yes	Select whether the POST watchdog should be stopped during the popup boot selection menu or while waiting for setup password insertion.
Runtime Watchdog	Disabled One-time Trigger Single Event Repeated Event	Selects the operating mode of the runtime watchdog. This watchdog will be initialized just before the operating system starts booting. If set to 'One-time Trigger' the watchdog will be disabled after the first trigger. If set to 'Single Event', every stage will be executed only once, then the watchdog will be disabled. If set to 'Repeated Event' the last stage will be executed repeatedly until a reset occurs.
Delay	Disabled 10sec 30sec 1min 2min 5min 10min 30min	Select the delay time before the runtime watchdog becomes active. This ensures that an operating system has enough time to load.

Feature	Options	Description
Event 1	ACPI Event Reset Power Button	Selects the type of event that will be generated when timeout 1 is reached. For more information about ACPI Event see note below.
Event 2	Disabled ACPI Event Reset Power Button	Selects the type of event that will be generated when timeout 2 is reached.
Event 3	Disabled ACPI Event Reset Power Button	Selects the type of event that will be generated when timeout 3 is reached.
Timeout 1	1sec 2sec 5sec 10sec 30sec 1min 2min 5min 10min 30min	Selects the timeout value for the first stage watchdog event.
Timeout 2	see above	Selects the timeout value for the second stage watchdog event.
Timeout 3	see above	Selects the timeout value for the third stage watchdog event.
Watchdog ACPI Event	Shutdown Restart	Select the operating system event that is initiated by the watchdog ACPI event. These options perform a critical but orderly operating system shutdown or restart.



Note

In ACPI mode, it is not possible for a "Watchdog ACPI Event" handler to directly restart or shutdown the OS. For this reason the congatec BIOS will do one of the following:

For Shutdown: An over temperature notification is executed. This causes the OS to shut down in an orderly fashion.

For Restart: An ACPI fatal error is reported to the OS.

10.4.3 Hardware Health Monitoring Submenu

Feature	Options	Description
CPU Temperature	no option	Displays the actual module CPU temperature in °C.
Board Temperature	no option	Displays the actual module board temperature in °C.
12V Standard	no option	Displays the actual voltage of the 12V standard power supply.
5V Standby	no option	Displays the actual voltage of the 5V standby power supply.
Input Current (12V Standard)	no option	Displays the module input current from 12V standard voltage.
CPU Fan Speed	no option	Displays the actual CPU Fan Speed in RPM.
Fan PWM Frequency Mode	Low Frequency, High Frequency	Select fan PWM base frequency mode. Low frequency: 11.0Hz-88.2Hz High frequency: 1kHz-63kHz
Fan PWM Frequency	11.0 Hz, 14.7 Hz, 22.1 Hz, 29.4 Hz, 35.3 Hz , 44.1 Hz, 58.8 Hz, 88.2 Hz	Select fan PWM base frequency (11.0Hz-88.2Hz). (Only visible in low frequency mode)
Fan PWM Frequency (kHz)	1-63 default: 31	Select fan PWM base frequency (1kHz-63kHz). (Only visible in high frequency mode)
Fan Speed Setting	0%, 10%, 25%, 40%, 50%, 60%, 75%, 90%, 100%	Boot up fan speed in percent of the maximum supported speed.

10.4.4 Module Serial Ports

Feature	Options	Description
Serial Port 0	Disabled Enabled	Enable or disable module serial port 0.
I/O Base Address	3F8h, 2F8h, 220h, 228h, 238h, 2E8h, 338h, 3E8h	Set serial port base address.
Interrupt	None, IRQ3, IRQ4, IRQ5, IRQ6, IRQ10 , IRQ11, IRQ14, IRQ15	Set serial port interrupt.
PNP ID	None PNP0501 CGT0501	Set serial port ACPI ID.

Feature	Options	Description
Baudrate	2400 , 4800, 9600, 19200, 38400, 57600, 115200	Set serial port initial baudrate.
Serial Port 1	Disabled Enabled	Enable or disable module serial port 1.
I/O Base Address	3F8h, 2F8h, 220h, 228h, 238h, 2E8h , 338h, 3E8h	Set serial port base address.
Interrupt	None, IRQ3, IRQ4, IRQ5, IRQ6, IRQ10, IRQ11 , IRQ14, IRQ15	Set serial port interrupt.
PNP ID	None PNP0501 CGT0501 CGT0502	Set serial port ACPI ID.
Baudrate	2400 , 4800, 9600, 19200, 38400, 57600, 115200	Set serial port initial baudrate.

10.4.5 PCI & PCI Express Submenu

Feature	Options	Description
PCI Settings		
PCI Latency Timer	32 , 64, 96, 128, 160, 192, 224, 248 PCI Bus Clocks	Select value to be programmed into PCI latency timer register.
VGA Palette Snoop	Disabled Enabled	Enable or disable VGA palette registers snooping.
PERR# Generation	Disabled Enabled	Enable or disable PCI device to generate PERR#.
SERR# Generation	Disabled Enabled	Enable or disable PCI device to generate SERR#.
Generate EXCD0/1_PERST#	Disabled 1ms 5ms 10ms 50ms 100ms 150ms 200ms 250ms	Select whether and how long the COM Express EXCD0_PERST# and EXCD1_PERST# pins should be driven low during POST.
» PCI Express Settings	submenu	PCI Express device and link settings.

Feature	Options	Description
» PCI Express Port Configuration	submenu	Configure PCI Express and PEG ports.
» PIRQ Routing & IRQ Reservation	submenu	Manual PIRQ routing and interrupt reservation for legacy devices.

10.4.5.1 PCI Express Settings Submenu

Feature	Options	Description
Relaxed Ordering	Disabled Enabled	Enable or disable PCI Express device relaxed ordering.
Extended Tag	Disabled Enabled	If enabled a device may use an 8-bit tag filed as a requester.
No Snoop	Disabled Enabled	Enable or disable PCI Express device 'No Snoop' option.
Maximum Payload	Auto 128 Bytes 256 Bytes 512 Bytes 1024 Bytes 2048 Bytes 4096 Bytes	Set maximum payload of PCI Express devices or allow system BIOS to select the value.
Maximum Read Request	Auto 128 Bytes 256 Bytes 512 Bytes 1024 Bytes 2048 Bytes 4096 Bytes	Set maximum read request size of PCI Express devices or allow system BIOS to select the value.
Extended Synch	Disabled Enabled	If enabled, the generation of extended PCI Express synchronization patterns is allowed.
Link Training Retry	Disabled 2 3 5	Defines number of retry attempts software will take to retrain the link if the previous training attempt was unsuccessful.
Link Training Timeout (us)	10-10000 (100)	Defines number of microseconds software will wait before polling the link training bit in the link status register. Value ranges from 10us to 10000us.
Restore PCIE Registers	Enabled Disabled	On non-PCI Express aware operating systems some devices may not be re-initialized correctly after S3. Setting this node to Enabled restores PCI Express configuration on S3 resume. Warning: Enabling this may cause issues with other hardware after S3 resume.

Feature	Options	Description
PSPP Policy	Disabled Performance Balanced-High Balanced-Low Power Saving	Define PCI Express link speed selection policy.

10.4.5.2 PCI Express Port Configuration Submenu

Feature	Options	Description
Onboard LAN Controller	Disabled Enabled	Enable or disable the on module Ethernet controller.
PCI Express Port 0	Disabled Enabled	Enable or disable PCI Express port. Note: Unless the 'Always Enable Port' support for this port is enabled as well, an unpopulated port will still be disabled if no PCI Express device is connected.
ASPM Support	Disabled L0s Entry L1 Entry L0s And L1 Entry	Configure PCI Express root port ASPM support.
Always Enable Port	Disabled Enabled	Disabled: Disable the internal PCI Express interface device if no device detected on the port. Enabled: Enable the internal PCI Express interface device also if no device is detected on the port.
PCI Express Port 1	Disabled Enabled	Enable or disable PCI Express port. Note: Unless the 'Always Enable Port' support for this port is enabled as well, an unpopulated port will still be disabled if no PCI Express device is connected.
ASPM Support	Disabled L0s Entry L1 Entry L0s And L1 Entry	Configure PCI Express root port ASPM support.
Always Enable Port	Disabled Enabled	Disabled: Disable the internal PCI Express interface device if no device detected on the port. Enabled: Enable the internal PCI Express interface device also if no device is detected on the port.
PCI Express Port 2	Disabled Enabled	Enable or disable PCI Express port. Note: Unless the 'Always Enable Port' support for this port is enabled as well, an unpopulated port will still be disabled if no PCI Express device is connected.
ASPM Support	Disabled L0s Entry L1 Entry L0s And L1 Entry	Configure PCI Express root port ASPM support.

Feature	Options	Description
Always Enable Port	Disabled Enabled	Disabled: Disable the internal PCI Express interface device if no device detected on the port. Enabled: Enable the internal PCI Express interface device also if no device is detected on the port.
PCI Express Port 3	Disabled Enabled	Enable or disable PCI Express port. Note: Unless the 'Always Enable Port' support for this port is enabled as well, an unpopulated port will still be disabled if no PCI Express device is connected.
ASPM Support	Disabled L0s Entry L1 Entry L0s And L1 Entry	Configure PCI Express root port ASPM support.
Always Enable Port	Disabled Enabled	Disabled: Disable the internal PCI Express interface device if no device detected on the port. Enabled: Enable the internal PCI Express interface device also if no device is detected on the port.

10.4.5.3 PIRQ Routing & IRQ Reservation Submenu

Feature	Options	Description
PIRQA	Auto , IRQ3, IRQ4, IRQ10, IRQ11, IRQ14, IRQ15	Set interrupt for selected PIRQ. Please refer to the board's resource list for a detailed list of devices connected to the respective PIRQ. NOTE: These settings will only be effective while operating in PIC (non-IOAPIC) interrupt mode.
PIRQB	same as PIRQA	same as PIRQA
PIRQC	same as PIRQA	same as PIRQA
PIRQD	same as PIRQA	same as PIRQA
PIRQE	same as PIRQA	same as PIRQA
PIRQF	same as PIRQA	same as PIRQA
PIRQG	same as PIRQA	same as PIRQA
PIRQH	same as PIRQA	same as PIRQA
Reserve Legacy Interrupt 1	None , IRQ3, IRQ4, IRQ10, IRQ11, IRQ14, IRQ15	The interrupt reserved here will not be assigned to any PCI or PCI Express device and thus maybe available for some legacy bus device.
Reserve Legacy Interrupt 2	same as Reserve Legacy Interrupt 1	The interrupt reserved here will not be assigned to any PCI or PCI Express device and thus maybe available for some legacy bus device.

10.4.6 RTC Wake Submenu

Feature	Options	Description
Wake System At Fixed Time	Disabled Enabled	Enable system to wake from S5 using RTC alarm.
Wake up hour		Specify wake up hour.
Wake up minute		Specify wake up minute.
Wake up second		Specify wake up second.

10.4.7 ACPI Submenu

Feature	Options	Description
Enable Hibernation	Disabled Enabled	Enable or disable system ability to hibernate (operating system S4 sleep state). This option may not be effective with some operating systems.
ACPI Sleep State	Suspend Disabled S3 (Suspend to RAM)	Select the state used for ACPI system sleep/suspend.
Critical Trip Point	Disabled, 70, 80, 90, 95, 100, 105, 110, 115°C	Specifies the temperature threshold at which the ACPI aware OS performs a critical shutdown.
Active Trip Point	Disabled, 20, 30, 40, 50, 60, 70, 80, 90, 95°C	Specifies the temperature threshold at which the ACPI aware OS turns the fan on/off.
Passive Trip Point	Disabled, 60, 70, 80, 90, 95°C	Specifies the temperature threshold at which the ACPI aware OS starts/stops CPU clock throttling.
Lid Support	Disabled Enabled	Configure COM Express LID# signal to act as ACPI lid.
Sleep Button Support	Disabled Enabled	Configure COM Express SLEEP# signal to act as ACPI sleep button.

10.4.8 Trusted Computing Submenu

Feature	Options	Description
Security Device Support	Disable Enable	Enable or disable BIOS support for security device.
TPM State	Disabled Enabled	Enable or disable TPM chip. Note: System might restart several times during POST to acquire target state.

Feature	Options	Description
Pending operation	None , Enable Take Ownership, Disable Take Ownership, TPM Clear	Perform selected TPM chip operation. Note: System might restart several times during POST to perform selected operation.

10.4.9 CPU Submenu

Feature	Options	Description
AMD PowerNow! Support	Disabled Enabled	Enable or disable support for AMD PowerNow! technology. Allows operating systems to control CPU performance states.
Maximum Power Up P-State	P-State 0 P-State 1 P-State 2 P-State 3 P-State 4 P-State 5 P-State 6 P-State 7	Select the maximum CPU performance state to be set at power up. Higher numbers mean lower performance. P-state 0 is the highest performance state.
Maximum OS P-State	P-State 0 P-State 1 P-State 2 P-State 3 P-State 4 P-State 5 P-State 6 P-State 7	Select the maximum CPU performance state the operating system should support. Higher numbers mean lower performance. P-state 0 is the highest performance state.
NX Mode	Disabled Enabled	Enable or disable the 'no-execute' page protection function.
Virtualization Technology	Disabled Enabled	When enabled, a Virtual Machine Manager (VMM) can utilize the integrated hardware virtualization support.
C6 Support	Disabled Enabled	Enable or disable CPU C6 low power state support.
Core Performance Boost	Auto Disabled	Control usage of boosted P-States, i.e. P-States above the standard CPU P-State limit. Availability depends on CPU revision and type, actual usage on total CPU/GPU chip power consumption.
Core Leveling Support	Automatic Mode , Three cores per processor, Two cores per processor, One core per processor	Change/limit the number of active CPU cores.

10.4.10 SATA Submenu

Feature	Options	Description
SATA Controller	Disabled Enabled	Enable or disable the onboard SATA controller.
SATA Mode Selection	Native IDE AHCI Legacy IDE AHCI as ID 7804	Select onboard SATA controller mode.
SATA Gen2 Limit	Disabled Enabled	Limit all SATA ports to max. Gen2 speed.
SATA Port 0	Enabled Disabled	Enable or disable selected port.
Port Speed	Auto Gen1 Gen2	Select max. SATA speed generation for the selected port. Auto = up to Gen3
eSATA Support	Disabled Enabled	Enabled or disable eSATA and hotplug (only in AHCI mode) support.
SATA Port 1	Enabled Disabled	Enable or disable selected port.
Port Speed	Auto Gen1 Gen2	Select max. SATA speed generation for the selected port. Auto = up to Gen3
eSATA Support	Disabled Enabled	Enabled or disable eSATA and hotplug (only in AHCI mode) support.
SATA Port 0	no option	SATA drive 0 information.
SATA Port 1	no option	SATA drive 1 information.

10.4.11 SDIO Submenu

Feature	Options	Description
SDIO Access Mode	Auto DMA PIO	Select BIOS SD device access and boot mode. Auto = Access SD device in DMA mode if controller supports it, otherwise use PIO mode. DMA = Access SD device in DMA mode. PIO = Access SD device in PIO mode.
» SD Controller	submenu	Configure SD controller

10.4.11.1 SD Controller Submenu

Feature	Options	Description
SD Controller Mode	Disabled , Advanced DMA, DMA, PIO	Enable or disable the onboard SD controller and select its operating mode.
SD Clock Control	50MHz/25MHz 40MHz/20MHz 25MHz/12.5MHz	Select actual SD clocks for high and low speed transfer modes.
SD Speed Mode	Low Speed High Speed	Select SD transfer speed mode.
SD System Address Support	32Bit 64Bit	Select 32bit or 64bit system address support for SD controller.
SD Host Controller Version	SD 2.0 SD 3.0	Select SD host controller version.

10.4.12 USB Submenu

Feature	Options	Description
Legacy USB Support	Enabled Disabled Auto	Enables legacy USB support. Auto option disables legacy support if no USB devices are connected. Disable option will keep USB devices available only for EFI applications and setup.
External USB Controller Support	Disabled Enabled	Enable or disable BIOS support for external USB controllers.
XHCI Hand-off	Enabled Disabled	This is a workaround for OSeS without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI OS driver.
EHCI Hand-off	Disabled Enabled	This is a workaround for OSeS without EHCI hand-off support. The EHCI ownership change should be claimed by the EHCI OS driver.
USB Mass Storage Driver Support	Disabled Enabled	Enable or disable USB mass storage BIOS support.
USB Transfer Timeout	1 sec 5sec 10 sec 20 sec	Timeout value for legacy USB control, bulk and interrupt transfers.
Device Reset Timeout	10 sec 20 sec 30 sec 40 sec	USB legacy mass storage device start unit command timeout.
Device Power-Up Delay Selection	Auto Manual	Define maximum time a USB device might need before it properly reports itself to the host controller. Auto selects a default value which is 100ms for a root port or derived from the hub descriptor for a hub port.

Feature	Options	Description
Device Power-Up Delay Value	5 1-40	Actual power-up delay value in seconds.
USB Mass Storage Device Name (Auto detected USB mass storage devices are listed here dynamically)	Auto Floppy Forced FDD Hard Disk CD-ROM	Every USB mass storage device that is enumerated by the BIOS will have an emulation type setup option. This option specifies the type of emulation the BIOS has to provide for the device. Note: The device's formatted type and the emulation type provided by the BIOS must match for the device to boot properly. Select AUTO to let the BIOS auto detect the current formatted media. If Floppy is selected then the device will be emulated as a floppy drive. Forced FDD allows a hard disk image to be connected as a floppy image. Works only for drives formatted with FAT12, FAT16 or FAT32. Hard Disk allows the device to be emulated as hard disk. CDROM assumes the CD.ROM is formatted as bootable media, specified by the 'El Torito' Format Specification.
» USB Port & Controller Configuration	submenu	Configure USB ports and controllers.

10.4.12.1 USB Port & Controller Configuration Submenu

Feature	Options	Description
XHCI 0 (Port 0-1)	Disabled Enabled	Enable or disable the XHCI (USB 3.0) host controller.
EHCI 0 (Port 2-5)	Disabled Enabled	Enable or disable the EHCI (USB 2.0) host controller.
EHCI 1 (Port 6-7)	Disabled Enabled	Enable or disable the EHCI (USB 2.0) host controller.
EHCI 2 (Port 0-1)	Disabled Enabled	Enable or disable the EHCI (USB 2.0) host controller. Only visible if XHCI 0 is set to 'Disabled'
USB Port 0 (XHCI Mode) (USB Port 0)	Disabled Enabled	Enable or disable the respective USB port. Alternative port control if XHCI controller is disabled.
USB Port 1 (XHCI Mode) (USB Port 1)	Disabled Enabled	Enable or disable the respective USB port. Alternative port control if XHCI controller is disabled.
USB Port 2	Disabled Enabled	Enable or disable the respective USB port.
USB Port 3	Disabled Enabled	Enable or disable the respective USB port.
USB Port 4	Disabled Enabled	Enable or disable the respective USB port.
USB Port 5	Disabled Enabled	Enable or disable the respective USB port.

Feature	Options	Description
USB Port 6	Disabled Enabled	Enable or disable the respective USB port.
USB Port 7	Disabled Enabled	Enable or disable the respective USB port.
Overcurrent Protection	Disabled Enabled	Overcurrent protection on all USB ports.

10.4.13 SMART Settings Submenu

Feature	Options	Description
SMART Self Test	Disabled Enabled	Run SMART Self Test on all harddisks during POST.

10.4.14 Super I/O Submenu

Feature	Options	Description
SIO Clock	24MHz 48MHz	Select Super I/O base clock.
PS/2 Keyboard/Mouse Support	Disabled Enabled	Enable or disable PS/2 Keyboard/Mouse controller support.
Serial Port 0	Disabled Enabled	Enable or disable serial port 0.
Device Settings	IO=3F8h; IRQ=4;	Fixed configuration of serial port 0 if enabled.
Serial Port 1	Disabled Enabled	Enable or disable serial port 1.
Device Settings	IO=2F8h; IRQ=3;	Fixed configuration of serial port 1 if enabled.
Parallel Port	Disabled Enabled	Enable or disable parallel port.
Device Settings	IO=378h; IRQ=7;	Fixed configuration of the parallel port if enabled.
Device Mode	Standard Parallel Mode EPP Mode ECP Mode EPP Mode & ECP Mode	Set the parallel port mode.



This setup menu is only available if an external Winbond W83627 Super I/O has been implemented on the carrier board.

10.4.15 Serial Port Console Redirection Submenu

Feature	Options	Description
COM0 Console Redirection	Disabled Enabled	Enable or disable serial port 0 console redirection.
» Console Redirection Settings	submenu	Opens console redirection configuration sub menu.
COM1 Console Redirection	Disabled Enabled	Enable or disable serial port 1 console redirection.
» Console Redirection Settings	submenu	Opens console redirection configuration sub menu.

10.4.15.1 Console Redirection Settings Submenu

Feature	Options	Description
Terminal Type	VT100 VT100+ VT-UTF8 ANSI	Select terminal type.
Baudrate	9600, 19200, 38400, 57600, 115200	Select baud rate.
Data Bits	7, 8	Set number of data bits.
Parity	None Even Odd Mark Space	Select parity.
Stop Bits	1 2	Set number of stop bits.
Flow Control	None Hardware RTS/CTS	Select flow control.
VT-UTF8 Combo Key Support	Disabled Enabled	Enable VT-UTF8 combination key support for ANSI/VT100 terminals
Recorder Mode	Disabled Enabled	With recorder mode enabled, only text output will be sent over the terminal. This is helpful to capture and record terminal data.
Resolution 100x31	Disabled Enabled	Enables or disables extended terminal resolution
Legacy OS Redirection Resolution	80x24 80x25	Number of rows and columns supported for legacy OS redirection.

Feature	Options	Description
Putty KeyPad	VT100 LINUX XTERMR6 SCO ESCN VT400	Select FunctionKey and KeyPad on Putty.
Redirection After BIOS POST	Enabled Disabled	Select whether serial redirection should be continued after POST.

10.4.16 UEFI Network Stack Submenu

Feature	Options	Description
UEFI Network Stack	Disabled Enabled	Enable or disable the UEFI network stack.
IPv4 PXE Support	Disabled Enabled	Enable IPv4 PXE boot support. If disabled IPv4 PXE boot option will not be created.
IPv6 PXE Support	Disabled Enabled	Enable IPv6 PXE boot support. If disabled IPv6 PXE boot option will not be created.
PXE Boot Wait Time	1 0 - 5	Time in seconds waiting for ESC keypress to abort the PXE boot.

10.4.17 Intel® I210 Gigabit Network Connection Submenu

Feature	Options	Description
» NIC Configuration	submenu	Opens the NIC Configuration submenu.
Blink LEDs	0-15 Default : 0	The Ethernet activity LEDs will blink as many seconds as entered.
UEFI Driver	no option	Displays the UEFI Driver version.
Adapter PBA	no option	Displays the Adapter PBA.
Chip Type	no option	Displays the type of Ethernet chip.
PCI Device ID	no option	Displays the PCI Device ID of the Ethernet controller.
Bus:Device:Function	no option	Displays the PCI Bus:Device:Function number of the Ethernet controller.
Link Status	no option	Displays the Link Status.
MAC Address	no option	Displays the MAC Address.
Virtual MAC Address	no option	Displays the programmatically assignable MAC Address.

10.4.18 NIC Configuration Submenu

Feature	Options	Description
Link Speed	Auto Negotiated 10 Mbps Half 10 Mbps Full 100 Mbps Half 100 Mbps Full	Specifies the port speed used for the selected boot protocol.
Wake On LAN	Disabled Enabled	Enables the server to be powered on using an in-band magic packet.

10.4.19 PC Speaker Configuration Submenu

Feature	Options	Description
Debug Beeps	Disabled Enabled	Enable or disable general debug / status beep generation.
Input Device Debug Beeps	Disabled Enabled	Enable or disable input device debug beeps.
Output Device Debug Beeps	Disabled Enabled	Enable or disable output device debug beeps.
USB Driver Beeps	Disabled Enabled	Enable or disable USB driver beeps.

10.5 Chipset Setup

Select the Chipset tab from the setup menu to enter the Chipset setup screen.

10.5.1 Chipset Settings Configuration

Feature	Options	Description
HDMI/DP Audio Support	Disabled Enabled	Enable or disable HDMI/DisplayPort integrated audio support.
HDA Controller	Auto Disabled Enabled	Control activation of the High Definition Audio controller device. Disabled = HDA controller will be unconditionally disabled Enabled = HDA controller will be unconditionally enabled Auto = HDA controller will be enabled if HDA codec present, disabled otherwise.

Feature	Options	Description
Isolate SMBus Segments	Never During POST Always	Allows to isolate the off-module/external SMBus segment from the on-module SMBus segment. This can be a workaround for non specification conform external SMBus devices.
Adaptive S4 Control	Disabled Enabled	E.enable or disable adaptive S4 control
SB Clock Spread Spectrum	Disabled Enabled	Enable or disable clock spreading for I/O components like USB (3.0) and SATA.
SB Clock Spread Spectrum Option	-0.362%, -0.375% , -0.400%, -0.425%, -0.450%, -0.475%	I/O clock spreading value.
Native PCI Express Support	Disabled Enabled	Enable or disable native PCI Express OS support.
USB MSI Option	Disabled Enabled	Enable or disable MSI (Message Signaled Interrupt) support for USB controllers.
HD Audio MSI Option	Disabled Enabled	Enable or disable MSI (Message Signaled Interrupt) support for the HDA controller.
LPC MSI Option	Disabled Enabled	Enable or disable MSI (Message Signaled Interrupt) support for the LPC bridge.
PCIBridge MSI Option	Disabled Enabled	Enable or disable MSI (Message Signaled Interrupt) support for PCI/PCIe bridges.
» Memory Configuration	Submenu	Opens the Memory Configuration submenu.

10.5.1.1 Memory Configuration Submenu

Feature	Options	Description
Memory Bus Clock	Auto 400MHz (DDR3-800) 533MHz (DDR3-1066) 667MHz (DDR3-1333) 800MHz (DDR3-1600)	Select or limit memory frequency.
Memory Hole Remapping	Disabled Enabled	Enable or disable memory hole remapping.
Bank Interleaving	Disabled Enabled	Enable or disable memory bank interleaving.
Memory Hole 15MB-16MB	Disabled Enabled	Create a memory hole in the range between 15MB and 16MB for some LPC/ISA expansion cards.

10.6 Boot Setup

Select the Boot tab from the setup menu to enter the Boot setup screen.

10.6.1 Boot Settings Configuration

Feature	Options	Description
Quiet Boot	Disabled Enabled	Disabled displays normal POST diagnostic messages. Enabled displays OEM logo instead of POST messages. Note: The default OEM logo is a dark screen.
Setup Prompt Timeout	1 0 - 65535	Number of seconds to wait for setup activation key. 0 means no wait for fastest boot (not recommended), 65535 means infinite wait.
Bootup NumLock State	On Off	Select the keyboard numlock state.
Power Loss Control	Remain Off Turn On Last State	Specifies the mode of operation if an AC power loss occurs. Remain Off keeps the power off until the power button is pressed. Turn On restores power to the computer. Last State restores the previous power state before power loss occurred. Note: Only works with an ATX type power supply.
AT Shutdown Mode	System Reboot Hot S5	Determines the behavior of an AT-powered system after a shutdown.
Battery Support	Auto (Battery Manager), Battery-Only On I2C Bus, Battery-Only On SMBus	Battery system support selection. Select 'Battery-Only On I2C Bus' for battery-only systems using I2C bus and 'Battery-Only On SMBus' for battery-only systems using SMBus. Select 'Auto' for systems equipped with a real battery system manager (connected via I2C or SMBus).
System Off Mode	G3/Mech Off S5/Soft Off	Define system state after shutdown when a battery system is present.
Enter Setup If No Boot Device	No Yes	Select whether the setup menu should be started if no boot device is connected.
Enable Popup Boot Menu	No Yes	Select whether the popup boot menu can be started.
Boot Option Sorting Method	UEFI First Legacy First	Set boot option sorting method. UEFI First: Tries all UEFI boot options before first legacy boot option. Legacy First: Tries all legacy boot options before first UEFI boot option.
Bootloader Type Priority	UEFI First Legacy First	Set the bootloader type that will be tried first. UEFI First: UEFI bootloaders will be tried first. Legacy First: Legacy bootable devices will be tried first.

Feature	Options	Description
1st, 2nd, 3rd, ... Boot Device	Disabled SATA 0 Drive SATA 1 Drive	This view is only available when in the default "Type Based" mode.
(Up to 12 boot devices can be prioritized if "UEFI Standard" priority list control is selected. If "Type Based" priority list control is enabled only 8 boot devices can be prioritized.)	USB Harddisk USB CDROM Other USB Device Onboard SD Card Storage Onboard LAN External LAN Firmware-based UEFI Bootloader Other Device	When in "UEFI Standard" mode, you will only see the devices that are currently connected to the system.
» CSM & Option ROM Control	submenu	Opens submenu which controls the execution of UEFI and legacy option ROMs.
UEFI Fast Boot	Disabled Enabled	Enable or disable boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS / legacy boot options.
SATA Support	Last Boot HDD Only All SATA Devices	Select which SATA device to be initialized in fast boot mode.
VGA Support	Auto UEFI Driver	If set to Auto, the legacy video option ROM will be installed for legacy OS boot; boot logo will NOT be shown during POST. For UEFI OS boot the UEFI GOP driver will be installed.
USB Support	Disabled Full Init Partial Init	If set to Disabled, no USB device will be available before OS boot. If set to Partial Init, specific USB ports/devices will NOT be available before OS boot. If set to Enabled, all USB devices will be available during POST and after OS boot.
PS/2 Device Support	Disabled Enabled	If set to Disabled, PS/2 devices will be skipped.
Network Stack Driver Support	Disabled Enabled	If set to Disabled, the UEFI network stack driver installation will be skipped.



- Note**
1. The term 'AC power loss' stands for the state when the module loses the standby voltage on the 5V_SB pins. On congatec modules, the standby voltage is continuously monitored after the system is turned off. If within 30 seconds the standby voltage is no longer detected, then this is considered an AC power loss condition. If the standby voltage remains stable for 30 seconds, then it is assumed that the system was switched off properly.
 2. Inexpensive ATX power supplies often have problems with short AC power sags. When using these ATX power supplies it is possible that the system turns off but does not switch back on, even when the PS_ON# signal is asserted correctly by the module. In this case, the internal circuitry of the ATX power supply has become confused. Usually another AC power off/on cycle is necessary to recover from this situation.

10.6.1.1 CSM & Option ROM Control Submenu

Feature	Options	Description
Launch CSM	Enabled Disabled	Controls the execution of the CSM module. Only disable for pure UEFI operating system support.
Boot Option Filter	UEFI and Legacy Legacy Only UEFI Only	Controls which devices / boot loaders the system should boot to.
PXE Option ROM Launch Policy	Do Not Launch UEFI ROM Only Legacy ROM Only	Controls the execution of UEFI and legacy PXE option ROMs
Storage Option ROM Launch Policy	Do Not Launch UEFI ROM Only Legacy ROM Only	Controls the execution of UEFI and legacy mass storage device option ROMs
Video Option ROM Launch Policy	Do Not Launch UEFI ROM Only Legacy ROM Only	Controls the execution of UEFI and legacy video option ROMs
Other Option ROM Launch Policy	UEFI ROM Only Legacy ROM Only	Controls the execution of option ROMs for PCI / PCI Express devices other than network, mass storage or video.
GateA20 Active	Upon Request Always	Gate A20 control. Upon Request: Gate A20 can be disabled using BIOS services. Always: Do not allow disabling Gate A20 This option is useful when any runtime code is executed above 1MB.
Option ROM Messages	Force BIOS Keep Current	Set display mode for option ROMs.
INT19 Trap Response	Immediate Postponed	BIOS reaction on INT19 trapping by Option ROM Immediate: Execute the trap right away. Postponed: Execute the trap during legacy boot.

10.7 Security Setup

Select the Security tab from the setup menu to enter the Security setup screen.

10.7.1 Security Settings

Feature	Options	Description
BIOS Password	enter password	Specifies the BIOS and setup administrator password.
BIOS Update & Write Protection	Disabled Enabled	Congatec flash software will require BIOS password to perform write or erase operations.
HDD Security Configuration		

Feature	Options	Description
List of all detected hard disks supporting the security feature set	Select device to open device security configuration submenu	
» Secure Boot Menu	submenu	

10.7.1.1 BIOS Security Features

BIOS Password/ BIOS Write Protection

A BIOS password protects the BIOS setup program from unauthorized access. This ensures that end users cannot change the system configuration without authorization. With an assigned BIOS password, the BIOS prompts the user for a password on a setup entry. If the password entered is wrong, the BIOS setup program will not launch.

The congatec BIOS uses a SHA256 based encryption for the password, which is more secured than the original AMI encryption. The BIOS password is case sensitive with a minimum of 3 characters and a maximum of 20 characters. Once a BIOS password has been assigned, the BIOS activates the grayed out 'BIOS Update and Write Protection' option. If this option is set to 'enabled', only authorized users (users with the correct password) can update the BIOS. To update the BIOS, use the congatec system utility `cgutlcmd.exe` with the following syntax:

`CGUTLCMD BFLASH <BIOS file> /BP: <password>` where <password> is the assigned BIOS password.

For more information about "Updating the BIOS" refer to the congatec system utility user's guide, which is called `CGUTLm1x.pdf` and can be found on the congatec AG website at www.congatec.com.

With the BIOS password protection and the BIOS update and write protection, the system configuration is completely secured. If the BIOS is password protected, you cannot change the configuration of an end application without the correct password.



Use `cgutlcmd.exe` version 1.5.3 or later.

Built in BIOS recovery is disabled in the congatec BIOS firmware to prevent the BIOS from updating itself due to the user pressing a special key combination or a corrupt BIOS being detected. congatec considers such a recovery update a security risk because the BIOS internal update process bypasses the implemented BIOS security explained above.

Only the congatec utility interface to the SMI handler of the BIOS flash update is enabled. Other interfaces to the SMI handler are disabled to prevent non congatec tools from writing to the BIOS flash. As a result of this restriction, flash utilities supplied by AMI or Intel will not work .

UEFI Secure Boot

Secure Boot is a security standard defined in UEFI specification 2.3.1 that helps prevent malicious software applications and unauthorized operating systems from loading during system start up process. Without secure boot enabled (not supported or disabled), the computer simply hands over control to the bootloader without checking whether it is a trusted operating system or malware. With secure boot supported and enabled, the UEFI firmware starts the bootloader only if the bootloader's signature has maintained integrity and also if one of the following conditions is true:

- The bootloader was signed by a trusted authority that is registered in the UEFI database.
- The user has added the bootloader's digital signature to the UEFI database. The BIOS provides the key management setup sub-menu for this purpose.



The congatec BIOS by default enables CSM (Compatibility Support Module) and disables secure boot because most of the industrial computers today boot in legacy (non-UEFI) mode. Since secure boot is only enabled when booting in native UEFI mode, you must therefore disable the CSM (compatibility support module) in the BIOS setup to enable Secure Boot.

A full description of secure boot is beyond the scope of this users guide. For more information about how secure boot leverages signature databases and keys, see the secure boot overview in the windows deployment options section of the Microsoft TechNet Library at <http://technet.microsoft.com>.

10.7.1.2 Hard Disk Security Features

Hard Disk Security uses the Security Mode feature commands defined in the ATA specification. This functionality allows users to protect data using drive-level passwords. The passwords are kept within the drive, so data is protected even if the drive is moved to another computer system.

The BIOS provides the ability to 'lock' and 'unlock' drives using the security password. A 'locked' drive will be detected by the system, but no data can be accessed. Accessing data on a 'locked' drive requires the proper password to 'unlock' the disk.

The BIOS enables users to enable/disable hard disk security for each hard drive in setup. A master password is available if the user can not remember the user password. Both passwords can be set independently however the drive will only lock if a user password is installed. The max length of the passwords is 32 bytes.

During POST each hard drive is checked for security mode feature support. In case the drive supports the feature and it is locked, the BIOS prompts the user for the user password. If the user does not enter the correct user password within four attempts, the user is notified that the drive is locked and POST continues as normal. If the user enters the correct password, the drive is unlocked until the next reboot.

In order to ensure that the ATA security features are not compromised by viruses or malicious programs when the drive is typically unlocked,

the BIOS disables the ATA security features at the end of POST to prevent their misuse. Without this protection it would be possible for viruses or malicious programs to set a password on a drive thereby blocking the user from accessing the data.



If the user enables password support, a power cycle must occur for the hard drive to lock using the new password. Both user and master password can be set independently however the drive will only lock if a user password is installed.

10.8 Save & Exit Menu

Select the Save & Exit tab from the setup menu to enter the Save & Exit setup screen. You can display a Save & Exit screen option by highlighting it using the <Arrow> keys.

Feature	Description
Save Changes and Exit	Exit setup menu after saving the changes. The system is only reset if settings have been changed.
Discard Changes and Exit	Exit setup menu without saving any changes.
Save Changes and Reset	Save changes and reset the system.
Discard Changes and Reset	Reset the system without saving any changes.
Save Options	
Save Changes	Save changes made so far to any of the setup options. Stay in setup menu.
Discard Changes	Discard changes made so far to any of the setup options. Stay in setup menu.
Restore Defaults	Restore default values for all the setup options.
Boot Override	
List of all boot devices currently detected	Select device to leave setup menu and boot from the selected device. Only visible and active if Boot Priority Selection setup node is set to "Device Based".

11 Additional BIOS Features

The conga-TCG uses a congatec/AMI AptioEFI that is stored in an onboard Flash Rom chip and can be updated using the congatec System Utility, which is available in a DOS based command line, Win32 command line, Win32 GUI, and Linux version.

The BIOS displays a message during POST and on the main setup screen identifying the BIOS project name and a revision code. The initial production BIOS is identified as TFT3R1xx or TFT4R1xx where:

- TFT3 / TFT4 is the project code
- R is the identifier for a BIOS ROM file, 1 is the so called feature number and xx is the major and minor revision number.

The conga-TCG BIOS binary size is 8 MB.

11.1 Supported Flash Devices

The conga-TCG supports the following flash devices:

- Spansion S25FL064K0SMFI01 (8 MB)
- Winbond W25Q64CVSSIG (8 MB)
- Winbond W25Q64FVSSIG (8 MB)

The flash devices listed above can be used on the carrier board for external BIOS support. For more information about external BIOS support, refer to the Application Note AN7_External_BIOS_Update.pdf on the congatec website at <http://www.congatec.com>.

11.2 Updating the BIOS

BIOS updates are often used by OEMs to correct platform issues discovered after the board has been shipped or when new features are added to the BIOS.

For more information about "Updating the BIOS" please refer to the user's guide for the congatec System Utility, which is called CGUTLm1x.pdf and can be found on the congatec AG website at www.congatec.com.

12 Industry Specifications

The list below provides links to industry specifications that apply to congatec AG modules.

Specification	Link
Low Pin Count Interface Specification, Revision 1.0 (LPC)	http://developer.intel.com/design/chipsets/industry/lpc.htm
Universal Serial Bus (USB) Specification, Revision 2.0	http://www.usb.org/home
PCI Specification, Revision 2.3	http://www.pcisig.com/specifications
Serial ATA Specification, Revision 3.0	http://www.serialata.org
PICMG® COM Express Module™ Base Specification	http://www.picmg.org/
PCI Express Base Specification, Revision 2.0	http://www.pcisig.com/specifications