



**MODEL:
WSB-H810**

Full-Size PICMG 1.0 CPU Card Supports 4th Generation LGA1150 Intel® Core™ i7/i5/i3, Pentium® or Celeron® CPU, Intel® H81 Chipset, DDR3, VGA, iDP, Dual Intel® GbE, USB 3.0, SATA 6Gb/s, PCIe Mini, mSATA, RS-232, HD Audio and RoHS

User Manual

Revision

Date	Version	Changes
June 16, 2015	1.01	Added two RS-232 serial ports
March 10, 2015	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Manual Conventions

**WARNING**

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.

**CAUTION**

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.

**NOTE**

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.

**HOT SURFACE**

This symbol indicates a hot surface that should not be touched without taking care.

Table of Contents

1 INTRODUCTION.....	1
1.1 INTRODUCTION.....	2
1.2 FEATURES.....	3
1.3 CONNECTORS	4
1.4 DIMENSIONS.....	5
1.5 DATA FLOW	7
1.6 TECHNICAL SPECIFICATIONS	8
2 PACKING LIST.....	11
2.1 ANTI-STATIC PRECAUTIONS	12
2.2 UNPACKING PRECAUTIONS.....	12
2.3 PACKING LIST.....	13
2.4 OPTIONAL ITEMS.....	14
3 CONNECTORS	17
3.1 PERIPHERAL INTERFACE CONNECTORS.....	18
3.1.1 WSB-H810 Layout.....	18
3.1.2 Peripheral Interface Connectors	19
3.1.3 External Interface Panel Connectors.....	20
3.2 INTERNAL PERIPHERAL CONNECTORS	21
3.2.1 +12V Power Connector	21
3.2.2 ATX Power Supply Enable Connector	21
3.2.3 Audio Kit Connector	22
3.2.4 Battery Connector.....	23
3.2.5 Chassis Intrusion Connector.....	24
3.2.6 DDR3 DIMM Slots.....	24
3.2.7 Digital I/O Connector	25
3.2.8 EC Debug Connector.....	26
3.2.9 Fan Connector (CPU).....	26
3.2.10 Fan Connector (System)	27

3.2.11 Front Panel Connector	28
3.2.12 I ² C Connector	29
3.2.13 Infrared Connector (Reserved)	30
3.2.14 Internal DisplayPort Connector	30
3.2.15 Keyboard and Mouse Connector	31
3.2.16 LAN LED Connectors	32
3.2.17 mSATA Slot.....	33
3.2.18 Parallel Port Connector	35
3.2.19 PCIe Mini Slot.....	36
3.2.20 SATA 3Gb/s Drive Connector	37
3.2.21 SATA 6Gb/s Drive Connectors.....	38
3.2.22 Serial Port Connectors, RS-232.....	39
3.2.23 Serial Port Connector, RS-422/485.....	40
3.2.24 SMBus Connector	41
3.2.25 SPI Flash Connector.....	42
3.2.26 SPI Flash Connector (EC).....	42
3.2.27 TPM Connector.....	43
3.2.28 USB 2.0 Connectors.....	44
3.2.29 USB 2.0 Connector (Type A).....	45
3.2.30 USB 3.0 Connector	45
3.3 EXTERNAL PERIPHERAL INTERFACE CONNECTOR PANEL	47
3.3.1 Ethernet Connectors	47
3.3.2 USB 2.0 Connectors.....	48
3.3.3 VGA Connector	48
4 INSTALLATION	50
4.1 ANTI-STATIC PRECAUTIONS	51
4.2 INSTALLATION CONSIDERATIONS.....	51
4.3 SOCKET LGA1150 CPU INSTALLATION	53
4.4 SOCKET LGA1150 COOLING KIT INSTALLATION	56
4.5 DIMM INSTALLATION	57
4.6 FULL-SIZE PCIe MINI CARD INSTALLATION	58
4.7 HALF-SIZE PCIe MINI CARD INSTALLATION.....	60
4.8 mSATA CARD INSTALLATION	62
4.9 SYSTEM CONFIGURATION.....	64

WSB-H810 PICMG 1.0 CPU Card

4.9.1 AT/ATX Power Mode Setting	64
4.9.2 Clear CMOS Button	65
4.9.3 Flash Descriptor Security Override	65
4.9.4 USB Power Selection	66
4.10 CHASSIS INSTALLATION	67
4.10.1 Airflow	67
4.10.2 CPU Card Installation	67
4.11 INTERNAL PERIPHERAL DEVICE CONNECTIONS	68
4.11.1 SATA Drive Connection	68
5 BIOS	70
5.1 INTRODUCTION	71
5.1.1 Starting Setup	71
5.1.2 Using Setup	71
5.1.3 Getting Help	72
5.1.4 Unable to Reboot after Configuration Changes	72
5.1.5 BIOS Menu Bar	72
5.2 MAIN	73
5.3 ADVANCED	74
5.3.1 ACPI Settings	75
5.3.2 RTC Wake Settings	76
5.3.3 Trusted Computing	78
5.3.4 CPU Configuration	79
5.3.5 SATA Configuration	81
5.3.6 USB Configuration	83
5.3.7 F81866 Super IO Configuration	84
5.3.7.1 Serial Port n Configuration	84
5.3.7.2 IrDA Configuration	89
5.3.7.3 Parallel Port Configuration	91
5.3.8 iWDD H/W Monitor	92
5.3.8.1 Smart Fan Mode Configuration	93
5.3.9 Serial Port Console Redirection	94
5.3.10 iEi Feature	97
5.4 CHIPSET	98
5.4.1 PCH-IO Configuration	99

5.4.1.1 PCI Express Configuration	101
5.4.1.2 PCH Azalia Configuration	103
5.4.2 <i>System Agent (SA) Configuration</i>	104
5.4.2.1 Graphics Configuration.....	104
5.4.2.2 NB PCIe Configuration.....	107
5.4.2.3 Memory Configuration	108
5.5 BOOT.....	109
5.6 SECURITY	111
5.7 SAVE & EXIT	111
6 SOFTWARE DRIVERS	113
6.1 AVAILABLE SOFTWARE DRIVERS	114
6.2 SOFTWARE INSTALLATION	114
6.3 CHIPSET DRIVER INSTALLATION.....	115
6.4 GRAPHICS DRIVER INSTALLATION.....	118
6.5 LAN DRIVER INSTALLATION	122
6.6 AUDIO DRIVER INSTALLATION	125
6.7 USB 3.0 DRIVER INSTALLATION	127
A REGULATORY COMPLIANCE	131
B BIOS OPTIONS	133
C TERMINOLOGY	137
D DIGITAL I/O INTERFACE.....	141
D.1 INTRODUCTION.....	142
D.2 ASSEMBLY LANGUAGE SAMPLE 1.....	143
D.3 ASSEMBLY LANGUAGE SAMPLE 2.....	143
E WATCHDOG TIMER.....	144
F HAZARDOUS MATERIALS DISCLOSURE.....	147
F.1 HAZARDOUS MATERIALS DISCLOSURE TABLE FOR IPB PRODUCTS CERTIFIED AS ROHS COMPLIANT UNDER 2002/95/EC WITHOUT MERCURY	148

List of Figures

Figure 1-1: WSB-H810	2
Figure 1-2: Connectors	4
Figure 1-3: WSB-H810 Dimensions (mm).....	5
Figure 1-4: External Interface Panel Dimensions (mm).....	6
Figure 1-5: Data Flow Diagram.....	7
Figure 3-1: Connectors and Jumpers.....	18
Figure 3-2: +12V Power Connector Pinout Location	21
Figure 3-3: ATX Power Supply Enable Connector Location	22
Figure 3-4: Audio Kit Connector Location	22
Figure 3-5: Battery Connector Location.....	23
Figure 3-6: Chassis Intrusion Connector Location.....	24
Figure 3-7: DDR3 DIMM Slot Locations	25
Figure 3-8: Digital I/O Connector Location	25
Figure 3-9: EC Debug Connector Location	26
Figure 3-10: CPU Fan Connector Location	27
Figure 3-11: System Fan Connector Location.....	28
Figure 3-12: Front Panel Connector Location	28
Figure 3-13: I ² C Connector Location	29
Figure 3-14: Infrared Connector Location.....	30
Figure 3-15: Internal DisplayPort Connector Location	31
Figure 3-16: Keyboard and Mouse Connector Location.....	32
Figure 3-17: LAN LED Connector Locations	33
Figure 3-18: mSATA Slot Location	34
Figure 3-19: Parallel Port Connector Location	35
Figure 3-20: PCIe Mini Slot Location	36
Figure 3-21: SATA 3Gb/s Drive Connector Location	38
Figure 3-22: SATA 6Gb/s Drive Connector Locations	39
Figure 3-23: Serial Port Connector Locations	39
Figure 3-24: RS-422/485 Connector Location.....	40
Figure 3-25: SMBus Connector Location	41



Figure 3-26: SPI Flash Connector Location.....42

Figure 3-27: SPI EC Flash Connector Location.....43

Figure 3-28: TPM Connector Location.....43

Figure 3-29: USB 2.0 Connector Pinout Locations44

Figure 3-30: USB 2.0 Connector (Type A) Pinout Location.....45

Figure 3-31: USB 3.0 Connector Location46

Figure 3-32: External Peripheral Interface Connector47

Figure 3-33: Ethernet Connector.....47

Figure 3-34: VGA Connector49

Figure 4-1: Disengage the CPU Socket Load Lever.....53

Figure 4-2: Remove Protective Cover.....54

Figure 4-3: Insert the Socket LGA1150 CPU.....55

Figure 4-4: Close the Socket LGA115055

Figure 4-5: Cooling Kit Support Bracket.....56

Figure 4-6: DIMM Installation.....57

Figure 4-7: Removing the Retention Screw and Standoff for a Half-size PCIe Mini Card.....58

Figure 4-8: Removing the Retention Screw59

Figure 4-9: Inserting the Full-size PCIe Mini Card into the Slot at an Angle59

Figure 4-10: Securing the Full-size PCIe Mini Card60

Figure 4-11: Removing the Retention Screw61

Figure 4-12: Inserting the Half-size PCIe Mini Card into the Slot at an Angle.....61

Figure 4-13: Securing the Half-size PCIe Mini Card.....62

Figure 4-14: Removing the Retention Screws63

Figure 4-15: Inserting the mSATA Card into the Slot at an Angle63

Figure 4-16: Securing the mSATA Card64

Figure 4-17: AT/ATX Power Mode Switch Location64

Figure 4-18: Clear CMOS Button Location.....65

Figure 4-19: Flash Descriptor Security Override Jumper Location66

Figure 4-20: SATA Drive Cable Connection.....68

Figure 4-21: SATA Power Drive Connection.....69

Figure 6-1: Chipset Driver Welcome Screen..... 115

Figure 6-2: Chipset Driver License Agreement 116

Figure 6-3: Chipset Driver Read Me File 116

Figure 6-4: Chipset Driver Setup Progress..... 117

Figure 6-5: Chipset Driver Installation Finish Screen..... 117



WSB-H810 PICMG 1.0 CPU Card

Figure 6-6: Graphics Driver InstallShield Wizard	118
Figure 6-7: Graphics Driver – Extracting Files	119
Figure 6-8: Graphics Driver Welcome Screen	119
Figure 6-9: Graphics Driver License Agreement.....	120
Figure 6-10: Graphics Driver Read Me File	120
Figure 6-11: Graphics Driver Setup Progress	121
Figure 6-12: Graphics Driver Installation Finish Screen	121
Figure 6-13: Windows Control Panel.....	122
Figure 6-14: System Control Panel	122
Figure 6-15: Device Manager List	123
Figure 6-16: Update Driver Software Window	124
Figure 6-17: Locate Driver Files	124
Figure 6-18: LAN Driver Installation	125
Figure 6-19: Audio Driver – Extracting Files.....	126
Figure 6-20: Audio Driver Installation Welcome Screen.....	126
Figure 6-21: Audio Driver Installation Complete	127
Figure 6-22: USB 3.0 Driver Welcome Screen	128
Figure 6-23: USB 3.0 Driver License Agreement.....	128
Figure 6-24: USB 3.0 Driver Read Me File	129
Figure 6-25: USB 3.0 Driver Setup Operations	129
Figure 6-26: USB 3.0 Driver Installation Finish Screen	130



List of Tables

Table 1-1: WSB-H810 Specifications	10
Table 2-1: Packing List.....	13
Table 2-2: Optional Items	16
Table 3-1: Peripheral Interface Connectors	20
Table 3-2: Rear Panel Connectors	20
Table 3-3: +12V Power Connector Pinouts	21
Table 3-4: ATX Power Supply Enable Connector Pinouts	22
Table 3-5: Audio Kit Connector Pinouts.....	23
Table 3-6: Battery Connector Pinouts	24
Table 3-7: Chassis Intrusion Connector Pinouts	24
Table 3-8: Digital I/O Connector Pinouts.....	25
Table 3-9: EC Debug Connector Pinouts	26
Table 3-10: CPU Fan Connector Pinouts	27
Table 3-11: System Fan Connector Pinouts	28
Table 3-12: Front Panel Connector Pinouts.....	29
Table 3-13: I ² C Connector Pinouts.....	29
Table 3-14: Infrared Connector Pinouts	30
Table 3-15: Internal DisplayPort Connector Pinouts	31
Table 3-16: Keyboard and Mouse Connector Pinouts.....	32
Table 3-17: LAN1 LED Connector (LED_LAN1) Pinouts.....	33
Table 3-18: LAN2 LED Connector (LED_LAN2) Pinouts.....	33
Table 3-19: mSATA Slot Pinouts.....	35
Table 3-20: Parallel Port Connector Pinouts	36
Table 3-21: PCIe Mini Slot Pinouts.....	37
Table 3-22: SATA 3Gb/s Drive Connector Pinouts.....	38
Table 3-23: SATA 6Gb/s Drive Connector Pinouts.....	39
Table 3-24: Serial Port Connector Pinouts	40
Table 3-25: RS-422/485 Connector Pinouts	40
Table 3-26: DB-9 RS-422/485 Pinouts	41
Table 3-27: SMBus Connector Pinouts	41

WSB-H810 PICMG 1.0 CPU Card

Table 3-28: SPI Flash Connector Pinouts	42
Table 3-29: SPI EC Flash Connector Pinouts	43
Table 3-30: TPM Connector Pinouts	44
Table 3-31: USB 2.0 Connector Pinouts	45
Table 3-32: USB 2.0 Connector (Type A) Pinouts	45
Table 3-33: USB 3.0 Connector Pinouts	46
Table 3-34: LAN Pinouts	47
Table 3-35: Connector LEDs	48
Table 3-36: USB 2.0 Port Pinouts	48
Table 3-37: VGA Connector Pinouts	49
Table 4-1: AT/ATX Power Mode Switch Settings	65
Table 4-2: Flash Descriptor Security Override Jumper Settings	65
Table 4-3: BIOS Options and Configured USB Ports	66
Table 4-4: USB Power Source Setup	67
Table 5-1: BIOS Navigation Keys	72
Table 5-2: BIOS Options and Configured USB Ports	100



BIOS Menus

BIOS Menu 1: Main	73
BIOS Menu 2: Advanced	75
BIOS Menu 3: ACPI Configuration	75
BIOS Menu 4: RTC Wake Settings	76
BIOS Menu 5: TPM Configuration	78
BIOS Menu 6: CPU Configuration	79
BIOS Menu 7: SATA Configuration	81
BIOS Menu 8: USB Configuration	83
BIOS Menu 9: F81866 Super IO Configuration	84
BIOS Menu 10: Serial Port n Configuration Menu	84
BIOS Menu 11: IrDA Configuration Menu.....	89
BIOS Menu 12: Parallel Port Configuration Menu	91
BIOS Menu 13: iWDD H/W Monitor	92
BIOS Menu 14: Smart Fan Mode Configuration	93
BIOS Menu 15: Serial Port Console Redirection	95
BIOS Menu 16: IEI Feature	97
BIOS Menu 17: Chipset	98
BIOS Menu 18: PCH-IO Configuration	99
BIOS Menu 19: PCI Express Configuration	101
BIOS Menu 20: MINI-PCIE	101
BIOS Menu 21: PCH Azalia Configuration	103
BIOS Menu 22: System Agent (SA) Configuration	104
BIOS Menu 23: Graphics Configuration	105
BIOS Menu 24: LCD Control	106
BIOS Menu 25: NB PCIe Configuration	107
BIOS Menu 26: Memory Configuration.....	108
BIOS Menu 27: Boot	109
BIOS Menu 28: Security	111
BIOS Menu 29: Save & Exit.....	112

Chapter

1

Introduction

1.1 Introduction

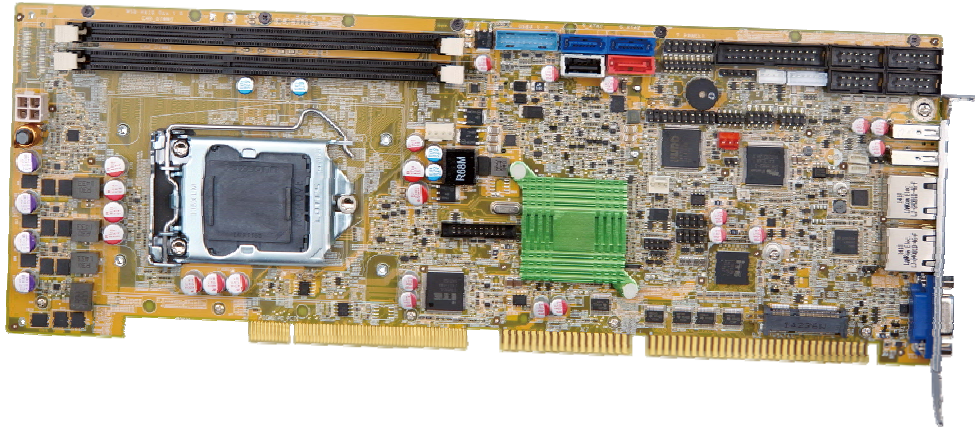


Figure 1-1: WSB-H810

The WSB-H810 PICMG 1.0 CPU card is a Socket LGA1150 Intel® Core™ i7/i5/i3, Pentium® or Celeron® processor platform that supports two 240-pin 1600/1333 MHz dual-channel DDR3/DDR3L DIMMs up to 16 GB.

The WSB-H810 supports two GbE interfaces through the Intel® Gigabit Ethernet controllers. The integrated Intel® H81 chipset supports two SATA 6Gb/s and one SATA 3Gb/s drives. In addition, the WSB-H810 includes VGA and iDP interfaces for dual independent display.

Two USB 3.0 by pin header, two USB 2.0 on the rear panel, four USB 2.0 by pin header, one USB 2.0 by internal Type A connector, four RS-232, one PCIe Mini slot and one mSATA slot provide flexible expansion options. High Definition Audio (HDA) support ensures HDA devices can be easily implemented on the WSB-H810.

WSB-H810 PICMG 1.0 CPU Card

1.2 Features

Some of the WSB-H810 motherboard features are listed below:

- PICMG 1.0 full-size solution
- 4th generation LGA1150 Intel® Core™ i7/i5/i3, Pentium® or Celeron® processor supported
- Intel® H81 PCH
- Two 240-pin 1600/1333 MHz dual-channel DDR3/DDR3L DIMMs support up to 16 GB
- Dual independent display by VGA and iDP interfaces
- Two Intel® Gigabit Ethernet connectors
- SATA 6Gb/s and USB 3.0 supported
- One PCIe Mini slot and one mSATA slot
- Stiffener bars prevent the PCB bending and damage of components on the solder side
- TPM V1.2 hardware security function supported by the TPM module
- High Definition Audio
- RoHS compliant

1.3 Connectors

The connectors on the WSB-H810 are shown in the figure below.

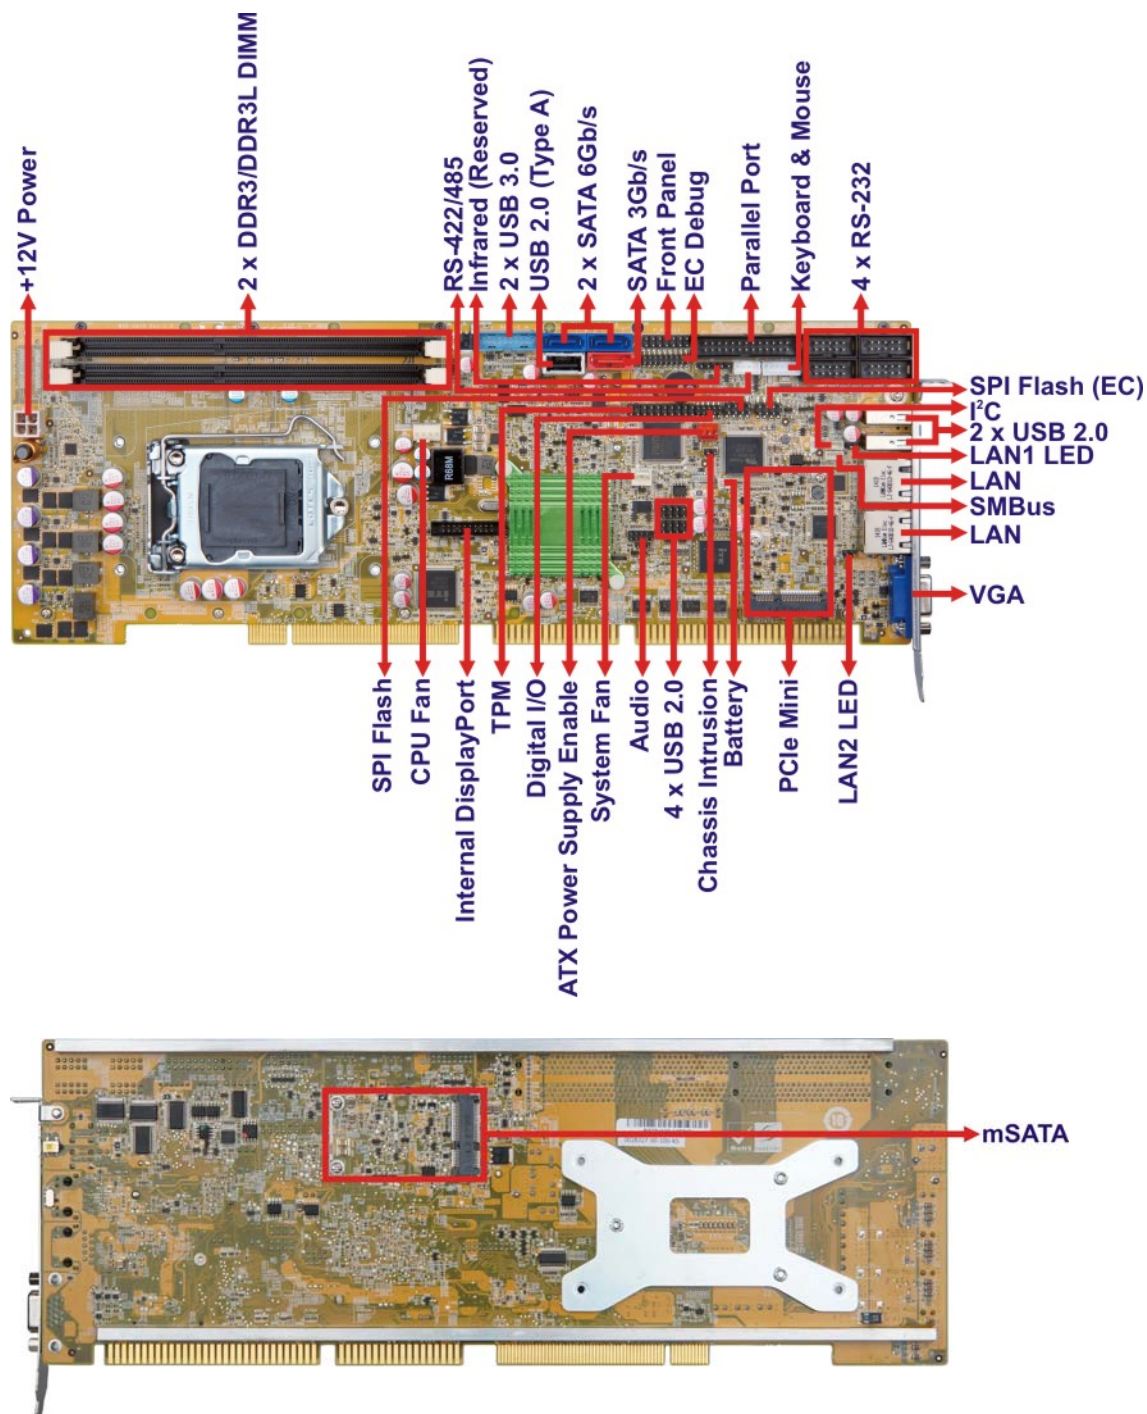


Figure 1-2: Connectors

WSB-H810 PICMG 1.0 CPU Card

1.4 Dimensions

The main dimensions of the WSB-H810 are shown in the diagram below.

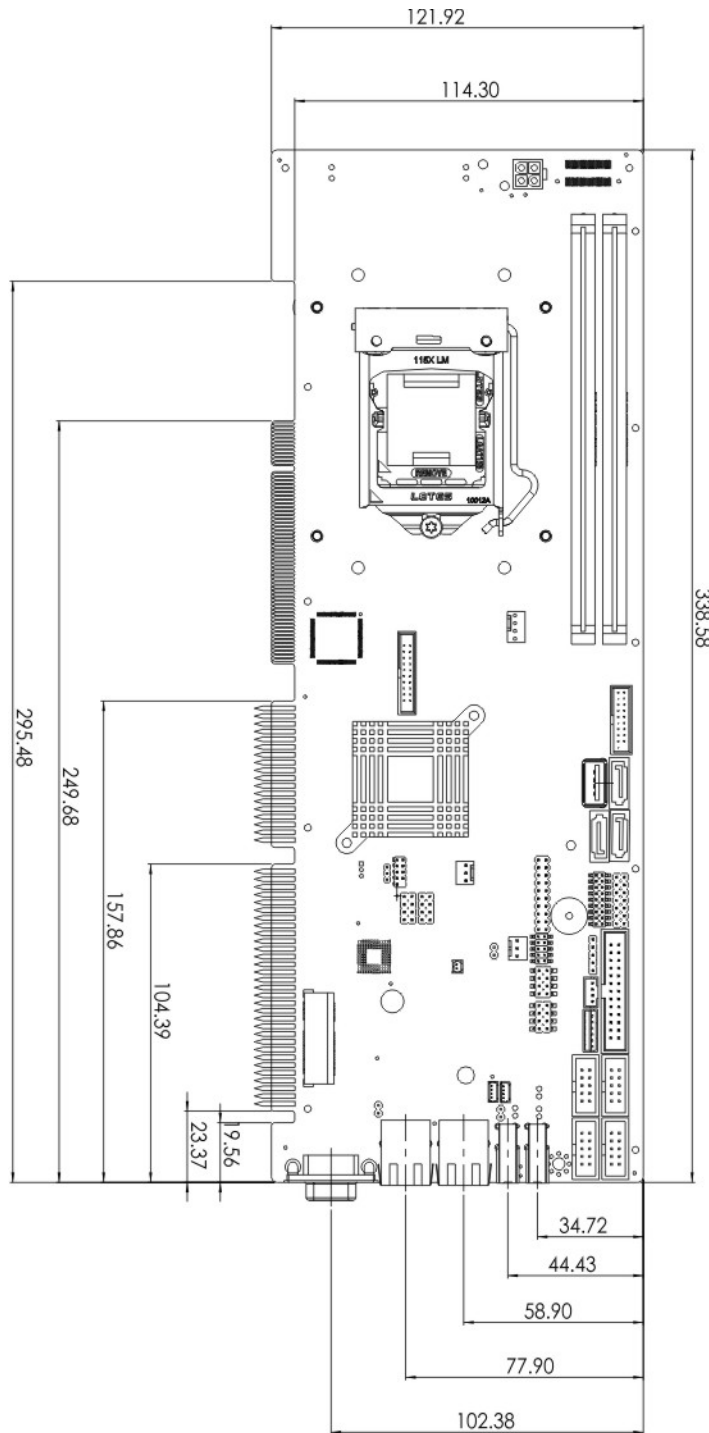


Figure 1-3: WSB-H810 Dimensions (mm)

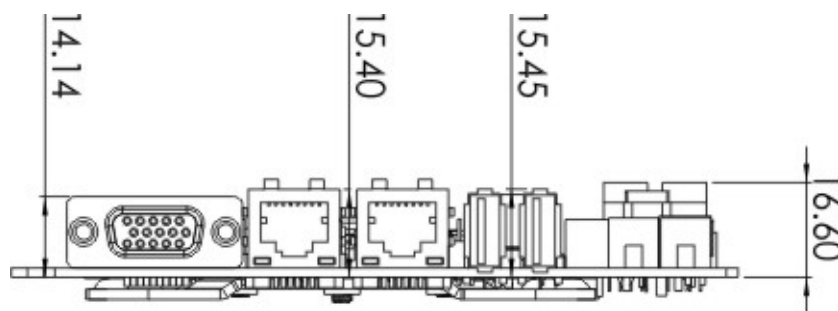


Figure 1-4: External Interface Panel Dimensions (mm)

WSB-H810 PICMG 1.0 CPU Card

1.5 Data Flow

Figure 1-5 shows the data flow between the system chipset, the CPU and other components installed on the motherboard.

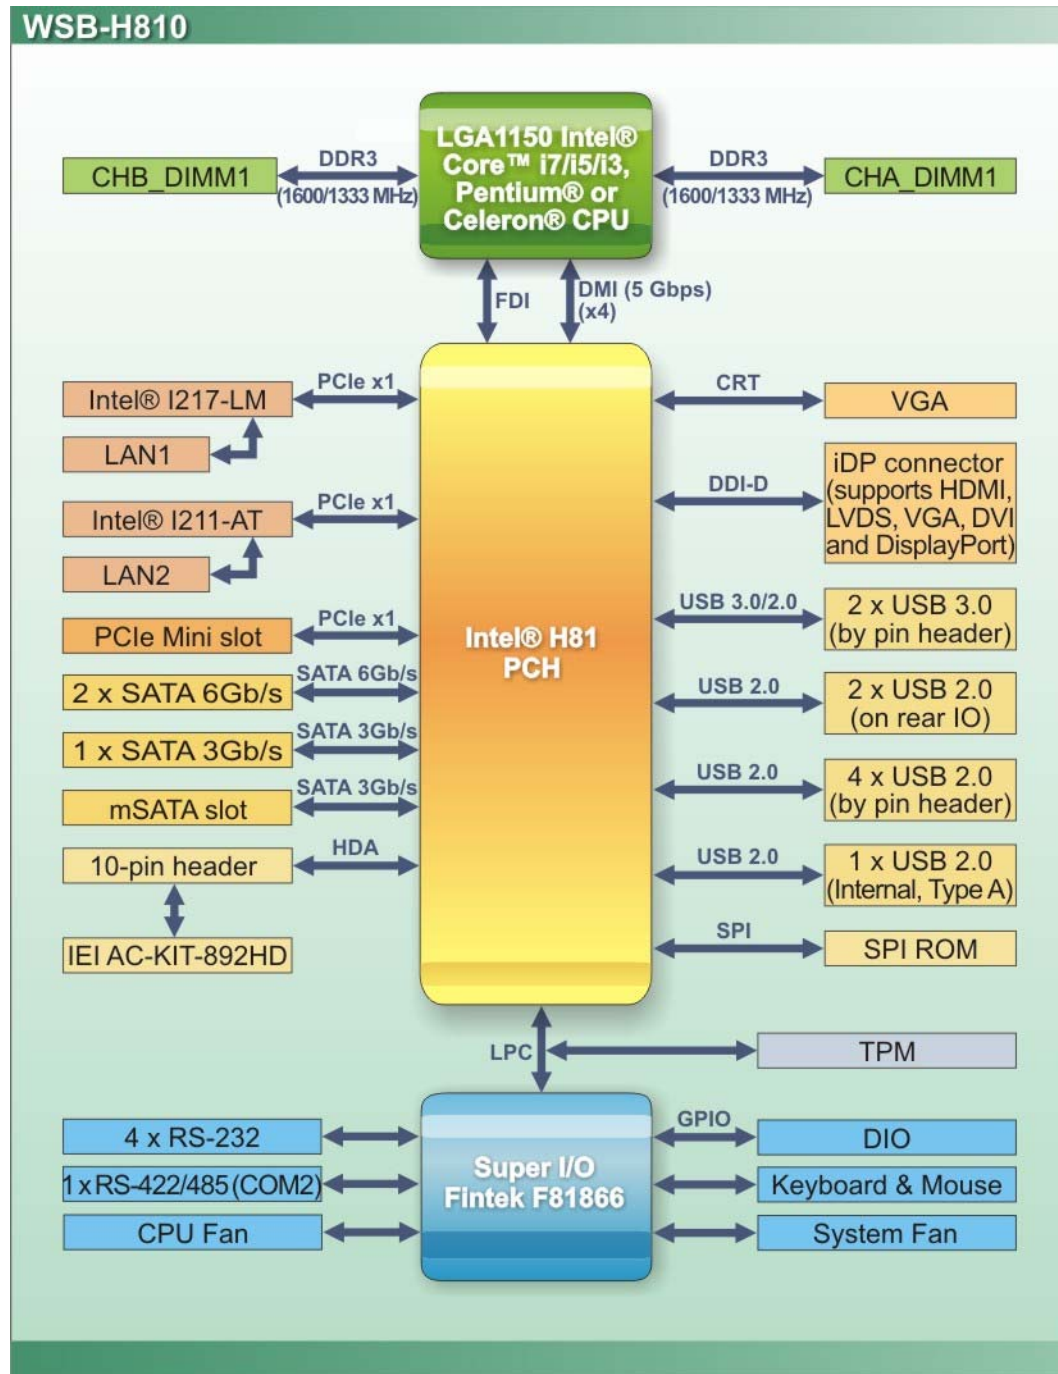


Figure 1-5: Data Flow Diagram



1.6 Technical Specifications

The WSB-H810 technical specifications are listed below.

Specification/Model	WSB-H810
Form Factor	PICMG 1.0
CPU Supported	4th generation LGA1150 Intel® Core™ i7/i5/i3, Pentium® or Celeron® CPU
PCH	Intel® H81
Memory	Two 240-pin 1600/1333 MHz dual-channel unbuffered DDR3/DDR3L SDRAM DIMMs support up to 16 GB
Graphics Engine	Intel® HD Graphics Gen 7.5 supports DirectX 11.1, OpenCL 1.2, OpenGL 3.2, Full MPEG2, VC1, AVC Decode
Display Output	Dual independent display One VGA (up to 1920x1200@60 Hz) One iDP interface for HDMI, LVDS, VGA, DVI and DisplayPort (up to 3840x2160@60 Hz)
Ethernet Controllers	LAN1: Intel® I217-LM Ethernet controller LAN2: Intel® I211-AT Ethernet controller
Audio	Supports 7.1 channel HD Audio by IEI AC-KIT-892HD kit
BIOS	UEFI BIOS
Super I/O Controller	Fintek F81866
Watchdog Timer	Software programmable supports 1~255 sec. system reset
Expansion	One PCIe Mini slot One mSATA slot (SATA 3Gb/s signal) PCI signal and ISA signal via golden finger
I/O Interface Connectors	
Audio Connector	One internal audio connector (10-pin header)
Chassis Intrusion	One 2-pin header
Digital I/O	8-bit digital I/O



WSB-H810 PICMG 1.0 CPU Card

Specification/Model	WSB-H810
Ethernet	Two RJ-45 GbE ports
Fan	One 4-pin smart fan connector (CPU fan) One 3-pin smart fan connector (system fan)
Front Panel	One 14-pin header (power LED, HDD LED, speaker, power button, reset button)
I²C	One 4-pin wafer connector
Infrared (Reserved)	One via 5-pin header
Keyboard and Mouse	One 6-pin wafer connector
LAN LEDs	Two 2-pin headers
Parallel Port	One parallel port via internal 26-pin box header
Serial ATA	Two SATA 6Gb/s connectors (support AHCI, no RAID) One SATA 3Gb/s connector (supports AHCI, no RAID)
Serial Ports	Four RS-232 via internal box headers One RS-422/485 via internal 4-pin wafer connector
SMBus	One 4-pin wafer connector
TPM	One via 20-pin header
USB Ports	Two USB 3.0 ports by pin header Two USB 2.0 ports on rear IO Four USB 2.0 ports by two pin headers One USB 2.0 port by internal Type A connector
Environmental and Power Specifications	
Power Supply	5V/12V, AT/ATX power supported
Power Consumption	5V@3.4A , 12V@0.36A, Vcore_12V@7.48A, 3.3V@1.42A, 5VSB@0.13A (3.9 GHz Intel® Core™ i7-4770K CPU with two 4 GB 1333 MHz DDR3 memory)
Operating Temperature	-20°C ~ 60°C
Storage Temperature	-30°C ~ 70°C
Humidity	5% ~ 95% (non-condensing)

Specification/Model	WSB-H810
Physical Specifications	
Dimensions	338 mm x 122 mm
Weight (GW/NW)	1000 g/260 g

Table 1-1: WSB-H810 Specifications

Chapter

2

Packing List

2.1 Anti-static Precautions



WARNING!

Static electricity can destroy certain electronics. Make sure to follow the ESD precautions to prevent damage to the product, and injury to the user.

Make sure to adhere to the following guidelines:

- ***Wear an anti-static wristband:*** Wearing an anti-static wristband can prevent electrostatic discharge.
- ***Self-grounding:*** Touch a grounded conductor every few minutes to discharge any excess static buildup.
- ***Use an anti-static pad:*** When configuring any circuit board, place it on an anti-static mat.
- ***Only handle the edges of the PCB:*** Don't touch the surface of the motherboard. Hold the motherboard by the edges when handling.

2.2 Unpacking Precautions

When the WSB-H810 is unpacked, please do the following:

- Follow the anti-static guidelines above.
- Make sure the packing box is facing upwards when opening.
- Make sure all the packing list items are present.

WSB-H810 PICMG 1.0 CPU Card

2.3 Packing List

**NOTE:**

If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the IEI reseller or vendor the WSB-H810 was purchased from or contact an IEI sales representative directly by sending an email to sales@ieiworld.com.

The WSB-H810 is shipped with the following components:

Quantity	Item and Part Number	Image
1	WSB-H810 CPU card	
2	SATA cable	
1	One Key Recovery CD	
1	Utility CD	
1	Quick Installation Guide	

Table 2-1: Packing List

2.4 Optional Items

The following are optional components which may be separately purchased:

Item and Part Number	Image
Dual RS-232 cable, 230 mm, P=2.54 (P/N: 19800-000051-RS)	
RS-422/485 cable, 200 mm (P/N: 32205-003800-300-RS)	
Dual-port USB 3.0 cable with bracket (P/N: 19800-010500-200-RS)	
Dual-port USB cable with bracket, 300 mm, P=2.54 (P/N: 19800-003100-300-RS)	
KB/MS cable with bracket (P/N: 19800-000075-RS)	
SATA power cable (P/N: 32102-000100-200-RS)	
LPT flat cable, 280 mm (P/N: 32200-015100-RS)	
LGA1150 cooler kit ,high-performance compatible, 65W (P/N: CF-1150SB-R11)	

WSB-H810 PICMG 1.0 CPU Card

Item and Part Number	Image
LGA1150 cooler kit, 1U chassis compatible, 65W (P/N: CF-1150SC-R10)	
LGA1150 cooler kit, high-performance compatible, 95W (P/N: CF-1150SE-R10)	
LGA1150 cooler kit, high-performance compatible, 54W (P/N: CF-1150SF-R10)	
DisplayPort to HDMI converter board (for IEI iDP connector) (P/N: DP-HDMI-R10)	
DisplayPort to LVDS converter board (for IEI iDP connector) (P/N: DP-LVDS-R10)	
DisplayPort to VGA converter board (for IEI iDP connector) (P/N: DP-VGA-R10)	
DisplayPort to DVI-D converter board (for IEI iDP connector) (P/N: DP-DVI-R10)	
DisplayPort to DisplayPort converter board (for IEI iDP connector) (P/N: DP-DP-R10)	



WSB-H810 PICMG 1.0 CPU Card

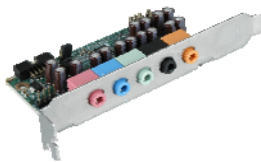
Item and Part Number	Image
7.1-channel HD audio kit with Realtek ALC892 audio codec supporting dual audio stream (P/N: AC-KIT-892HD-R10)	
20-pin Infineon TPM module, software management tool, firmware v3.17 (P/N: TPM-IN01-R11)	

Table 2-2: Optional Items



Chapter

3

Connectors

3.1 Peripheral Interface Connectors

This chapter details all the jumpers and connectors.

3.1.1 WSB-H810 Layout

The figures below show all the connectors and jumpers.

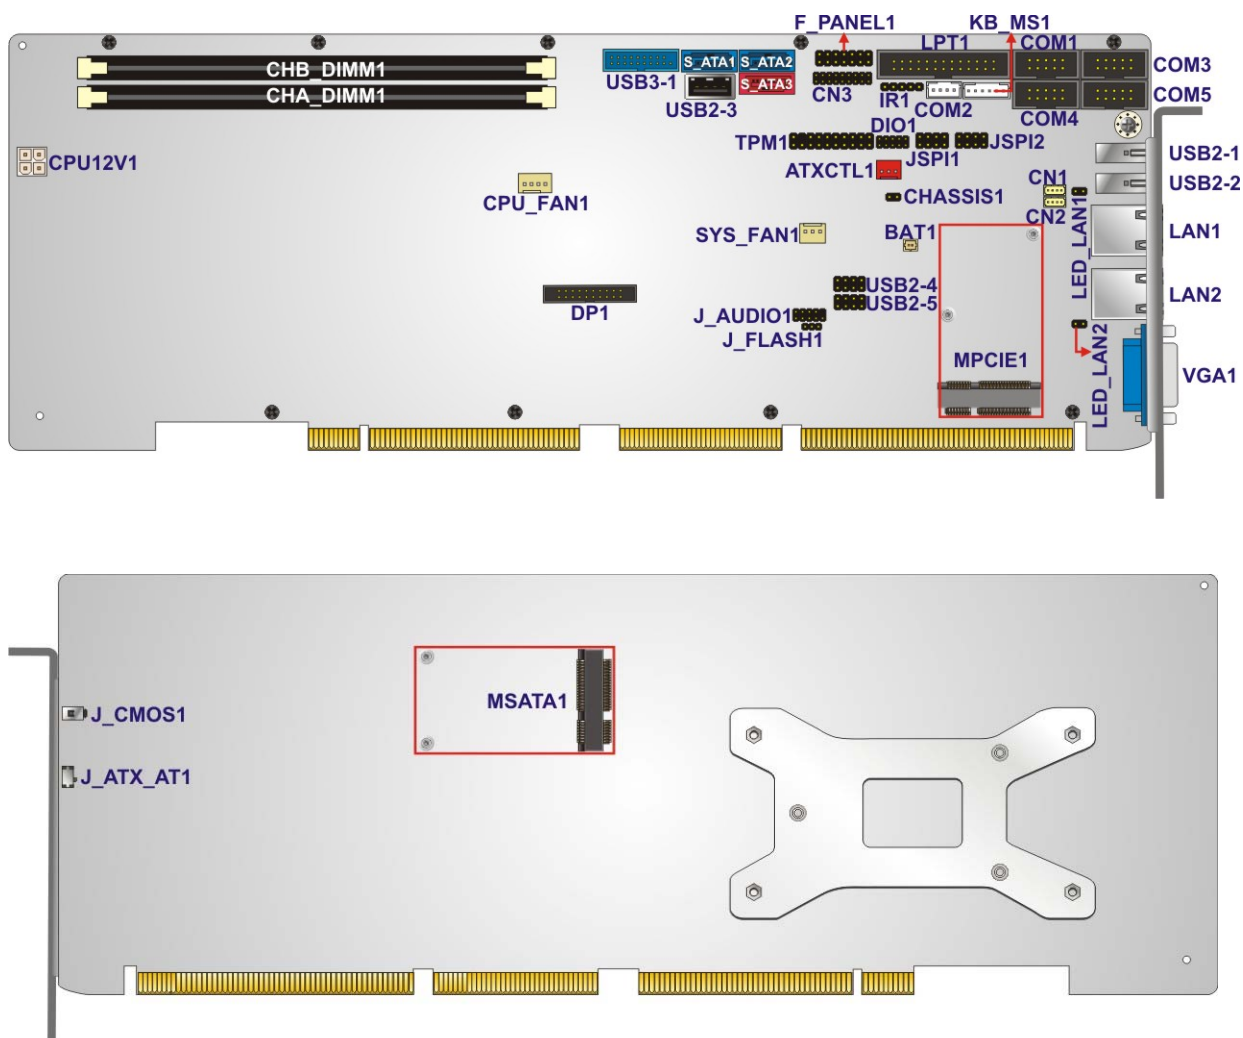


Figure 3-1: Connectors and Jumpers

WSB-H810 PICMG 1.0 CPU Card

3.1.2 Peripheral Interface Connectors

The table below lists all the connectors on the board.

Connector	Type	Label
+12V power connector	4-pin Molex power connector	CPU12V1
ATX power supply enable connector	3-pin wafer	ATXCTL1
Audio kit connector	10-pin header	J_AUDIO1
Battery connector	2-pin wafer	BAT1
Chassis intrusion connector	2-pin header	CHASSIS1
DDR3 DIMM sockets	240-pin socket	CHA_DIMM1 CHB_DIMM1
Digital I/O connector	10-pin header	DIO1
EC debug connector	18-pin header	CN3
Fan connector (CPU)	4-pin wafer	CPU_FAN1
Fan connector (system)	3-pin wafer	SYS_FAN1
Front panel connector	14-pin header	F_PANEL1
I ² C connector	4-pin wafer	CN1
Infrared connector (reserved)	5-pin header	IR1
Internal DisplayPort connector	19-pin box header	DP1
Keyboard and mouse connector	6-pin wafer	KB_MS1
LAN LED connectors	2-pin header	LED_LAN1, LED_LAN2
mSATA slot	PCIe Mini	MSATA1
Parallel port connector	26-pin box header	LPT1
PCIe Mini slot	PCIe Mini	MPCIE1
SATA 3Gb/s drive connector	7-pin SATA connector	SATA_3
SATA 6Gb/s drive connectors	7-pin SATA connector	S_ATA1, S_ATA2,



Connector	Type	Label
Serial port, RS-232	10-pin box header	COM1, COM3, COM4, COM5
Serial port, RS-422/485	4-pin wafer	COM2
SMBus connector	4-pin wafer	CN2
SPI flash connector	8-pin header	JSPI1
SPI flash connector (EC)	8-pin header	JSPI2
TPM connector	20-pin header	TPM1
USB 2.0 connector (Type A)	Type A	USB2-3
USB 2.0 connectors	8-pin header	USB2-4, USB2-5
USB 3.0 connector	19-pin box header	USB3-1

Table 3-1: Peripheral Interface Connectors

3.1.3 External Interface Panel Connectors

The table below lists the connectors on the external I/O panel.

Connector	Type	Label
Ethernet connectors	RJ-45	LAN1, LAN2
USB 2.0 ports	USB 2.0	USB2-1, USB2-2
VGA connector	15-pin female	VGA1

Table 3-2: Rear Panel Connectors



WSB-H810 PICMG 1.0 CPU Card

3.2 Internal Peripheral Connectors

The section describes all of the connectors on the WSB-H810.

3.2.1 +12V Power Connector

- CN Label:** CPU12V1
- CN Type:** 4-pin Molex power connector, p=4.2 mm
- CN Location:** See **Figure 3-2**
- CN Pinouts:** See **Table 3-3**

This connector provides power to the CPU.

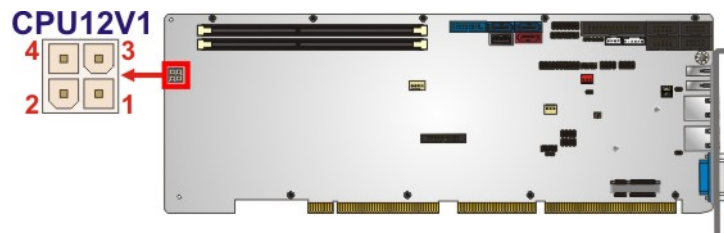


Figure 3-2: +12V Power Connector Pinout Location

Pin	Description	Pin	Description
1	GND	2	GND
3	+12V	4	+12V

Table 3-3: +12V Power Connector Pinouts

3.2.2 ATX Power Supply Enable Connector

- CN Label:** ATXCTL1
- CN Type:** 3-pin wafer, p=2.54 mm
- CN Location:** See **Figure 3-3**
- CN Pinouts:** See **Table 3-4**

The ATX power supply enable connector enables the WSB-H810 to be connected to an ATX power supply. To enable an ATX power supply, the AT and ATX power mode selection switch must also be configured. Please refer to Chapter 4 for more details.

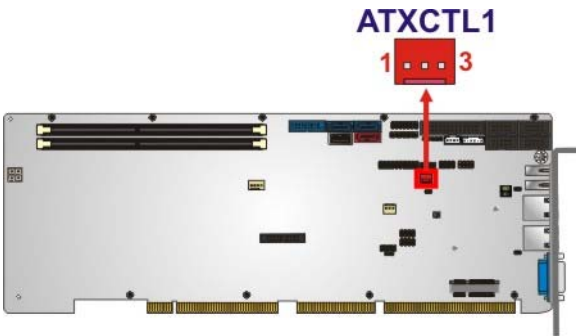


Figure 3-3: ATX Power Supply Enable Connector Location

Pin	Description
1	GND
2	PS_ON#
3	5VSB

Table 3-4: ATX Power Supply Enable Connector Pinouts

3.2.3 Audio Kit Connector

- CN Label: J_AUDIO1
- CN Type: 10-pin header, p=2 mm
- CN Location: See Figure 3-4
- CN Pinouts: See Table 3-5

This connector connects to an external audio kit.

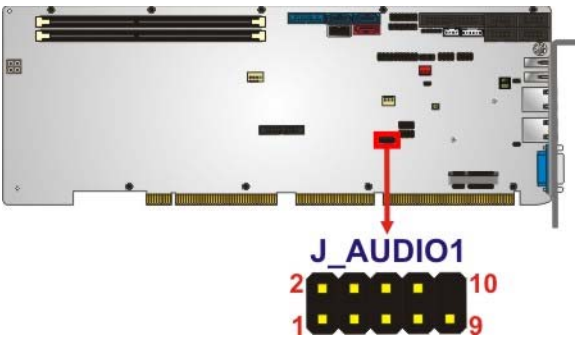


Figure 3-4: Audio Kit Connector Location

Pin	Description	Pin	Description
1	HDA_SYNC	2	HDA_BIT_CLK

WSB-H810 PICMG 1.0 CPU Card

Pin	Description	Pin	Description
3	HDA_SDOUT	4	HDA_SPKR
5	HDA_SDIN	6	HDA_RST#
7	HDA_VCC	8	HDA_GND
9	HDA_+12V	10	HDA_GND

Table 3-5: Audio Kit Connector Pinouts

3.2.4 Battery Connector

**CAUTION:**

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

- CN Label:** BAT1
- CN Type:** 2-pin wafer, p=1.25 mm
- CN Location:** See **Figure 3-5**
- CN Pinouts:** See **Table 3-6**

This is connected to the system battery. The battery provides power to the system clock to retain the time when power is turned off.

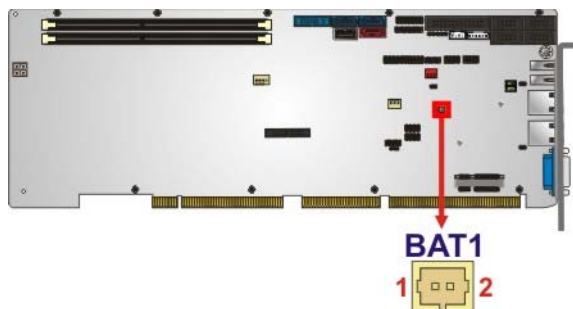


Figure 3-5: Battery Connector Location

Pin	Description
1	Battery+
2	GND

Table 3-6: Battery Connector Pinouts

3.2.5 Chassis Intrusion Connector

- CN Label:CHASSIS1
- CN Type:2-pin header, p=2.54 mm
- CN Location:See Figure 3-6
- CN Pinouts:See Table 3-7

The chassis intrusion connector is for a chassis intrusion detection sensor or switch that detects if a chassis component is removed or replaced.

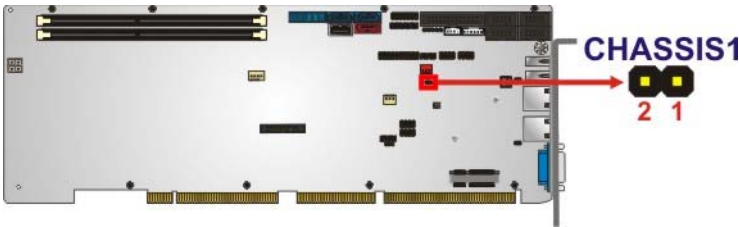


Figure 3-6: Chassis Intrusion Connector Location

Pin	Description
1	+3.3VSB
2	CHASSIS OPEN

Table 3-7: Chassis Intrusion Connector Pinouts

3.2.6 DDR3 DIMM Slots

- CN Label:CHA_DIMM1, CHB_DIMM1
- CN Type:DDR3 DIMM slot
- CN Location:See Figure 3-7

The DIMM slots are for DDR3/DDR3L DIMM memory modules.

WSB-H810 PICMG 1.0 CPU Card

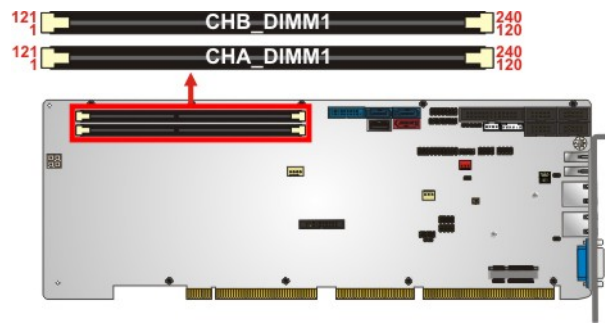


Figure 3-7: DDR3 DIMM Slot Locations

3.2.7 Digital I/O Connector

- CN Label:** DIO1
- CN Type:** 10-pin header, p=2 mm
- CN Location:** See Figure 3-8
- CN Pinouts:** See Table 3-8

The digital I/O connector provides programmable input and output for external devices.

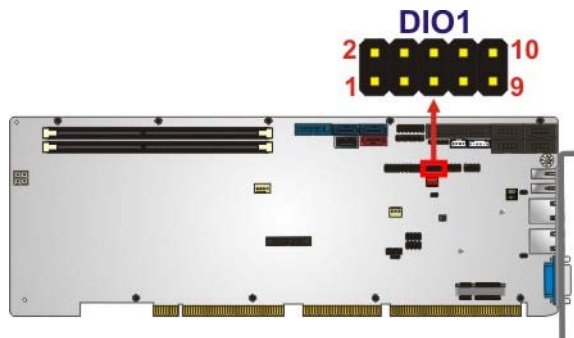


Figure 3-8: Digital I/O Connector Location

Pin	Description	Pin	Description
1	GND	2	VCC
3	Output 3	4	Output 2
5	Output 1	6	Output 0
7	Input 3	8	Input 2
9	Input 1	10	Input 0

Table 3-8: Digital I/O Connector Pinouts

3.2.8 EC Debug Connector

- CN Label: CN3
- CN Type: 18-pin header, p=2 mm
- CN Location: See Figure 3-9
- CN Pinouts: See Table 3-9

The EC debug connector is used for EC debug.

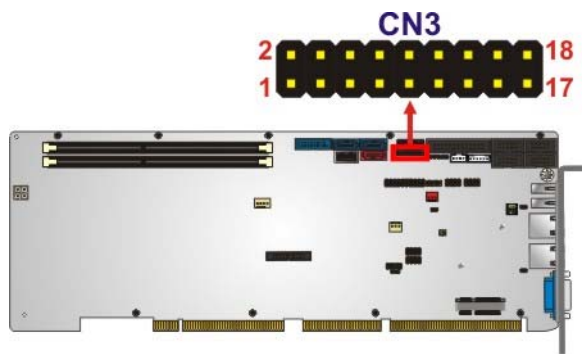


Figure 3-9: EC Debug Connector Location

Pin	Description	Pin	Description
1	EC_EPP_STB#	2	EC_EPP_AFD#
3	EC_EPP_PD0	4	NC
5	EC_EPP_PD1	6	EC_EPP_INIT#
7	EC_EPP_PD2	8	EC_EPP_SLIN#
9	EC_EPP_PD3	10	GND
11	EC_EPP_PD4	12	NC
13	EC_EPP_PD5	14	EC_EPP_BUSY
15	EC_EPP_PD6	16	EC_EPP_KSI5
17	EC_EPP_PD7	18	EC_EPP_KSI4

Table 3-9: EC Debug Connector Pinouts

3.2.9 Fan Connector (CPU)

- CN Label: CPU_FAN1
- CN Type: 4-pin wafer, p=2.54 mm

WSB-H810 PICMG 1.0 CPU Card

CN Location: See **Figure 3-10**

CN Pinouts: See **Table 3-10**

The fan connector attaches to a CPU cooling fan.

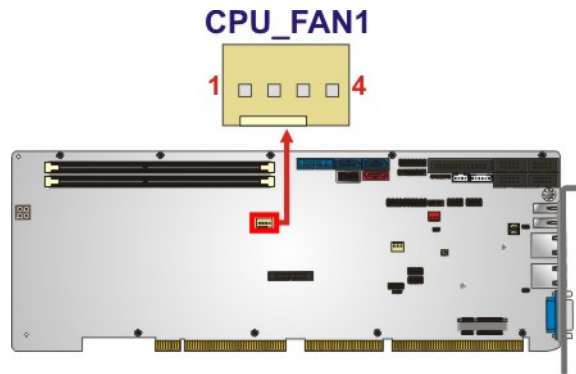


Figure 3-10: CPU Fan Connector Location

Pin	Description
1	GND
2	+12 V
3	FANIO
4	PWM

Table 3-10: CPU Fan Connector Pinouts

3.2.10 Fan Connector (System)

CN Label: **SYS_FAN1**

CN Type: 3-pin wafer, p=2.54 mm

CN Location: See **Figure 3-11**

CN Pinouts: See **Table 3-11**

The fan connector attaches to a system cooling fan.

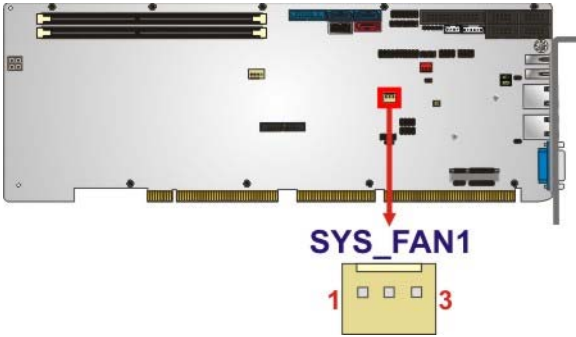


Figure 3-11: System Fan Connector Location

Pin	Description
1	FANIO
2	+12 V (PWM)
3	GND

Table 3-11: System Fan Connector Pinouts

3.2.11 Front Panel Connector

- CN Label: F_PANEL1
- CN Type: 14-pin header, p=2.54 mm
- CN Location: See Figure 3-12
- CN Pinouts: See Table 3-12

The front panel connector connects to the indicator LEDs and buttons on the computer's front panel.

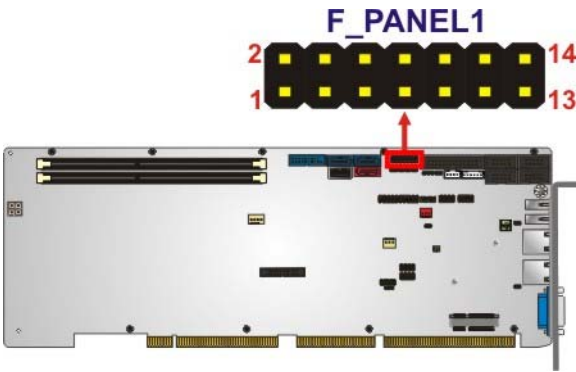


Figure 3-12: Front Panel Connector Location

WSB-H810 PICMG 1.0 CPU Card

Function	Pin	Description	Function	Pin	Description
Power LED	1	+5V	Speaker	2	BEEP_PWR
	3	N/C		4	N/C
	5	GND		6	N/C
Power Button	7	PWRBTN_SW#		8	PC_BEEP
	9	GND	Reset	10	N/C
HDD LED	11	+5V		12	EXTRST-
	13	SATA_LED#		14	GND

Table 3-12: Front Panel Connector Pinouts

3.2.12 I²C Connector

- CN Label:** CN1
- CN Type:** 4-pin wafer, p=1.25 mm
- CN Location:** See **Figure 3-13**
- CN Pinouts:** See **Table 3-13**

The I²C connector is for system debug.

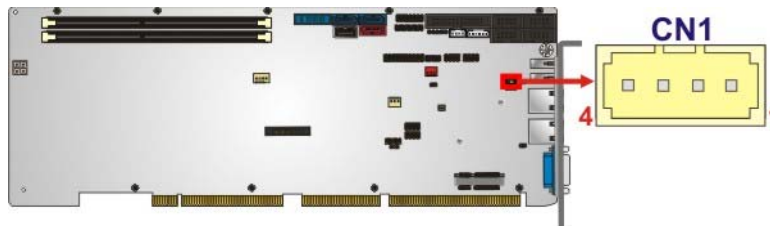


Figure 3-13: I²C Connector Location

Pin	Description
1	GND
2	I2C_DAT
3	I2C_CLK
4	+5V

Table 3-13: I²C Connector Pinouts

3.2.13 Infrared Connector (Reserved)

- CN Label:** IR1
- CN Type:** 5-pin header, p=2.54 mm
- CN Location:** See **Figure 3-14**
- CN Pinouts:** See **Table 3-14**

The infrared connector attaches to an infrared receiver for use with remote controls.

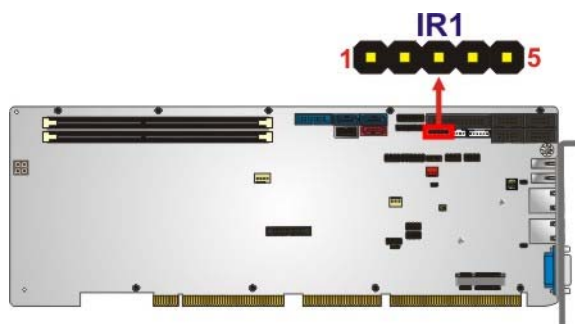


Figure 3-14: Infrared Connector Location

Pin	Description
1	+V5S
2	NC
3	IR-RX
4	GND
5	IR-TX

Table 3-14: Infrared Connector Pinouts

3.2.14 Internal DisplayPort Connector

- CN Label:** DP1
- CN Type:** 19-pin box header, p=2 mm
- CN Location:** See **Figure 3-15**
- CN Pinouts:** See **Table 3-15**

The DisplayPort connector supports HDMI, LVDS, VGA, DVI and DisplayPort graphics interfaces with up to 3840x2160 resolutions.

WSB-H810 PICMG 1.0 CPU Card

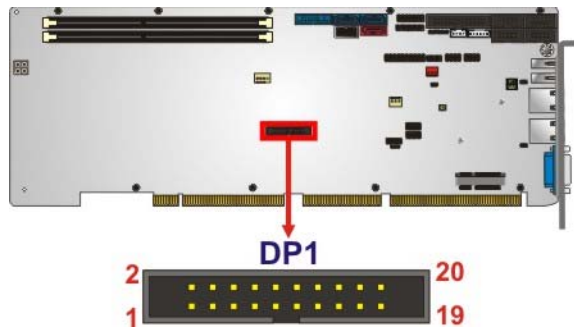


Figure 3-15: Internal DisplayPort Connector Location

Pin	Description	Pin	Description
1	+5V	11	AUXP
2	LANE1N	12	AUXN
3	LANE1P	13	GND
4	GND	14	LANE2P
5	LANE3N	15	LANE2N
6	LANE3P	16	GND
7	GND	17	LANE0P
8	AUX_CTRL_DET_D	18	LANE0N
9	GND	19	+3.3V
10	HPD		

Table 3-15: Internal DisplayPort Connector Pinouts

3.2.15 Keyboard and Mouse Connector

CN Label: KB_MS1

CN Type: 6-pin wafer, p=2 mm

CN Location: See **Figure 3-16**

CN Pinouts: See **Table 3-16**

The keyboard/mouse connector connects to a PS/2 Y-cable that can be connected to a PS/2 keyboard and mouse.

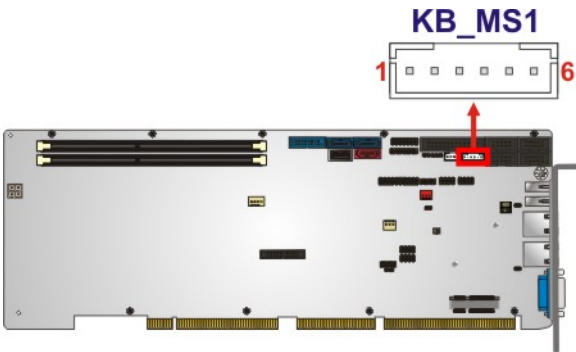


Figure 3-16: Keyboard and Mouse Connector Location

Pin	Description
1	+5 VCC
2	Mouse Data
3	Mouse Clock
4	Keyboard Data
5	Keyboard Clock
6	GROUND

Table 3-16: Keyboard and Mouse Connector Pinouts

3.2.16 LAN LED Connectors

- CN Label:

LED_LAN1, LED_LAN2
- CN Type:

2-pin header, p=2.54 mm
- CN Location:

See Figure 3-17
- CN Pinouts:

See Table 3-17 and Table 3-18

The LAN LED connectors are used to connect to the LAN LED indicators on the chassis to indicate users the link activities of the two LAN ports.

WSB-H810 PICMG 1.0 CPU Card

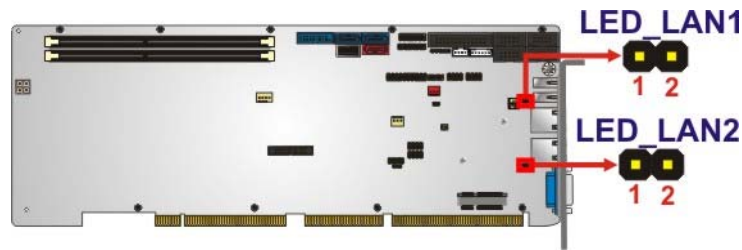


Figure 3-17: LAN LED Connector Locations

Pin	Description
1	+3.3V
2	LAN1_LED_LINK#_ACT

Table 3-17: LAN1 LED Connector (LED_LAN1) Pinouts

Pin	Description
1	+3.3V
2	LAN2_LED_LINK#_ACT

Table 3-18: LAN2 LED Connector (LED_LAN2) Pinouts

3.2.17 mSATA Slot

CN Label:	MSATA1
CN Type:	PCIe Mini
CN Location:	See Figure 3-18
CN Pinouts:	See Table 3-19

The mSATA slot is for installing a full-size mSATA card.

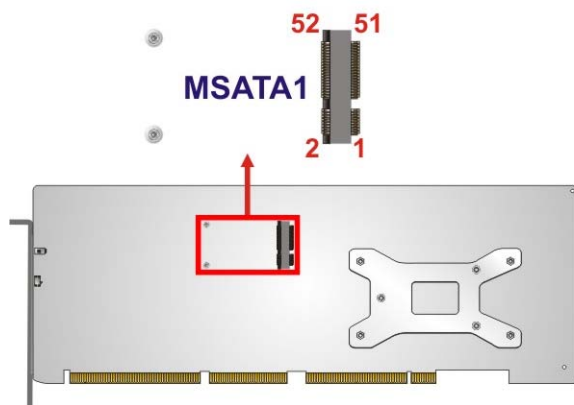


Figure 3-18: mSATA Slot Location

Pin	Description	Pin	Description
1	PCIE_WAKE#	2	+3.3V
3	N/C	4	GND
5	N/C	6	1.5V
7	N/C	8	N/C
9	GND	10	N/C
11	N/C	12	N/C
13	N/C	14	N/C
15	GND	16	N/C
17	N/C	18	GND
19	N/C	20	+3.3V
21	GND	22	PLTRST_N
23	SATA_RX+_C	24	+3.3V
25	SATA_RX-_C	26	GND
27	GND	28	1.5V
29	GND	30	SMB_CLK
31	SATA_TX-_C	32	SMB_DATA
33	SATA_TX+_C	34	GND
35	GND	36	N/C
37	GND	38	N/C
39	+3.3V	40	GND
41	+3.3V	42	N/C
43	+3.3V	44	N/C

WSB-H810 PICMG 1.0 CPU Card

Pin	Description	Pin	Description
45	N/C	46	N/C
47	N/C	48	1.5V
49	N/C	50	GND
51	N/C	52	+3.3V

Table 3-19: mSATA Slot Pinouts

3.2.18 Parallel Port Connector

CN Label: LPT1

CN Type: 26-pin box header, p=2.54 mm

CN Location: See Figure 3-19

CN Pinouts: See Table 3-20

The parallel port connector connects to a parallel port connector interface or some other parallel port device such as a printer.

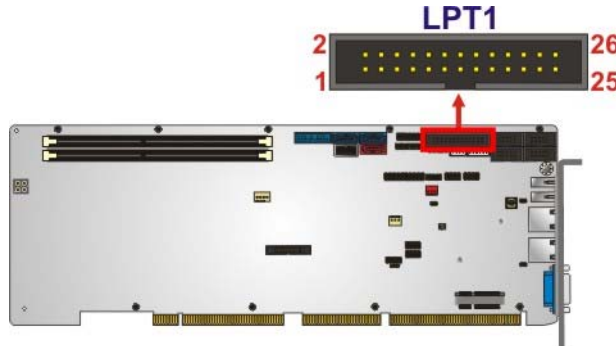


Figure 3-19: Parallel Port Connector Location

Pin	Description	Pin	Description
1	STB	2	AFD
3	PPD0	4	ERROR
5	PPD1	6	INIT
7	PPD2	8	SLIN
9	PPD3	10	GND
11	PPD4	12	GND

Pin	Description	Pin	Description
13	PPD5	14	GND
15	PPD6	16	GND
17	PPD7	18	GND
19	ACK	20	GND
21	BUSY	22	GND
23	PE	24	GND
25	SLCT		

Table 3-20: Parallel Port Connector Pinouts

3.2.19 PCIe Mini Slot

- CN Label: MPCIE1
- CN Type: PCIe Mini
- CN Location: See Figure 3-20
- CN Pinouts: See Table 3-21

The PCIe Mini slot is for installing a full-size or half-size PCIe Mini expansion card.

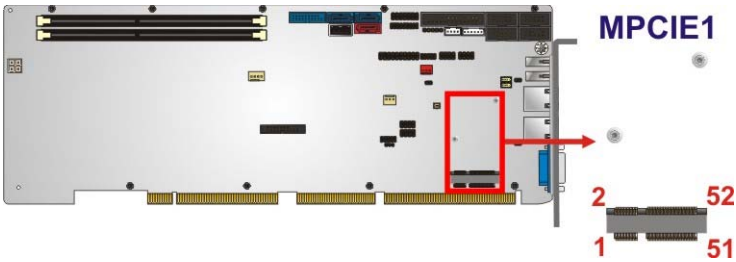


Figure 3-20: PCIe Mini Slot Location

Pin	Description	Pin	Description
1	PCIE_WAKE#	2	+3.3V
3	N/C	4	GND
5	N/C	6	1.5V
7	N/C	8	N/C
9	GND	10	N/C
11	N/C	12	N/C

WSB-H810 PICMG 1.0 CPU Card

Pin	Description	Pin	Description
13	N/C	14	N/C
15	GND	16	N/C
17	N/C	18	GND
19	N/C	20	WLAN_EN
21	GND	22	PLTRST_N
23	PCIE_RX-	24	+3.3V
25	PCIE_RX+	26	GND
27	GND	28	1.5V
29	GND	30	SMB_CLK
31	PCIE_TX-	32	SMB_DATA
33	PCIE_TX+	34	GND
35	GND	36	USB_D-
37	GND	38	USB_D+
39	+3.3V	40	GND
41	+3.3V	42	N/C
43	+3.3V	44	N/C
45	N/C	46	N/C
47	N/C	48	1.5V
49	N/C	50	GND
51	N/C	52	+3.3V

Table 3-21: PCIe Mini Slot Pinouts

3.2.20 SATA 3Gb/s Drive Connector

CN Label:	S_ATA3
CN Type:	7-pin SATA drive connector
CN Location:	See Figure 3-21
CN Pinouts:	See Table 3-22

The SATA drive connector can be connected to SATA drive and supports up to 3Gb/s data transfer rate.

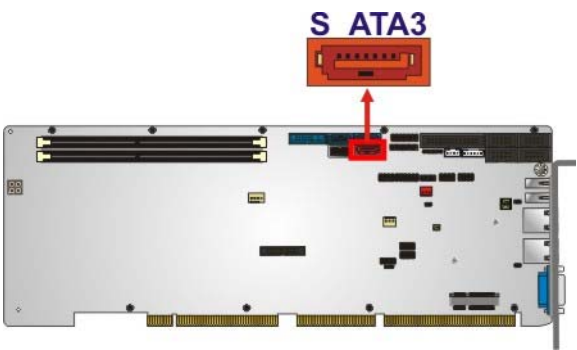


Figure 3-21: SATA 3Gb/s Drive Connector Location

Pin	Description	Pin	Description
1	GND	2	TX +
3	TX-	4	GND
5	RX-	6	RX +
7	GND		

Table 3-22: SATA 3Gb/s Drive Connector Pinouts

3.2.21 SATA 6Gb/s Drive Connectors

- CN Label:

S_ATA1, S_ATA2
- CN Type:

7-pin SATA drive connector
- CN Location:

See Figure 3-22
- CN Pinouts:

See Table 3-23

The SATA drive connectors can be connected to SATA drives and support up to 6Gb/s data transfer rate.

WSB-H810 PICMG 1.0 CPU Card

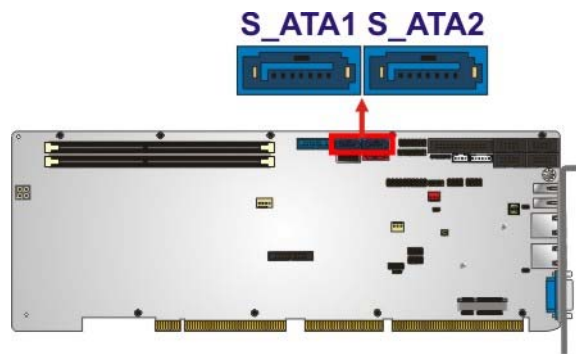


Figure 3-22: SATA 6Gb/s Drive Connector Locations

Pin	Description	Pin	Description
1	GND	2	TX +
3	TX -	4	GND
5	RX -	6	RX +
7	GND		

Table 3-23: SATA 6Gb/s Drive Connector Pinouts

3.2.22 Serial Port Connectors, RS-232

CN Label: COM1, COM3, COM4, COM5

CN Type: 10-pin box header, p=2.54 mm

CN Location: See Figure 3-23

CN Pinouts: See Table 3-24

Each of these connectors provides RS-232 connections.

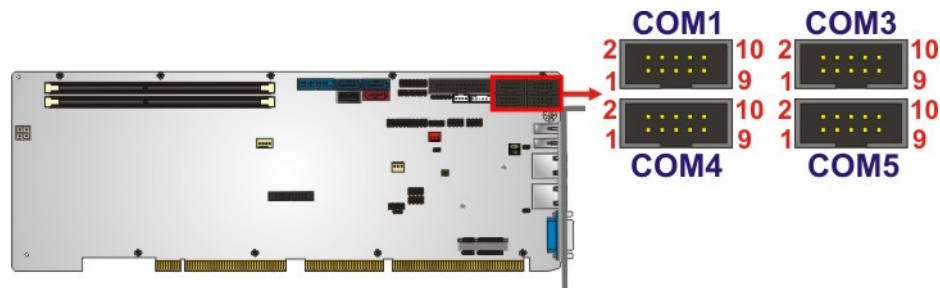


Figure 3-23: Serial Port Connector Locations

Pin	Description	Pin	Description
1	DCD	2	DSR
3	RXD	4	RTS
5	TXD	6	CTS
7	DTR	8	RI
9	GND	10	N/C

Table 3-24: Serial Port Connector Pinouts

3.2.23 Serial Port Connector, RS-422/485

- CN Label:COM2
- CN Type:4-pin wafer, p=2 mm
- CN Location:See Figure 3-24
- CN Pinouts:See Table 3-25

This connector provides RS-422 or RS-485 communications.

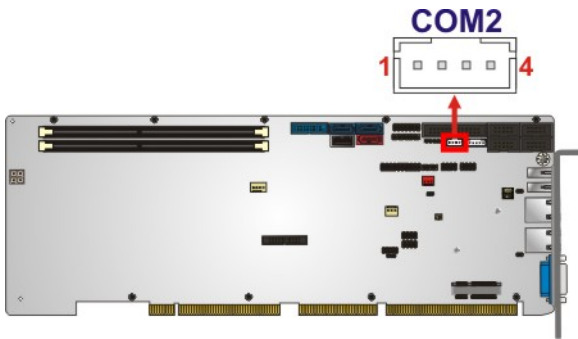


Figure 3-24: RS-422/485 Connector Location

Pin	Description
1	RXD422-
2	RXD422+
3	TXD422+ /TXD485+
4	TXD422-/TXD485-

Table 3-25: RS-422/485 Connector Pinouts

Use the optional RS-422/485 cable to connect to a serial device. The pinouts of the DB-9 connector are listed below.

WSB-H810 PICMG 1.0 CPU Card

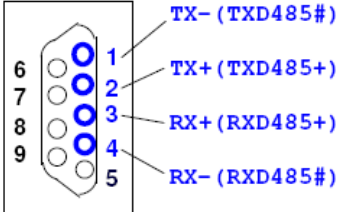
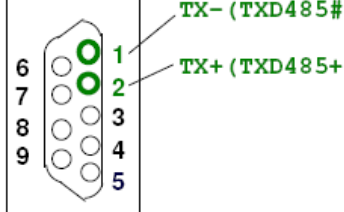
RS-422 Pinouts	RS-485 Pinouts
	

Table 3-26: DB-9 RS-422/485 Pinouts

3.2.24 SMBus Connector

CN Label:	CN2
CN Type:	4-pin wafer, p=1.25 mm
CN Location:	See Figure 3-25
CN Pinouts:	See Table 3-27

The SMBus (System Management Bus) connector provides low-speed system management communications.

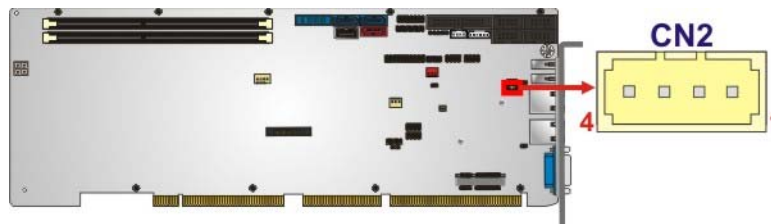


Figure 3-25: SMBus Connector Location

Pin	Description
1	GND
2	SMB_DATA
3	SMB_CLK
4	+5V

Table 3-27: SMBus Connector Pinouts

3.2.25 SPI Flash Connector

- CN Label: JSPI1
- CN Type: 8-pin header, p=2.54 mm
- CN Location: See Figure 3-26
- CN Pinouts: See Table 3-28

The SPI flash connector is used to flash the BIOS.

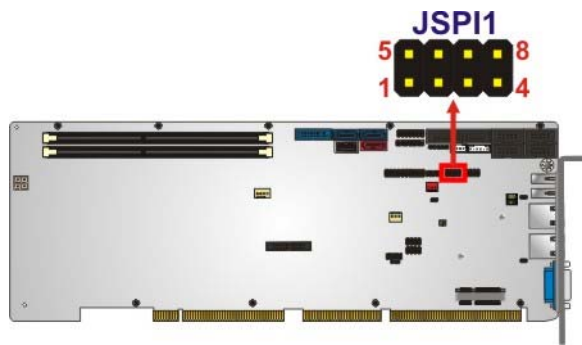


Figure 3-26: SPI Flash Connector Location

Pin	Description	Pin	Description
1	+3.3V	2	SPI_CS#
3	SPI_SO	4	NC
5	GND	6	SPI_CLK
7	SPI_SI	8	NC

Table 3-28: SPI Flash Connector Pinouts

3.2.26 SPI Flash Connector (EC)

- CN Label: JSPI2
- CN Type: 8-pin header, p=2.54 mm
- CN Location: See Figure 3-27
- CN Pinouts: See Table 3-29

The SPI flash connector is used to flash the EC ROM.

WSB-H810 PICMG 1.0 CPU Card

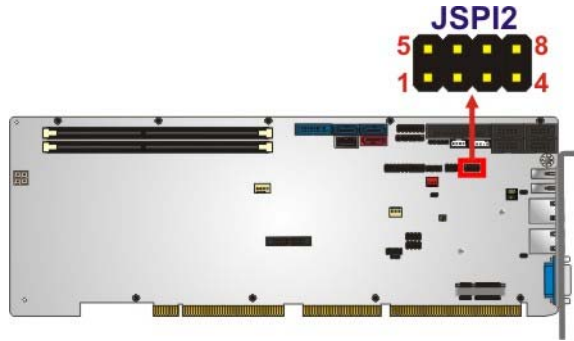


Figure 3-27: SPI EC Flash Connector Location

Pin	Description	Pin	Description
1	+3.3V	2	SPI_CS#
3	SPI_SO	4	NC
5	GND	6	SPI_CLK
7	SPI_SI	8	NC

Table 3-29: SPI EC Flash Connector Pinouts

3.2.27 TPM Connector

- CN Label:** TPM1
- CN Type:** 20-pin header, p=2.54 mm
- CN Location:** See **Figure 3-28**
- CN Pinouts:** See **Table 3-30**

The TPM connector connects to a TPM module.

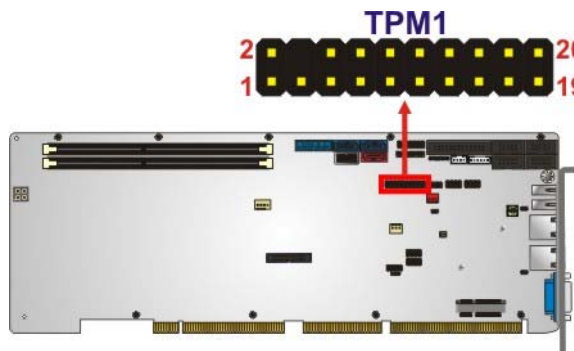


Figure 3-28: TPM Connector Location

Pin	Description	Pin	Description
1	LCLK	2	GND
3	LFRAME#	4	KEY
5	LRERST#	6	+5V
7	LAD3	8	LAD2
9	+3.3V	10	LAD1
11	LAD0	12	GND
13	SCL	14	SDA
15	SB3V	16	SERIRQ
17	GND	18	GLKRUN#
19	LPCPD#	20	LDRQ#

Table 3-30: TPM Connector Pinouts

3.2.28 USB 2.0 Connectors

- CN Label: USB2-4, USB2-5
- CN Type: 8-pin header, p=2.54 mm
- CN Location: See Figure 3-29
- CN Pinouts: See Table 3-31

The USB 2.0 connectors connect to USB 2.0/1.1 devices. Each pin header provides two USB 2.0 ports.

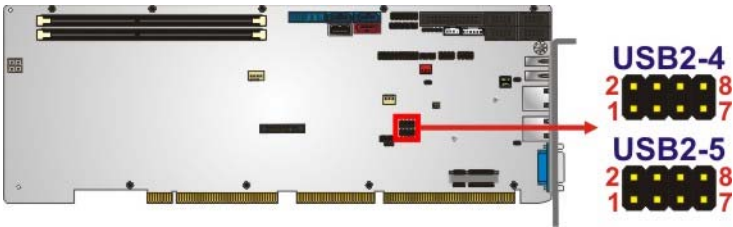


Figure 3-29: USB 2.0 Connector Pinout Locations

Pin	Description	Pin	Description
1	VCC	2	GND
3	DATA-	4	DATA+
5	DATA+	6	DATA-

WSB-H810 PICMG 1.0 CPU Card

Pin	Description	Pin	Description
7	GND	8	VCC

Table 3-31: USB 2.0 Connector Pinouts

3.2.29 USB 2.0 Connector (Type A)

CN Label: USB2-3

CN Type: USB Type A

CN Location: See Figure 3-30

CN Pinouts: See Table 3-32

The USB Type A connector connects to a USB 2.0/1.1 device.

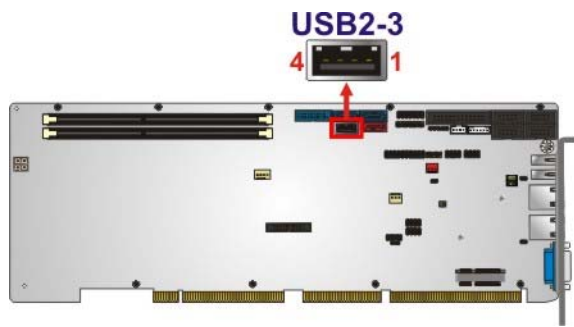


Figure 3-30: USB 2.0 Connector (Type A) Pinout Location

Pin	Description
1	VCC
2	DATA-
3	DATA+
4	GROUND

Table 3-32: USB 2.0 Connector (Type A) Pinouts

3.2.30 USB 3.0 Connector

CN Label: USB3-1

CN Type: 19-pin box header, p=2 mm

CN Location: See Figure 3-31

CN Pinouts: See **Table 3-33**

The USB 3.0 connector connects to USB 3.0 devices. This connector provides two USB 3.0 ports.

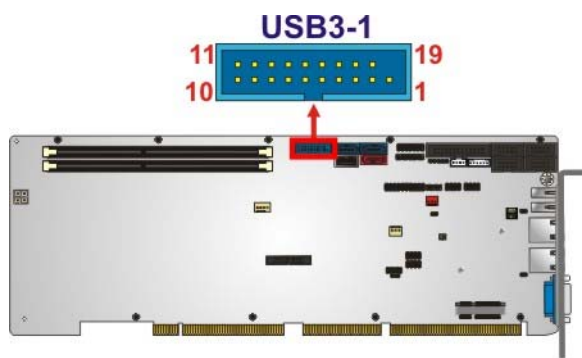


Figure 3-31: USB 3.0 Connector Location

Pin	Description	Pin	Description
1	VCC	11	USB_DATA+
2	USB3_RX-	12	USB_DATA-
3	USB3_RX+	13	GND
4	GND	14	USB3_TX+
5	USB3_TX-	15	USB3_TX-
6	USB3_TX+	16	GND
7	GND	17	USB3_RX+
8	USB_DATA-	18	USB3_RX-
9	USB_DATA+	19	VCC
10	NC		

Table 3-33: USB 3.0 Connector Pinouts

WSB-H810 PICMG 1.0 CPU Card

3.3 External Peripheral Interface Connector Panel

The figure below shows the external peripheral interface connector (EPIC) panel. The EPIC panel consists of the following:

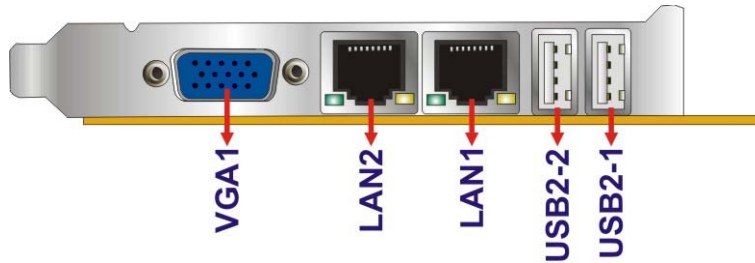


Figure 3-32: External Peripheral Interface Connector

3.3.1 Ethernet Connectors

- CN Label:** LAN1 and LAN2
- CN Type:** RJ-45
- CN Location:** See Figure 3-32
- CN Pinouts:** See Figure 3-33 and Table 3-34

The WSB-H810 is equipped with two built-in RJ-45 Ethernet controllers. Each controller can connect to the LAN through one RJ-45 LAN connector.

Pin	Description	Pin	Description
1	MDIA3-	5	MDIA2+
2	MDIA3+	6	MDIA1+
3	MDIA1-	7	MDIA0-
4	MDIA2-	8	MDIA0+

Table 3-34: LAN Pinouts

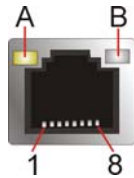


Figure 3-33: Ethernet Connector



LED	Description	LED	Description
A	on: linked blinking: data is being sent/received	B	off: 10 Mb/s green: 100 Mb/s orange: 1000 Mb/s

Table 3-35: Connector LEDs

3.3.2 USB 2.0 Connectors

- CN Label: USB2-1 and USB2-2
- CN Type: USB port
- CN Location: See Figure 3-32
- CN Pinouts: See Table 3-36

The WSB-H810 has two external USB 2.0 ports. The ports connect to both USB 2.0 and USB 1.1 devices.

Pin	Description
1	VCC
2	DATA-
3	DATA+
4	GROUND

Table 3-36: USB 2.0 Port Pinouts

3.3.3 VGA Connector

- CN Label: VGA1
- CN Type: 15-pin female
- CN Location: See Figure 3-32
- CN Pinouts: See Figure 3-34 and Table 3-37



WSB-H810 PICMG 1.0 CPU Card

The VGA connector connects to a monitor that accepts a standard VGA input.

Pin	Description	Pin	Description
1	RED	2	GREEN
3	BLUE	4	NC
5	GND	6	GND
7	GND	8	GND
9	VCC	10	GND
11	NC	12	DDCDA
13	HSYNC	14	VSYNC
15	DDCCLK		

Table 3-37: VGA Connector Pinouts

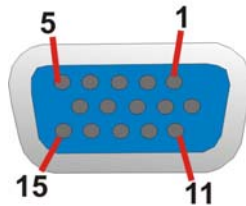


Figure 3-34: VGA Connector

Chapter

4

Installation

WSB-H810 PICMG 1.0 CPU Card

4.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the WSB-H810 may result in permanent damage to the WSB-H810 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the WSB-H810. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the WSB-H810 or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband:*** - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- ***Self-grounding:*** - Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad:*** When configuring the WSB-H810, place it on an anti-static pad. This reduces the possibility of ESD damaging the WSB-H810.
- ***Only handle the edges of the PCB:-*** When handling the PCB, hold the PCB by the edges.

4.2 Installation Considerations



NOTE:

The following installation notices and installation considerations should be read and understood before installation. All installation notices must be strictly adhered to. Failing to adhere to these precautions may lead to severe damage and injury to the person performing the installation.

**WARNING:**

The installation instructions described in this manual should be carefully followed in order to prevent damage to the components and injury to the user.

Before and during the installation please **DO** the following:

- Read the user manual:
 - The user manual provides a complete description of the WSB-H810 installation instructions and configuration options.
- Wear an electrostatic discharge cuff (ESD):
 - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- Place the WSB-H810 on an anti-static pad:
 - When installing or configuring the motherboard, place it on an anti-static pad. This helps to prevent potential ESD damage.
- Turn all power to the WSB-H810 off:
 - When working with the WSB-H810, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.

Before and during the installation of the WSB-H810 **DO NOT**:

- Remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- Use the product before verifying all the cables and power connectors are properly connected.
- Allow screws to come in contact with the PCB circuit, connector pins, or its components.

WSB-H810 PICMG 1.0 CPU Card

4.3 Socket LGA1150 CPU Installation

**WARNING:**

CPUs are expensive and sensitive components. When installing the CPU please be careful not to damage it in anyway. Make sure the CPU is installed properly and ensure the correct cooling kit is properly installed.

DO NOT touch the pins at the bottom of the CPU. When handling the CPU, only hold it on the sides.

To install the CPU, follow the steps below.

Step 1: **Disengage the load lever** by pressing the lever down and slightly outward to clear the retention tab. Fully open the lever. See **Figure 4-1**.

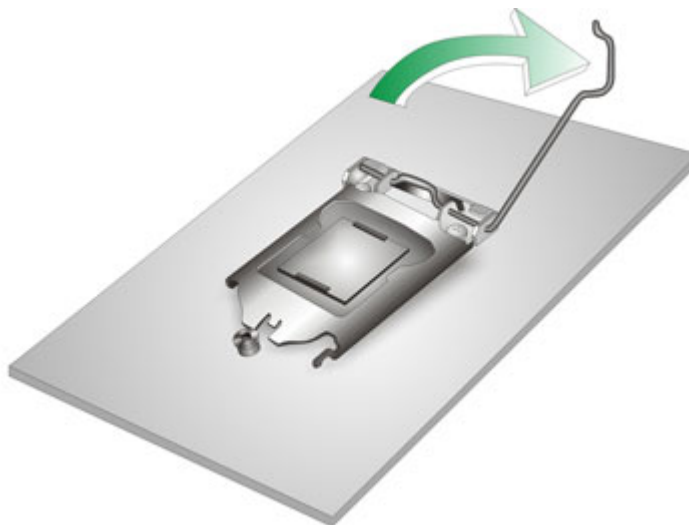


Figure 4-1: Disengage the CPU Socket Load Lever

Step 2: **Open the socket and remove the protective cover.** The black protective cover can be removed by pulling up on the tab labeled "Remove". See **Figure 4-2**.

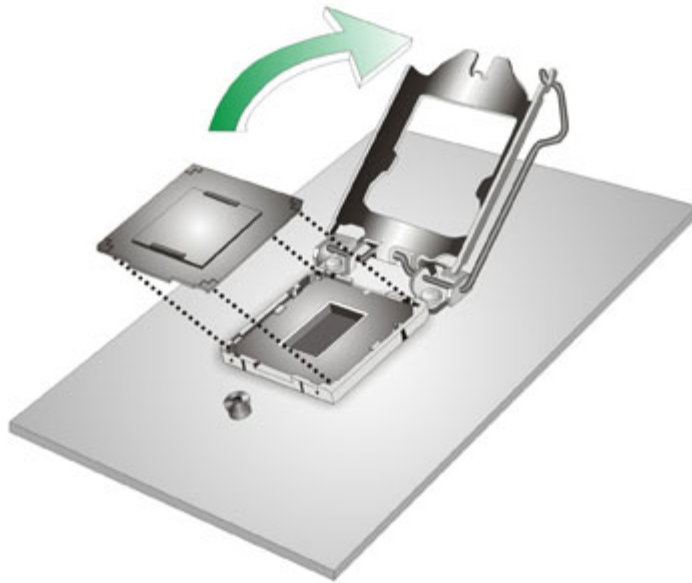


Figure 4-2: Remove Protective Cover

- Step 3: Inspect the CPU socket.** Make sure there are no bent pins and make sure the socket contacts are free of foreign material. If any debris is found, remove it with compressed air.
- Step 4: Orientate the CPU properly.** The contact array should be facing the CPU socket.
- Step 5: Correctly position the CPU.** Match the Pin 1 mark with the cut edge on the CPU socket.
- Step 6: Align the CPU pins.** Locate pin 1 and the two orientation notches on the CPU. Carefully match the two orientation notches on the CPU with the socket alignment keys.
- Step 7: Insert the CPU.** Gently insert the CPU into the socket. If the CPU pins are properly aligned, the CPU should slide into the CPU socket smoothly. See **Figure 4-3.**

WSB-H810 PICMG 1.0 CPU Card

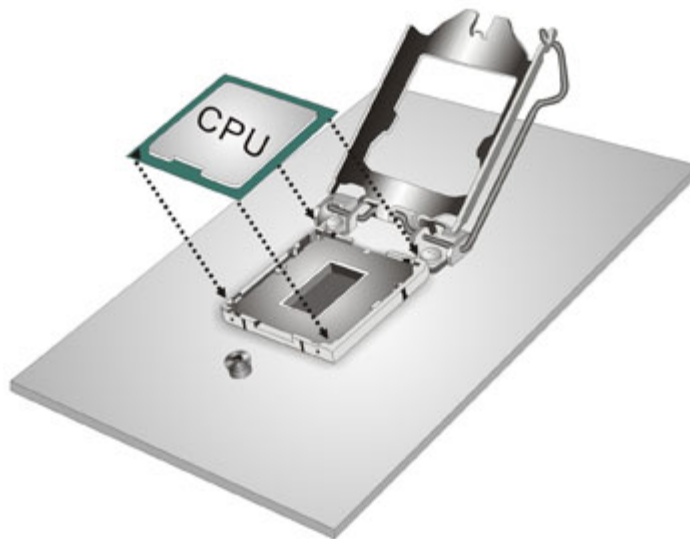


Figure 4-3: Insert the Socket LGA1150 CPU

Step 8: Close the CPU socket. Close the load plate and pull the load lever back a little to have the load plate be able to secure to the knob. Engage the load lever by pushing it back to its original position (**Figure 4-4**). There will be some resistance, but will not require extreme pressure.

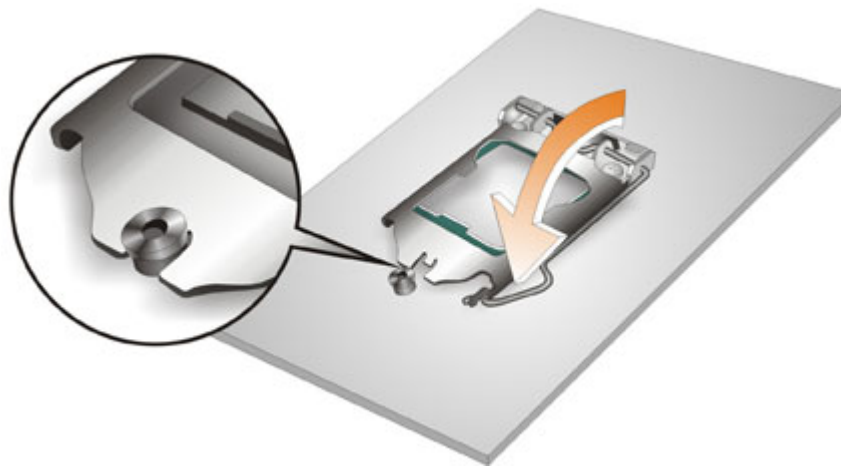


Figure 4-4: Close the Socket LGA1150

Step 9: Connect the 12 V power to the board. Connect the 12 V power from the power supply to the board.

4.4 Socket LGA1150 Cooling Kit Installation

The cooling kit can be bought from IEI. The cooling kit has a heatsink and fan.



WARNING:

Do not wipe off (accidentally or otherwise) the pre-sprayed layer of thermal paste on the bottom of the heat sink. The thermal paste between the CPU and the heat sink is important for optimum heat dissipation.

To install the cooling kit, follow the instructions below.

Step 1: A cooling kit bracket is pre-installed on the rear of the motherboard.

See **Figure 4-5**.

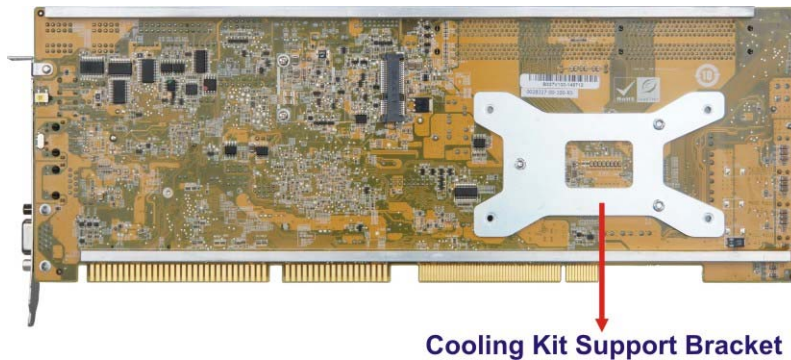


Figure 4-5: Cooling Kit Support Bracket

Step 2: Place the cooling kit onto the socket LGA1150 CPU. Make sure the CPU cable can be properly routed when the cooling kit is installed.

Step 3: Mount the cooling kit. Gently place the cooling kit on top of the CPU. Make sure the four threaded screws on the corners of the cooling kit properly pass through the holes of the cooling kit bracket.

Step 4: Secure the cooling kit by fastening the four retention screws of the cooling kit.

WSB-H810 PICMG 1.0 CPU Card

Step 5: Connect the fan cable. Connect the cooling kit fan cable to the fan connector on the WSB-H810. Carefully route the cable and avoid heat generating chips and fan blades.

4.5 DIMM Installation

To install a DIMM, please follow the steps below and refer to **Figure 4-6**.

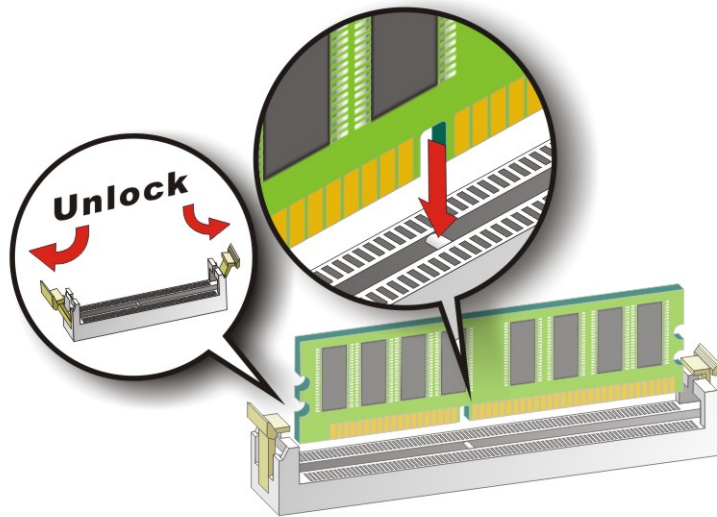


Figure 4-6: DIMM Installation

- Step 1: Open the DIMM socket handles.** Open the two handles outwards as far as they can. See **Figure 4-6**.
- Step 2: Align the DIMM with the socket.** Align the DIMM so the notch on the memory lines up with the notch on the memory socket. See **Figure 4-6**.
- Step 3: Insert the DIMM.** Once aligned, press down until the DIMM is properly seated. Clip the two handles into place. See **Figure 4-6**.
- Step 4: Removing a DIMM.** To remove a DIMM, push both handles outward. The memory module is ejected by a mechanism in the socket.

4.6 Full-size PCIe Mini Card Installation

The PCIe Mini slot allows installation of either a full-size or half-size PCIe Mini card. To install a full-size PCIe Mini card, please follow the steps below.

Step 1: Locate the PCIe Mini slot. See **Figure 3-20**.

Step 2: Remove the retention screw and standoff for a half-size PCIe Mini card. To avoid interference of the board circuit, remove the retention screw and standoff for a half-size PCIe Mini card as shown in **Figure 4-7**.

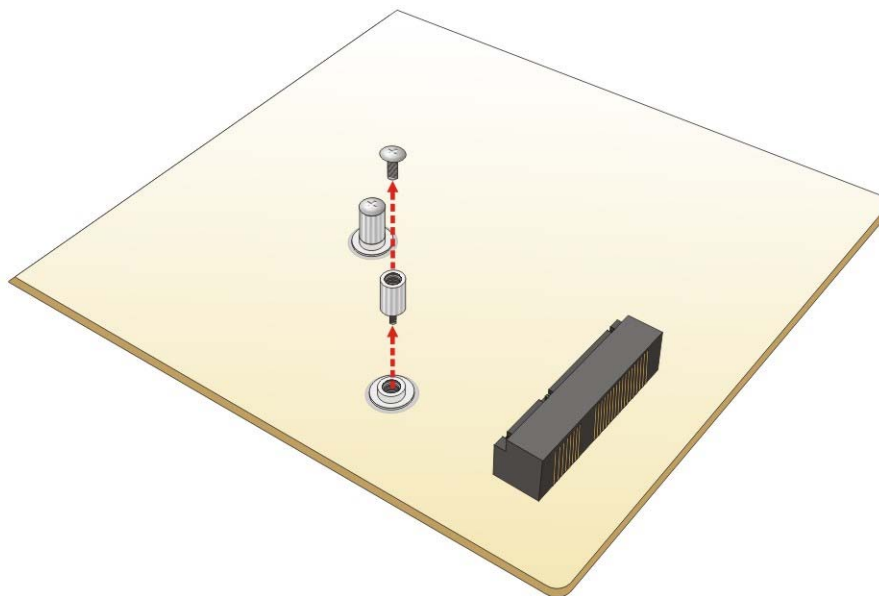


Figure 4-7: Removing the Retention Screw and Standoff for a Half-size PCIe Mini Card

Step 3: Remove the retention screw. Remove the retention screw as shown in **Figure 4-8**.

WSB-H810 PICMG 1.0 CPU Card

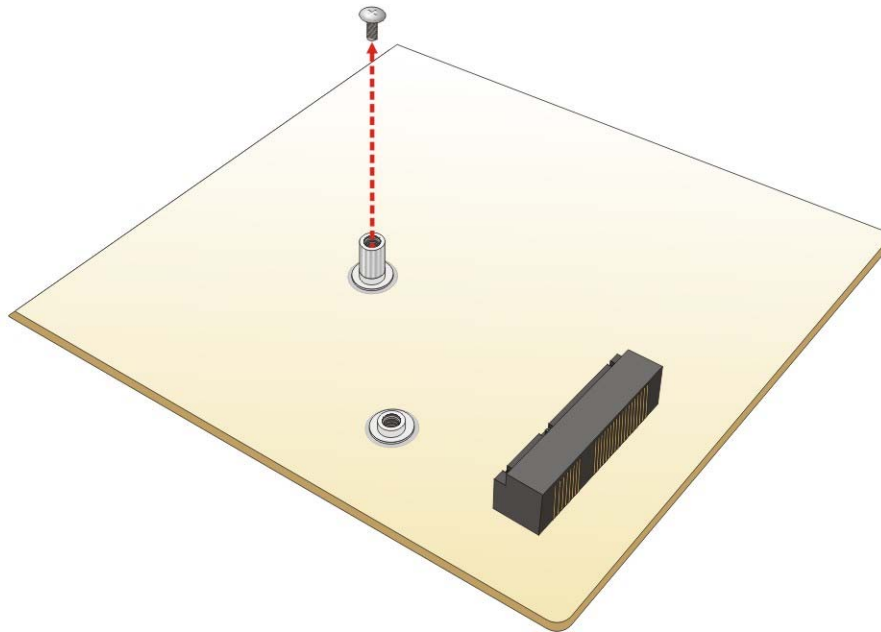


Figure 4-8: Removing the Retention Screw

Step 4: Insert into the socket at an angle. Line up the notch on the card with the notch on the slot. Slide the PCIe Mini card into the socket at an angle of about 20° (Figure 4-9).

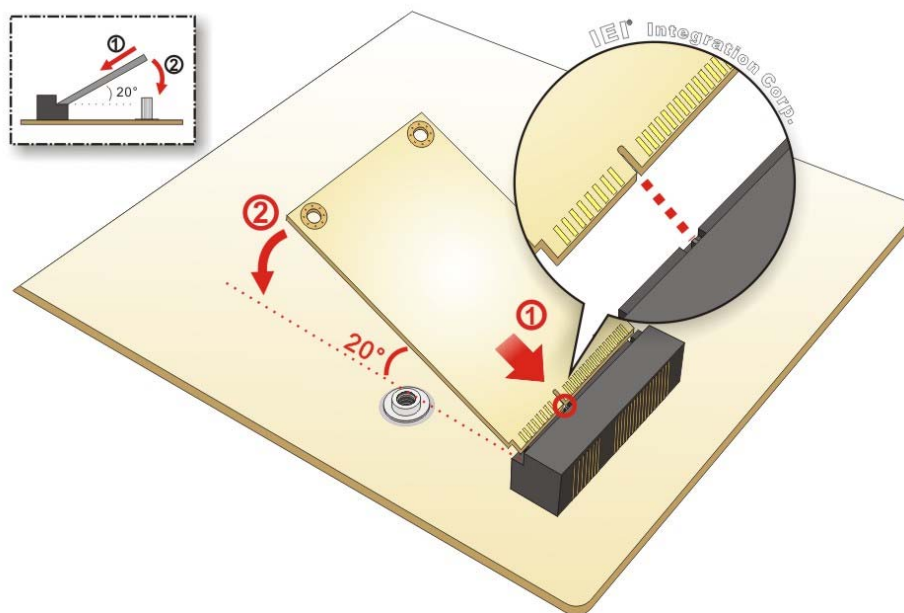


Figure 4-9: Inserting the Full-size PCIe Mini Card into the Slot at an Angle



Step 5: **Secure the full-size PCIe Mini card.** Secure the full-size PCIe Mini card with the retention screw previously removed (**Figure 4-10**).

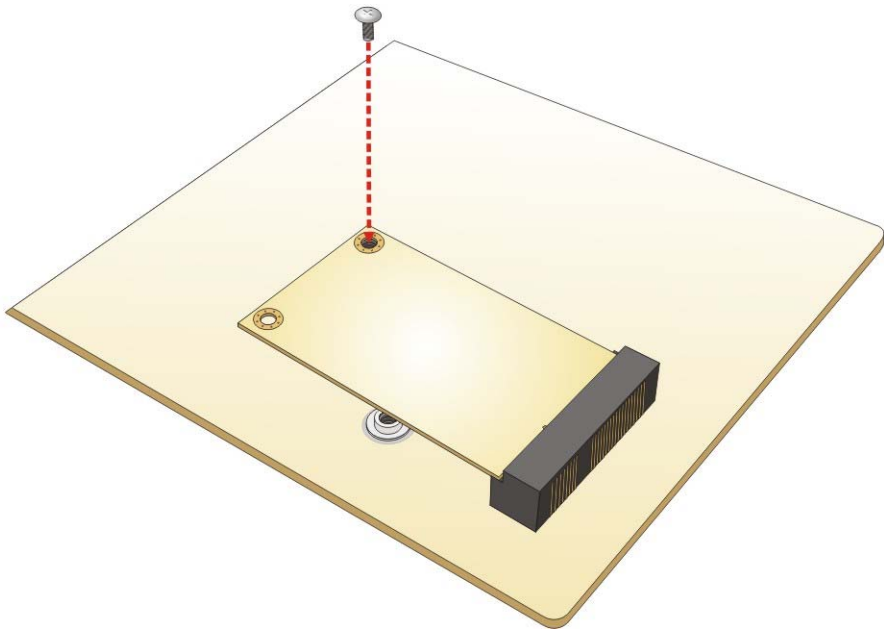


Figure 4-10: Securing the Full-size PCIe Mini Card

4.7 Half-size PCIe Mini Card Installation

The PCIe Mini card slot allows installation of either a full-size or half-size PCIe Mini card. To install a half-size PCIe Mini card, please follow the steps below.

- Step 1:** **Locate the PCIe Mini card slot.** See **Figure 3-20**.
- Step 2:** **Remove the retention screw.** Remove the retention screw as shown in **Figure 4-11**.



WSB-H810 PICMG 1.0 CPU Card

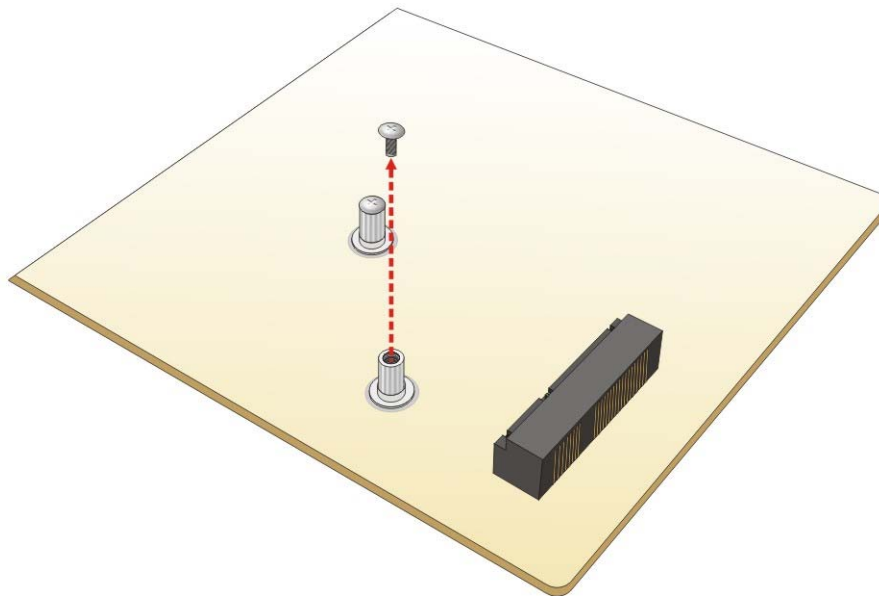


Figure 4-11: Removing the Retention Screw

Step 3: Insert into the socket at an angle. Line up the notch on the card with the notch on the slot. Slide the PCIe Mini card into the slot at an angle of about 20° (Figure 4-12).

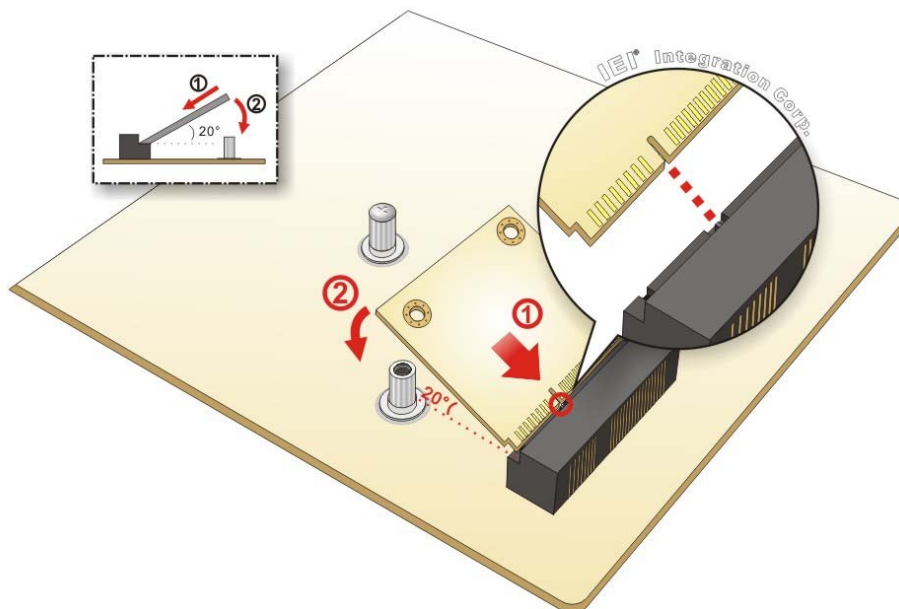


Figure 4-12: Inserting the Half-size PCIe Mini Card into the Slot at an Angle

Step 4: **Secure the half-size PCIe Mini card.** Secure the half-size PCIe Mini card with the retention screw previously removed (**Figure 4-13**).

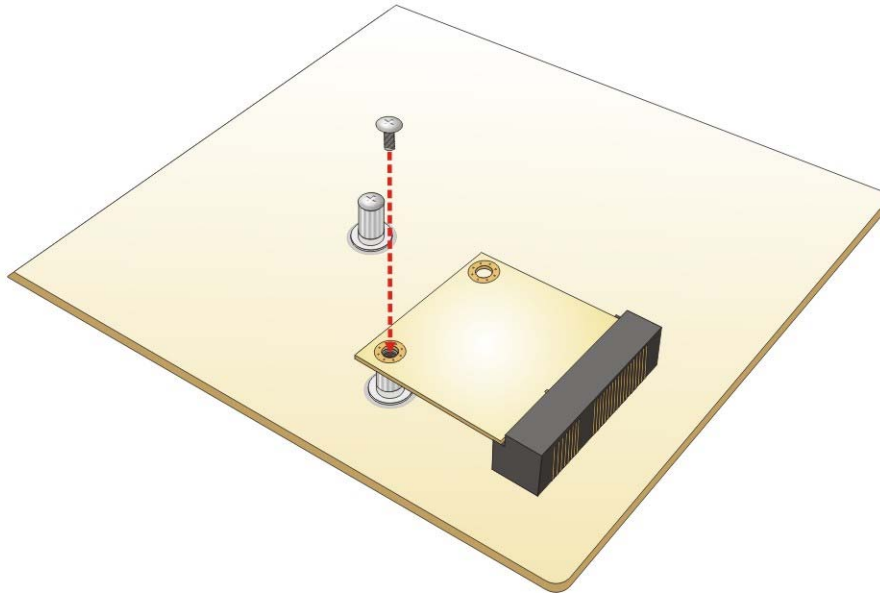


Figure 4-13: Securing the Half-size PCIe Mini Card

4.8 mSATA Card Installation

The mSATA slot allows installation of a full-size mSATA card. To install a full-size mSATA card, please follow the steps below.

Step 1: **Locate the mSATA slot.** The mSATA slot is located on the solder side of the WSB-H810. See **Figure 3-18**.

Step 2: **Remove the retention screws.** Remove the retention screws as shown in **Figure 4-14**.

WSB-H810 PICMG 1.0 CPU Card

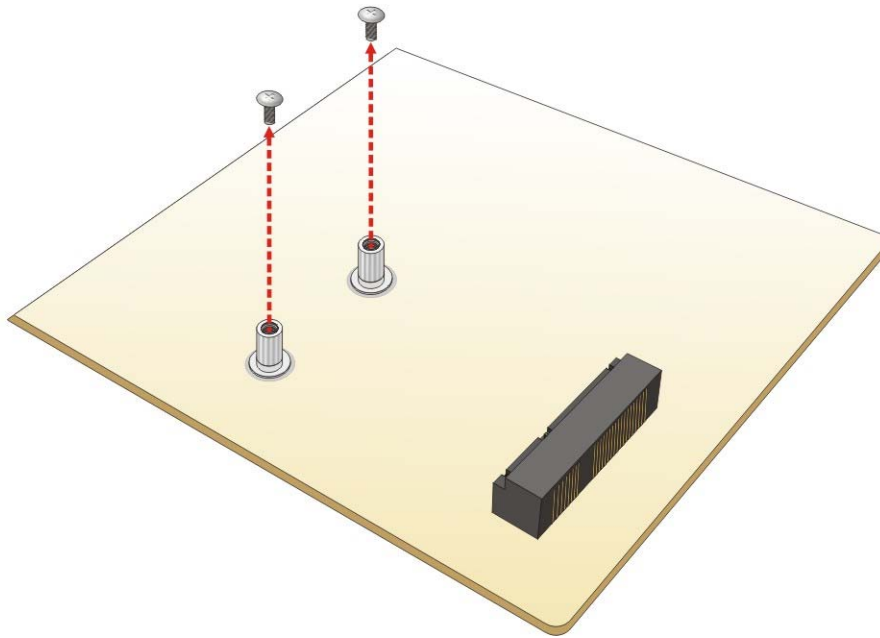


Figure 4-14: Removing the Retention Screws

Step 3: Insert into the socket at an angle. Line up the notch on the card with the notch on the slot. Slide the mSATA card into the slot at an angle of about 20° (Figure 4-15).

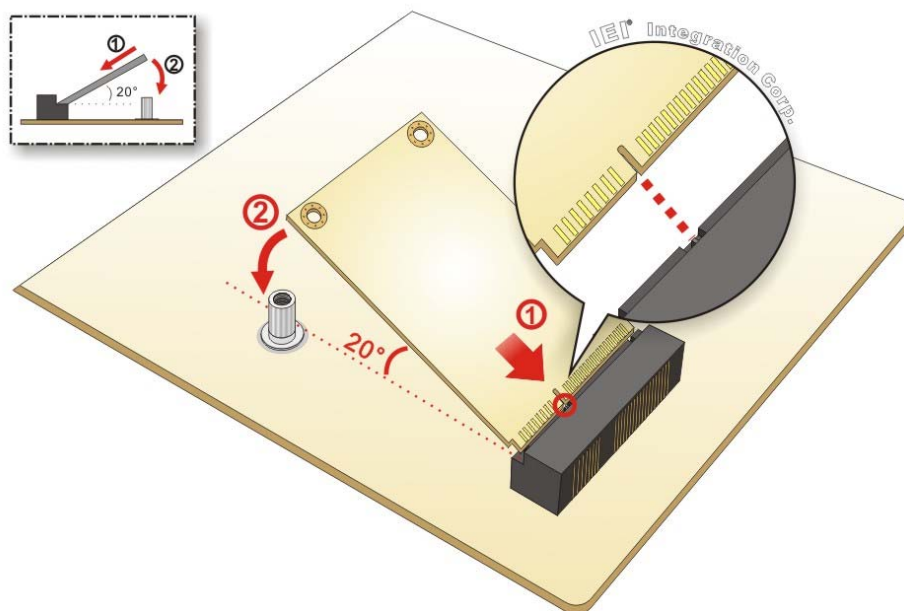


Figure 4-15: Inserting the mSATA Card into the Slot at an Angle

Step 4: **Secure the mSATA card.** Secure the mSATA card with the retention screws previously removed (**Figure 4-16**).

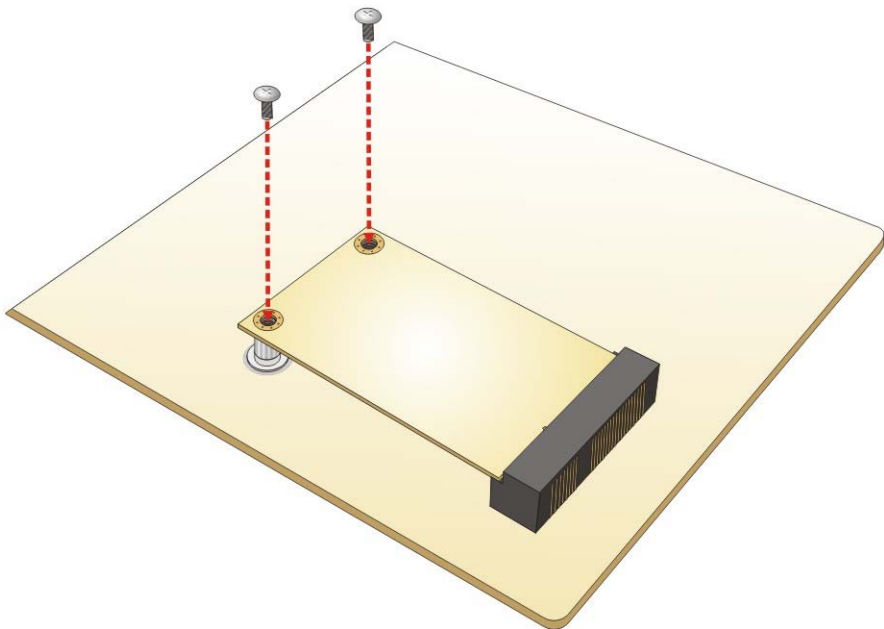


Figure 4-16: Securing the mSATA Card

4.9 System Configuration

The system configuration should be performed before installation.

4.9.1 AT/ATX Power Mode Setting

The AT and ATX power mode selection is made through the AT/ATX power mode switch which is shown in **Figure 4-17**.

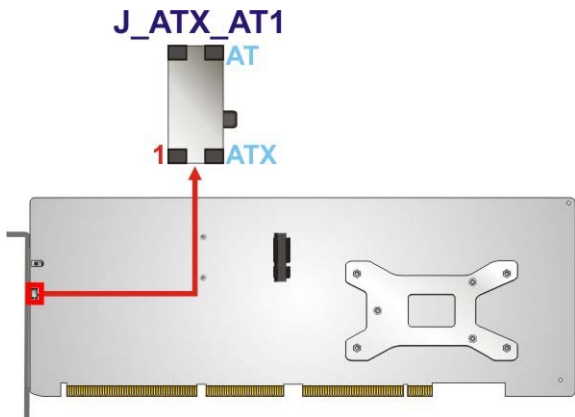


Figure 4-17: AT/ATX Power Mode Switch Location

WSB-H810 PICMG 1.0 CPU Card

Setting	Description
1-2 (down)	ATX power mode (default)
2-3 (up)	AT power mode

Table 4-1: AT/ATX Power Mode Switch Settings

4.9.2 Clear CMOS Button

To reset the BIOS, remove the on-board battery and press the clear CMOS button for three seconds or more. The clear CMOS button location is shown in **Figure 4-18**.

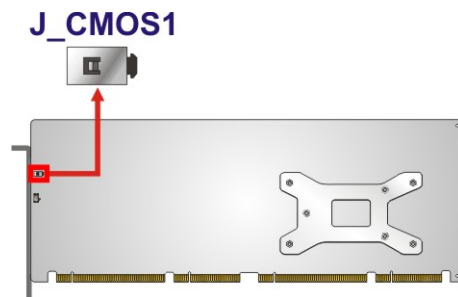


Figure 4-18: Clear CMOS Button Location

4.9.3 Flash Descriptor Security Override

The Flash Descriptor Security Override jumper (J_FLASH1) allows to enable or disable the ME firmware update. Refer to **Figure 4-19** and **Table 4-2** for the jumper location and settings.

Setting	Description
Short 1-2	Disabled (default)
Short 2-3	Enabled

Table 4-2: Flash Descriptor Security Override Jumper Settings

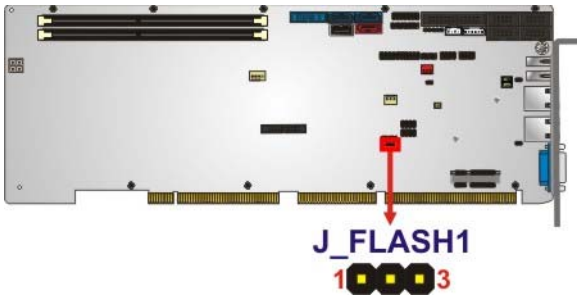


Figure 4-19: Flash Descriptor Security Override Jumper Location

To update the ME firmware, please follow the steps below.

- Step 1: Before turning on the system power, short pin 2-3 of the Flash Descriptor Security Override jumper.
- Step 2: Update the BIOS and ME firmware, and then turn off the system power.
- Step 3: Remove the metal clip on the Flash Descriptor Security Override jumper or return to its default setting (short pin 1-2).
- Step 4: Restart the system. The system will reboot 2 ~ 3 times to complete the ME firmware update.

4.9.4 USB Power Selection

The USB power selection is made through the BIOS menu in “Chipset → PCH-IO Configuration”. Use the **USB Power SW1** and the **USB Power SW2** BIOS options to configure the correspondent USB ports (see **Table 4-3**) and refer to **Table 4-4** to select the USB power source.

BIOS Options	Configured USB Ports
USB Power SW1	USB2-1 (external USB 2.0 port) USB2-2 (external USB 2.0 port)
USB Power SW2	USB2-4 (internal USB 2.0 ports) USB2-5 (internal USB 2.0 ports) USB2-3 (internal USB 2.0 port, Type A) USB3-1 (internal USB 3.0 ports)

Table 4-3: BIOS Options and Configured USB Ports

WSB-H810 PICMG 1.0 CPU Card

Options	Description
+5V DUAL	+5V dual (default)
+5V	+5V

Table 4-4: USB Power Source Setup

Please refer to Section **5.4.1** for detailed information.

4.10 Chassis Installation

4.10.1 Airflow



WARNING:

Airflow is critical to the cooling of the CPU and other onboard components. The chassis in which the WSB-H810 must have air vents to allow cool air to move into the system and hot air to move out.

The WSB-H810 must be installed in a chassis with ventilation holes on the sides allowing airflow to travel through the heat sink surface. In a system with an individual power supply unit, the cooling fan of a power supply can also help generate airflow through the board surface.

4.10.2 CPU Card Installation

To install the CPU card onto the backplane, carefully align the CPU card edge connector with the CPU card socket on the backplane. To do this, please refer to the reference material that came with the backplane. Next, secure the CPU card to the chassis. To do this, please refer to the reference material that came with the chassis.

4.11 Internal Peripheral Device Connections

This section outlines the installation of peripheral devices to the onboard connectors.

4.11.1 SATA Drive Connection

The WSB-H810 is shipped with four SATA drive cables. To connect the SATA drives to the connectors, please follow the steps below.

Step 1: **Locate the connectors.** The locations of the SATA drive connectors are shown in **Chapter 3**.

Step 2: **Insert the cable connector.** Insert the cable connector into the on-board SATA drive connector until it clips into place. See **Figure 4-20**.

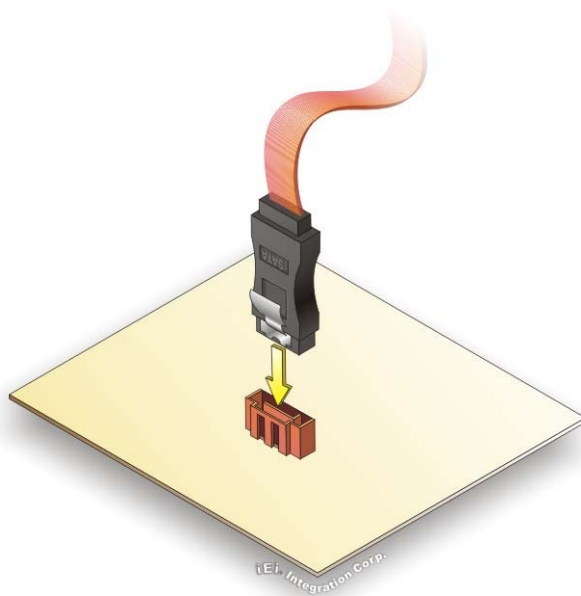


Figure 4-20: SATA Drive Cable Connection

Step 3: **Connect the cable to the SATA disk.** Connect the connector on the other end of the cable to the connector at the back of the SATA drive. See **Figure 4-21**.

WSB-H810 PICMG 1.0 CPU Card

Step 4: Connect the **SATA power cable (optional)**. Connect the SATA power connector to the back of the SATA drive. See **Figure 4-21**.

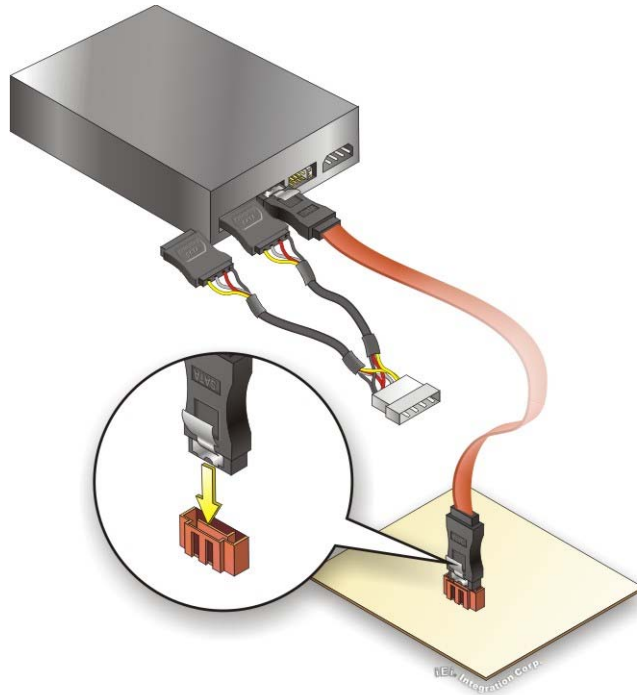


Figure 4-21: SATA Power Drive Connection

Chapter

5

BIOS

WSB-H810 PICMG 1.0 CPU Card

5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

5.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DEL** or **F2** key as soon as the system is turned on or
2. Press the **DEL** or **F2** key when the “**Press DEL or F2 to enter SETUP**” message appears on the screen.

If the message disappears before the **DEL** or **F2** key is pressed, restart the computer and try again.

5.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **Esc** to quit. Navigation keys are shown in the following table.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes
-	Decrease the numeric value or make changes
Page Up	Move to the previous page

Key	Function
Page Dn	Move to the next page
Esc	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Previous values
F3	Load optimized defaults
F4	Save changes and Exit BIOS

Table 5-1: BIOS Navigation Keys

5.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

5.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the jumper described in Chapter 4.

5.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Boot – Changes the system boot configuration.
- Security – Sets User and Supervisor Passwords.
- Save & Exit – Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

→ System Overview

The system overview lists a brief summary of the BIOS. The fields in system overview cannot be changed. The items shown in the system overview include:

- BIOS Information
- Processor Information
- Memory Information
- PCH Information
- SPI Clock Frequency

The **Main** menu has two user configurable fields:

→ System Date [xx/xx/xx]

Use the **System Date** option to set the system date. Manually enter the day, month and year.

→ System Time [xx:xx:xx]

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

5.3 Advanced

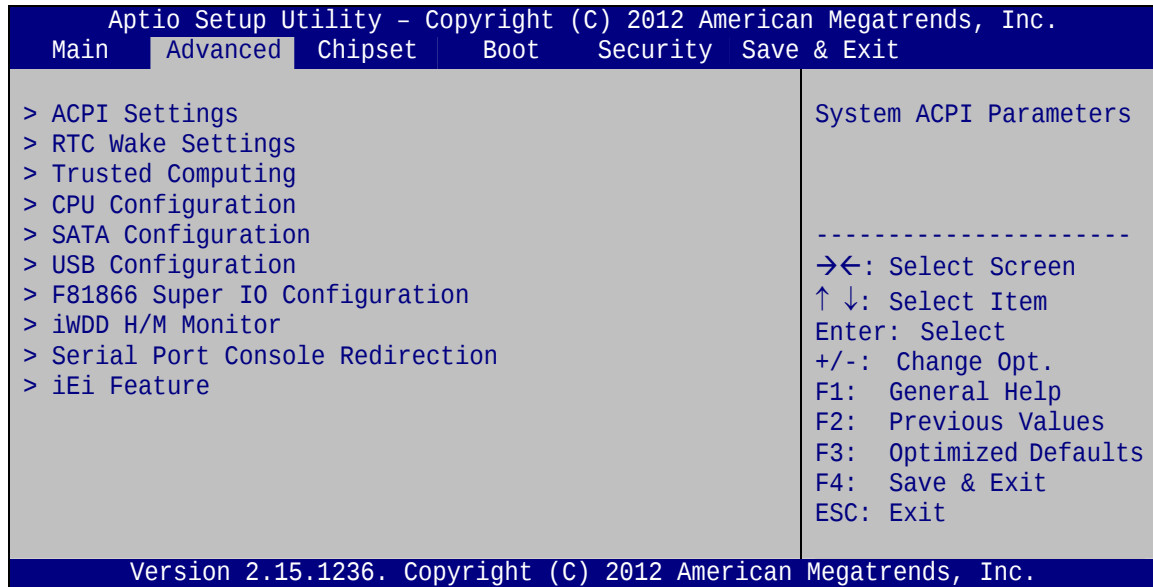
Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:



WARNING!

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.


WSB-H810 PICMG 1.0 CPU Card



BIOS Menu 2: Advanced

5.3.1 ACPI Settings

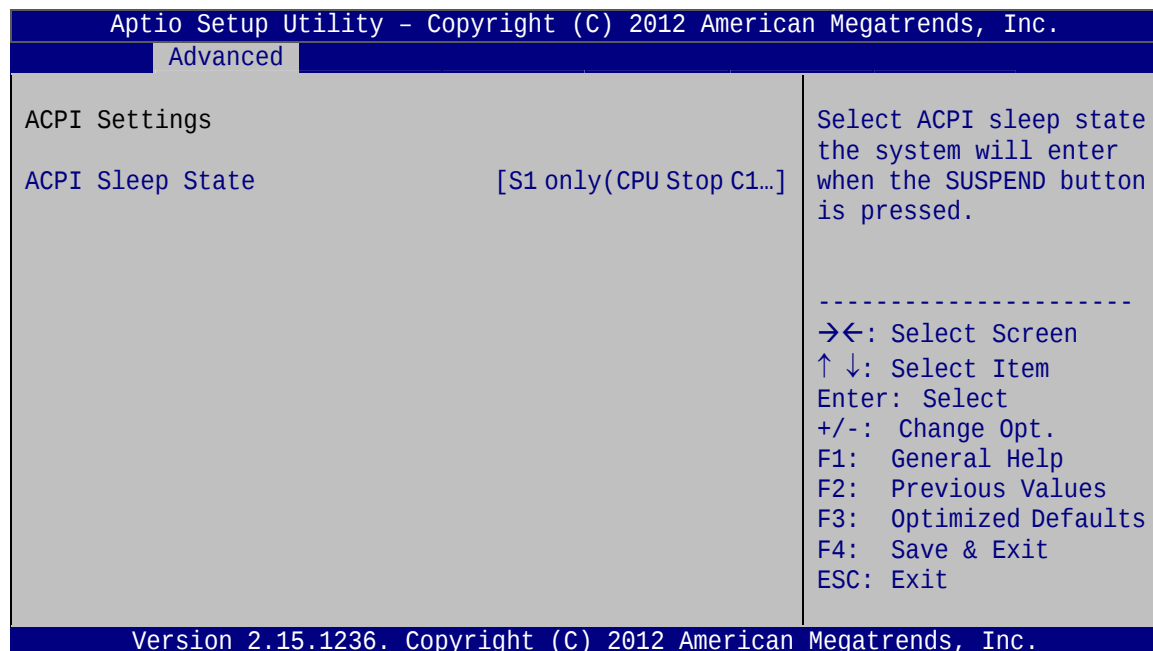The **ACPI Settings** menu (**BIOS Menu 3**) configures the Advanced Configuration and Power Interface (ACPI) options.



BIOS Menu 3: ACPI Configuration


➔ ACPI Sleep State [S1 only (CPU Stop Clock)]

Use the **ACPI Sleep State** option to specify the sleep state the system enters when it is not being used.

- | | | |
|-----------------------------------|----------------|---|
| ➔ S1 only (CPU Stop Clock) | DEFAULT | The system enters S1 (POS) sleep state. The system appears off. The CPU is stopped; RAM is refreshed; the system is running in a low power mode. |
| ➔ S3 only (Suspend to RAM) | | The caches are flushed and the CPU is powered off. Power to the RAM is maintained. The computer returns slower to a working state, but more power is saved. |

5.3.2 RTC Wake Settings

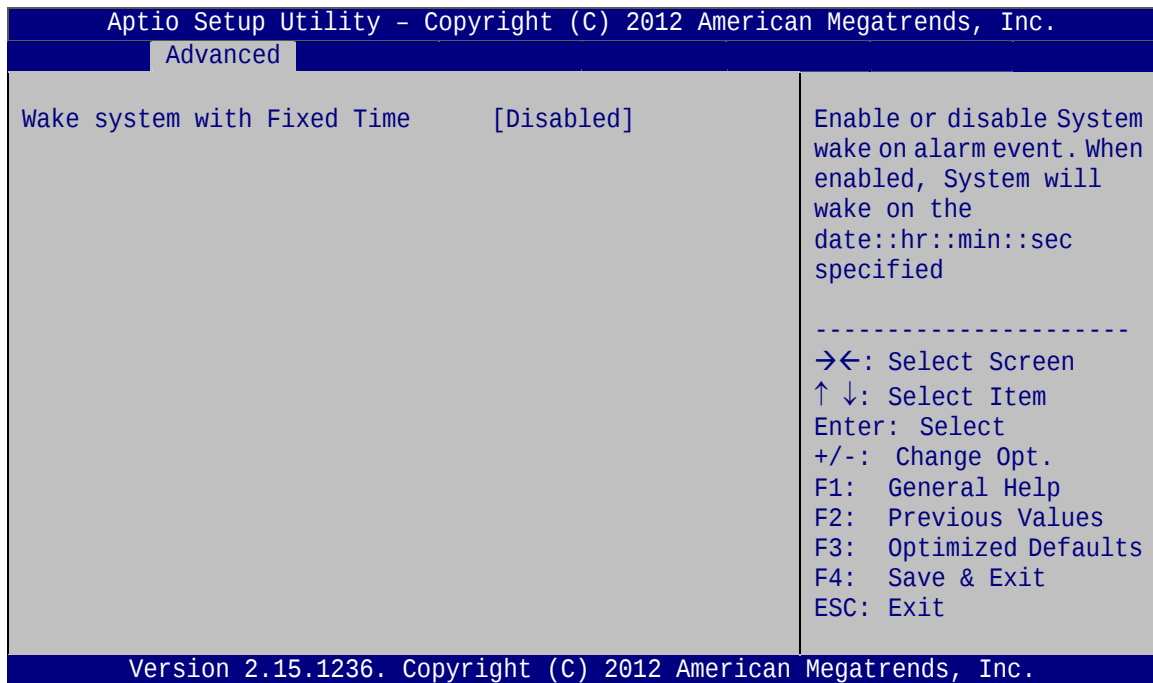The **RTC Wake Settings** menu (**BIOS Menu 4**) enables the system to wake at the specified time.



BIOS Menu 4: RTC Wake Settings

WSB-H810 PICMG 1.0 CPU Card**→ Wake system with Fixed Time [Disabled]**

Use the **Wake system with Fixed Time** option to enable or disable the system wake on alarm event.

→ Disabled **DEFAULT** The real time clock (RTC) cannot generate a wake event

→ Enabled If selected, the **Wake up every day** option appears allowing you to enable to disable the system to wake every day at the specified time. Besides, the following options appear with values that can be selected:

Wake up date

Wake up hour

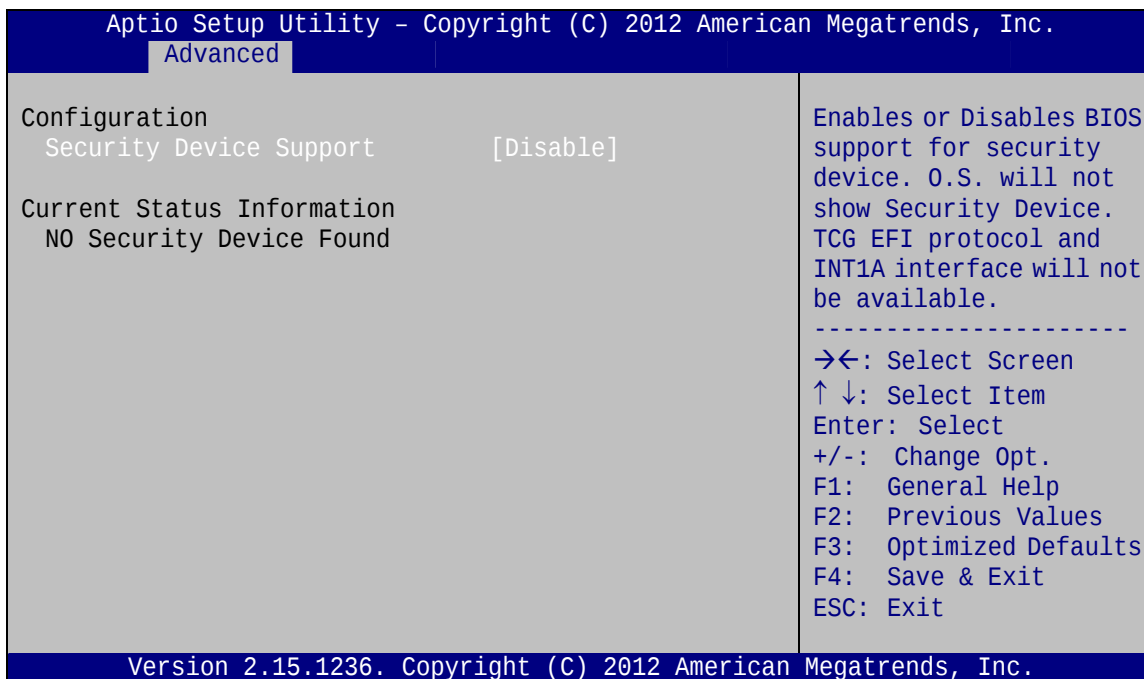
Wake up minute

Wake up second

After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.

5.3.3 Trusted Computing

Use the **Trusted Computing** menu (**BIOS Menu 5**) to configure settings related to the Trusted Computing Group (TCG) Trusted Platform Module (TPM).



BIOS Menu 5: TPM Configuration

➔ Security Device Support [Disable]

Use the **Security Device Support** option to configure support for the TPM.

- ➔ **Disable** **DEFAULT** TPM support is disabled.
- ➔ **Enable** TPM support is enabled.

WSB-H810 PICMG 1.0 CPU Card

5.3.4 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 6**) to view detailed CPU specifications or enable the Intel Virtualization Technology.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Advanced		
CPU Configuration		Enable for Windows XP and Linux (OS optimized for Hyper-Threading Technology and Disabled for other OS (OS not optimized for Hyper-Threading Technology)). When Disabled only one thread per enabled core is enabled.
Intel(R) Core(TM) i7-4790S CPU @ 3.20GHz		
CPU Signature	306c2	
Microcode Patch	17	
Max CPU Speed	3200 MHz	
Min CPU Speed	800 MHz	
CPU Speed	3600 MHz	
Processor Cores	4	
Intel HT Technology	Supported	
Intel VT-x Technology	Supported	
Intel SMX Technology	Supported	
64-bit	Supported	
EIST Technology	Supported	
L1 Data Cache	32 kB x 4	
L1 Code Cache	32 kB x 4	
L2 Cache	256 kB x 4	
L3 Cache	8192 kB	
Hyper-threading	[Enabled]	
Active Processor Cores	[All]	
Intel Virtualization Technology	[Disabled]	
EIST	[Enabled]	
Intel TXT(LT) Support	[Disabled]	

		→←: Select Screen
		↑ ↓: Select Item
		Enter: Select
		+/-: Change Opt.
		F1: General Help
		F2: Previous Values
		F3: Optimized Defaults
		F4: Save & Exit
		ESC: Exit
Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.		

BIOS Menu 6: CPU Configuration

→ Hyper-threading [Enabled]

Use the **Hyper-threading** BIOS option to enable or disable the Intel Hyper-Threading Technology.

- **Disabled** Disables the Intel Hyper-Threading Technology.
- **Enabled** **DEFAULT** Enables the Intel Hyper-Threading Technology.

→ Active Processor Cores [All]

Use the **Active Processor Cores** BIOS option to enable numbers of cores in the processor package.

- | | | | |
|---|-----|---------|--|
| → | All | DEFAULT | Enable all cores in the processor package. |
| → | 1 | | Enable one core in the processor package. |
| → | 2 | | Enable two cores in the processor package. |
| → | 3 | | Enable three cores in the processor package. |

→ Intel Virtualization Technology [Disabled]

Use the **Intel Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel® Virtualization technology allows several OSs to run on the same system at the same time.

- | | | | |
|---|----------|---------|---|
| → | Disabled | DEFAULT | Disables Intel Virtualization Technology. |
| → | Enabled | | Enables Intel Virtualization Technology. |

→ EIST [Enabled]

Use the **EIST** option to enable or disable the Enhanced Intel® SpeedStep Technology (EIST).

- | | | | |
|---|----------|---------|---|
| → | Disabled | | Disables Enhanced Intel® SpeedStep Technology |
| → | Enabled | DEFAULT | Enables Enhanced Intel® SpeedStep Technology |

WSB-H810 PICMG 1.0 CPU Card

5.3.5 SATA Configuration

Use the **SATA Configuration** menu (**BIOS Menu 7**) to change and/or set the configuration of the SATA devices installed in the system.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Advanced		
SATA Controller(s)	[Enabled]	Enable or disable SATA Device. ----- →←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
SATA Mode Selection	[IDE]	
SATA Test Mode	[Enabled]	
Aggressive LPM Support	[Enabled]	
SATA Controller Speed	[Default]	
SATA1 Port	Empty	
Software Preserve	Unknown	
SATA2 Port	Empty	
Software Preserve	Unknown	
SATA3 Port	Empty	
mSATA Port	Empty	
Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.		

BIOS Menu 7: SATA Configuration

→ **SATA Controller(s) [Enabled]**

Use the **SATA Controller(s)** option to configure the SATA controller(s).

- **Enabled** **DEFAULT** Enables the on-board SATA controller(s).
- **Disabled** Disables the on-board SATA controller(s).

→ **SATA Mode Selection [IDE]**

Use the **SATA Mode Selection** option to determine how SATA devices operate.

- **IDE** **DEFAULT** Configures SATA devices as normal IDE device.
- **AHCI** Configures SATA devices as AHCI device.

→ **SATA Test Mode [Enabled]**

Use the **SATA Test Mode** option to enable or disable the SATA test mode.



- ➔ Enabled DEFAULT Enables the SATA test mode.
- ➔ Disabled Disables the SATA test mode.

➔ Aggressive LPM Support [Enabled]

Use the **Aggressive LPM Support** option to enable or disable the PCH to aggressively enter link power state.

- ➔ Enabled DEFAULT Enables the PCH to aggressively enter link power state.
- ➔ Disabled Disables the PCH to aggressively enter link power state.

➔ SATA Controller Speed [Default]

Use the **SATA Controller Speed** option to specify the maximum speed the SATA controller can support.

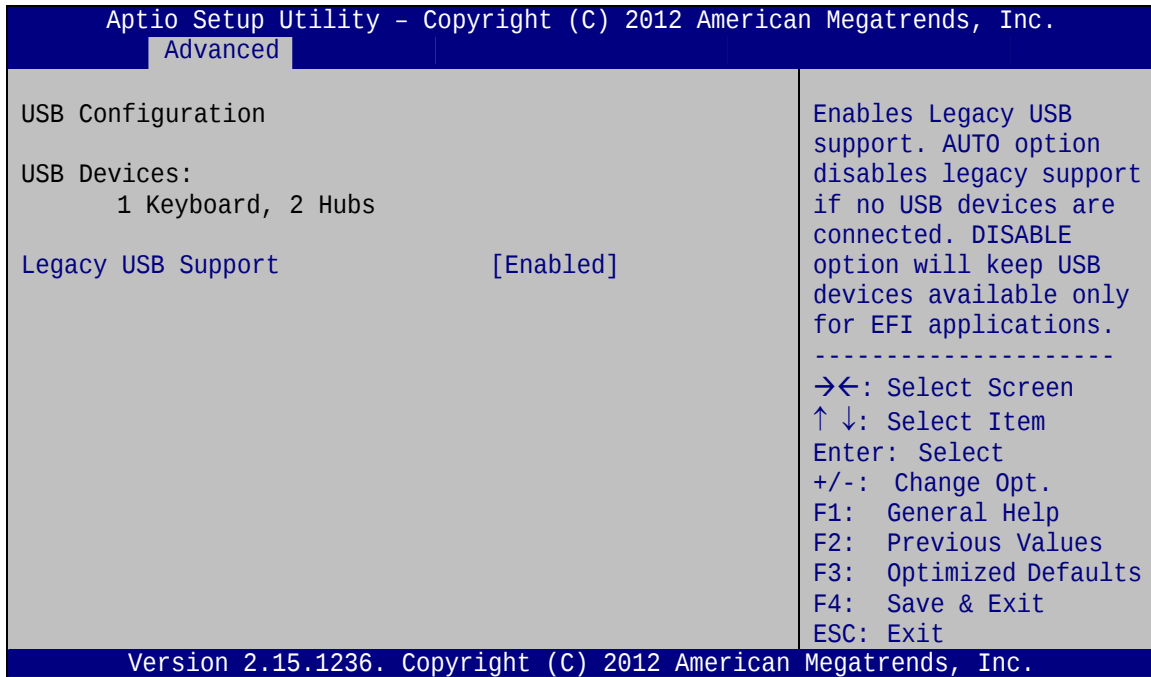
- Default **Default**
- Gen1
- Gen2
- Gen3



WSB-H810 PICMG 1.0 CPU Card

5.3.6 USB Configuration

Use the **USB Configuration** menu (**BIOS Menu 8**) to read USB configuration information and configure the USB settings.



BIOS Menu 8: USB Configuration

➔ USB Devices

The **USB Devices** field lists the USB devices that are enabled on the system

➔ Legacy USB Support [Enabled]

Use the **Legacy USB Support** BIOS option to enable USB mouse and USB keyboard support. Normally if this option is not enabled, any attached USB mouse or USB keyboard does not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB driver loaded onto the system.

- ➔ **Enabled** **DEFAULT** Legacy USB support enabled
- ➔ **Disabled** Legacy USB support disabled
- ➔ **Auto** Legacy USB support disabled if no USB devices are connected



5.3.7 F81866 Super IO Configuration

Use the **F81866 Super IO Configuration** menu (**BIOS Menu 9**) to set or change the configurations for the serial ports and parallel port.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Advanced		
F81866 Super IO Configuration		Set Parameters of Serial Port 1 (COMA)
F81866 Super IO Chip	F81866	
> Serial Port 1 Configuration		-----
> Serial Port 2 Configuration		→←: Select Screen
> Serial Port 3 Configuration		↑ ↓: Select Item
> Serial Port 4 Configuration		Enter: Select
> Serial Port 5 Configuration		+/-: Change Opt.
> IrDA Configuration		F1: General Help
> Parallel Port Configuration		F2: Previous Values
		F3: Optimized Defaults
		F4: Save & Exit
		ESC: Exit
Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.		

BIOS Menu 9: F81866 Super IO Configuration

5.3.7.1 Serial Port n Configuration

Use the **Serial Port n Configuration** menu (**BIOS Menu 10**) to configure the serial port n.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Advanced		
Serial Port n Configuration		Enable or Disable Serial Port (COM)
Serial Port	[Enabled]	
Device Settings	I0=3F8h; IRQ=4	
Change Settings	[Auto]	-----
		→←: Select Screen
		↑ ↓: Select Item
		Enter: Select
		+/-: Change Opt.
		F1: General Help
		F2: Previous Values
		F3: Optimized Defaults
		F4: Save & Exit
		ESC: Exit
Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.		

BIOS Menu 10: Serial Port n Configuration Menu



WSB-H810 PICMG 1.0 CPU Card

5.3.7.1.1 Serial Port 1 Configuration

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- | | | | |
|---|----------|---------|-------------------------|
| → | Disabled | | Disable the serial port |
| → | Enabled | DEFAULT | Enable the serial port |

→ Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- | | | | |
|---|----------------------|---------|---|
| → | Auto | DEFAULT | The serial port IO port address and interrupt address are automatically detected. |
| → | IO=3F8h;
IRQ=4 | | Serial Port I/O port address is 3F8h and the interrupt address is IRQ4. |
| → | IO=3F8h;
IRQ=3, 4 | | Serial Port I/O port address is 3F8h and the interrupt address is IRQ3, 4. |
| → | IO=2C0h;
IRQ=3, 4 | | Serial Port I/O port address is 2C0h and the interrupt address is IRQ3, 4. |
| → | IO=2C8h;
IRQ=3, 4 | | Serial Port I/O port address is 2C8h and the interrupt address is IRQ3, 4. |

5.3.7.1.2 Serial Port 2 Configuration

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- | | | | |
|---|----------|---------|-------------------------|
| → | Disabled | | Disable the serial port |
| → | Enabled | DEFAULT | Enable the serial port |

→ Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- | | | | |
|---|------------------------------|----------------|---|
| → | Auto | DEFAULT | The serial port IO port address and interrupt address are automatically detected. |
| → | IO=2F8h;
IRQ=3 | | Serial Port I/O port address is 2F8h and the interrupt address is IRQ3. |
| → | IO=3F8h;
IRQ=3, 4 | | Serial Port I/O port address is 3F8h and the interrupt address is IRQ3, 4. |
| → | IO=2F8h;
IRQ=3, 4 | | Serial Port I/O port address is 2F8h and the interrupt address is IRQ3, 4. |
| → | IO=2C0h;
IRQ=3, 4 | | Serial Port I/O port address is 2C0h and the interrupt address is IRQ3, 4. |
| → | IO=2C8h;
IRQ=3, 4 | | Serial Port I/O port address is 2C8h and the interrupt address is IRQ3, 4. |

→ Device Mode [RS422/485]

Use the **Device Mode** option to select the serial port mode.

- | | | | |
|---|------------------|----------------|---|
| → | RS422/485 | DEFAULT | Enables serial port RS-422/485 support. |
|---|------------------|----------------|---|

5.3.7.1.3 Serial Port 3 Configuration

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- | | | | |
|---|-----------------|----------------|-------------------------|
| → | Disabled | | Disable the serial port |
| → | Enabled | DEFAULT | Enable the serial port |

WSB-H810 PICMG 1.0 CPU Card

→ Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- | | | | |
|---|--------------------------------|----------------|---|
| → | Auto | DEFAULT | The serial port IO port address and interrupt address are automatically detected. |
| → | IO=2D0h;
IRQ=10 | | Serial Port I/O port address is 2D0h and the interrupt address is IRQ10 |
| → | IO=2D0h;
IRQ=10, 11 | | Serial Port I/O port address is 2D0h and the interrupt address is IRQ10, 11 |
| → | IO=2E8h;
IRQ=10, 11 | | Serial Port I/O port address is 2E8h and the interrupt address is IRQ10, 11 |
| → | IO=2D8h;
IRQ=10, 11 | | Serial Port I/O port address is 2D8h and the interrupt address is IRQ10, 11 |

5.3.7.1.4 Serial Port 4 Configuration

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- | | | | |
|---|-----------------|----------------|-------------------------|
| → | Disabled | | Disable the serial port |
| → | Enabled | DEFAULT | Enable the serial port |

→ Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- | | | | |
|---|----------------------------|----------------|---|
| → | Auto | DEFAULT | The serial port IO port address and interrupt address are automatically detected. |
| → | IO=2E8h;
IRQ=10 | | Serial Port I/O port address is 2E8h and the interrupt address is IRQ10 |



- | | | |
|---|------------------------|---|
| ➔ | IO=2E8h;
IRQ=10, 11 | Serial Port I/O port address is 2E8h and the interrupt address is IRQ10, 11 |
| ➔ | IO=2D0h;
IRQ=10, 11 | Serial Port I/O port address is 2D0h and the interrupt address is IRQ10, 11 |
| ➔ | IO=2D8h;
IRQ=10, 11 | Serial Port I/O port address is 2D8h and the interrupt address is IRQ10, 11 |

5.3.7.1.5 Serial Port 5 Configuration

➔ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- | | | | |
|---|----------|---------|-------------------------|
| ➔ | Disabled | | Disable the serial port |
| ➔ | Enabled | DEFAULT | Enable the serial port |

➔ Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- | | | | |
|---|------------------------|---------|---|
| ➔ | Auto | DEFAULT | The serial port IO port address and interrupt address are automatically detected. |
| ➔ | IO=2D0h;
IRQ=10 | | Serial Port I/O port address is 2D0h and the interrupt address is IRQ10 |
| ➔ | IO=2C0h;
IRQ=10, 11 | | Serial Port I/O port address is 2C0h and the interrupt address is IRQ10, 11 |
| ➔ | IO=2C8h;
IRQ=10, 11 | | Serial Port I/O port address is 2C8h and the interrupt address is IRQ10, 11 |
| ➔ | IO=2D0h;
IRQ=10, 11 | | Serial Port I/O port address is 2D0h and the interrupt address is IRQ10, 11 |
| ➔ | IO=2D8h;
IRQ=10, 11 | | Serial Port I/O port address is 2D8h and the interrupt address is IRQ10, 11 |

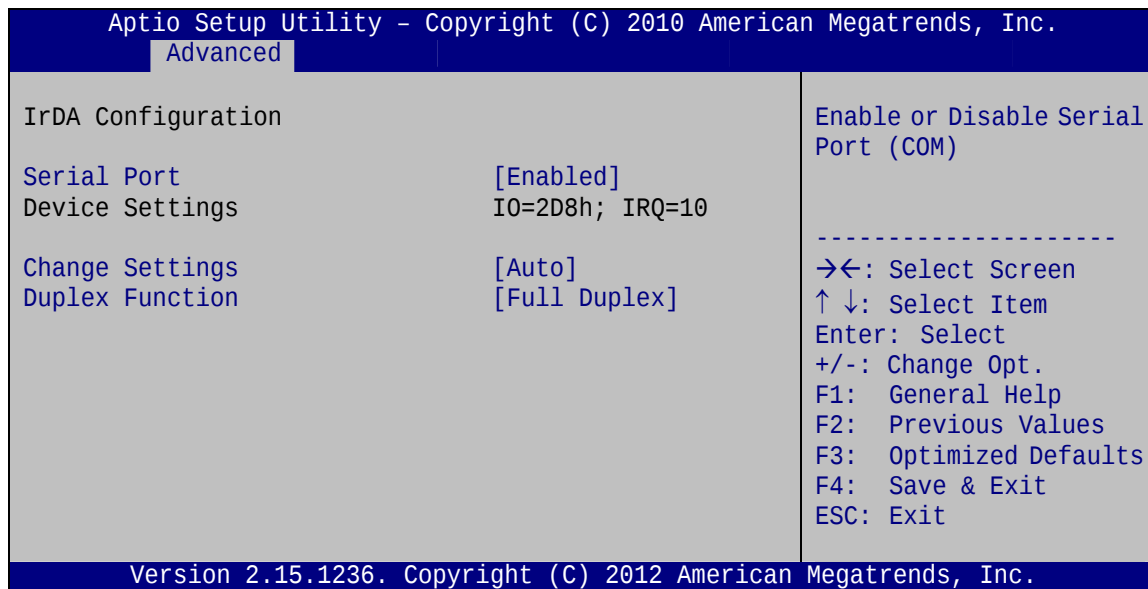


WSB-H810 PICMG 1.0 CPU Card

- ➔ **IO=2E0h;** Serial Port I/O port address is 2E0h and the interrupt
- IRQ=10, 11** address is IRQ10, 11

5.3.7.2 IrDA Configuration

Use the **IrDA Configuration** menu (**BIOS Menu 11**) to configure the infrared port.



BIOS Menu 11: IrDA Configuration Menu

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the infrared port.

- ➔ **Disabled** Disable the infrared port
- ➔ **Enabled** **DEFAULT** Enable the infrared port

➔ **Change Settings [Auto]**

Use the **Change Settings** option to change the infrared port IO port address and interrupt address.

- ➔ **Auto** **DEFAULT** The infrared port IO port address and interrupt address are automatically detected.

- ➔ **IO=2D8h;**
IRQ=10 Infrared port I/O port address is 2D8h and the interrupt address is IRQ10
- ➔ **IO=2C0h;**
IRQ=10, 11 Infrared port I/O port address is 2C0h and the interrupt address is IRQ10, 11
- ➔ **IO=2C8h;**
IRQ=10, 11 Infrared port I/O port address is 2C8h and the interrupt address is IRQ10, 11
- ➔ **IO=2D0h;**
IRQ=10, 11 Infrared port I/O port address is 2D0h and the interrupt address is IRQ10, 11
- ➔ **IO=2D8h;**
IRQ=10, 11 Infrared port I/O port address is 2D8h and the interrupt address is IRQ10, 11
- ➔ **IO=2E0h;**
IRQ=10, 11 Infrared port I/O port address is 2E0h and the interrupt address is IRQ10, 11

➔ Duplex Function [Full Duplex]

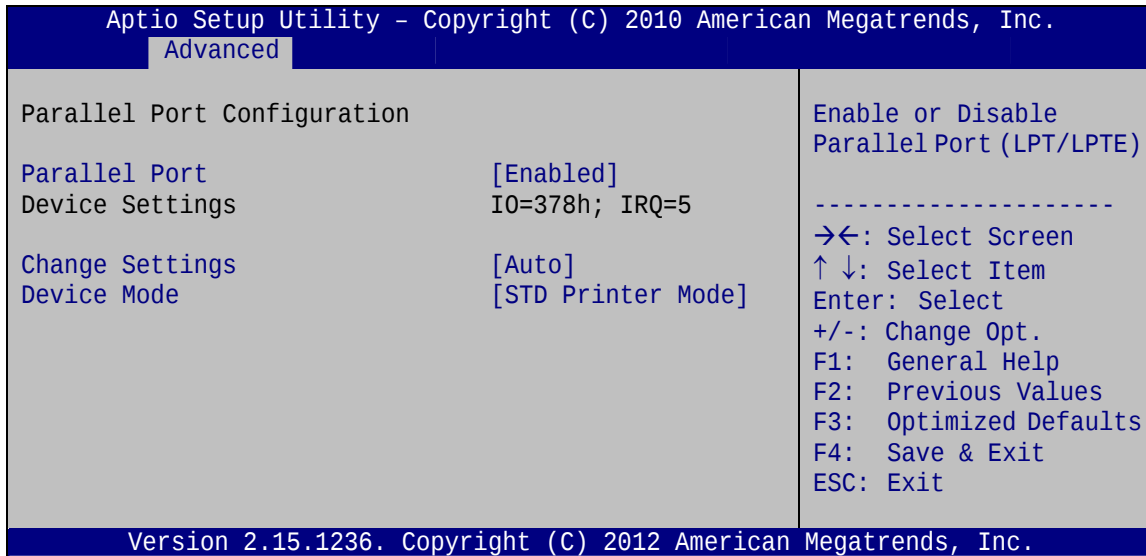
Use the **Duplex Function** option to select the IR data transmission mode.

- ➔ **Full Duplex** **DEFAULT** The communication channels is used to send and receive the data in both directions at the same time.
- ➔ **Half Duplex** Transmission signals are sent in both directions but one direction at a time so half duplex lines can alternatively send and receive data.

WSB-H810 PICMG 1.0 CPU Card

5.3.7.3 Parallel Port Configuration

Use the **Parallel Port Configuration** menu (**BIOS Menu 12**) to configure the serial port n.



BIOS Menu 12: Parallel Port Configuration Menu

→ Parallel Port [Enabled]

Use the **Parallel Port** option to enable or disable the parallel port.

- **Disabled** Disable the parallel port
- **Enabled** **DEFAULT** Enable the parallel port

→ Change Settings [Auto]

Use the **Change Settings** option to change the parallel port IO port address and interrupt address.

- **Auto** **DEFAULT** The parallel port IO port address and interrupt address are automatically detected.
- **IO=378h; IRQ=5** Parallel Port I/O port address is 378h and the interrupt address is IRQ5
- **IO=378h; IRQ=5, 7** Parallel Port I/O port address is 378h and the interrupt address is IRQ5, 7

➔ **IO=278h;** Parallel Port I/O port address is 278h and the
IRQ=5, 7 interrupt address is IRQ5, 7

➔ **IO=3BCh;** Parallel Port I/O port address is 3BCh and the
IRQ=5, 7 interrupt address is IRQ5, 7


➔ Device Mode [STD Printer Mode]

Use the **Device Mode** option to select the mode the parallel port operates in. Configuration options are listed below.

- | | |
|------------------------|----------------|
| ▪ STD Printer Mode | Default |
| ▪ SPP Mode | |
| ▪ EPP-1.9 and SPP Mode | |
| ▪ EPP-1.7 and SPP Mode | |
| ▪ ECP Mode | |
| ▪ ECP and EPP 1.9 Mode | |
| ▪ ECP and EPP 1.7 Mode | |

5.3.8 iWDD H/W Monitor

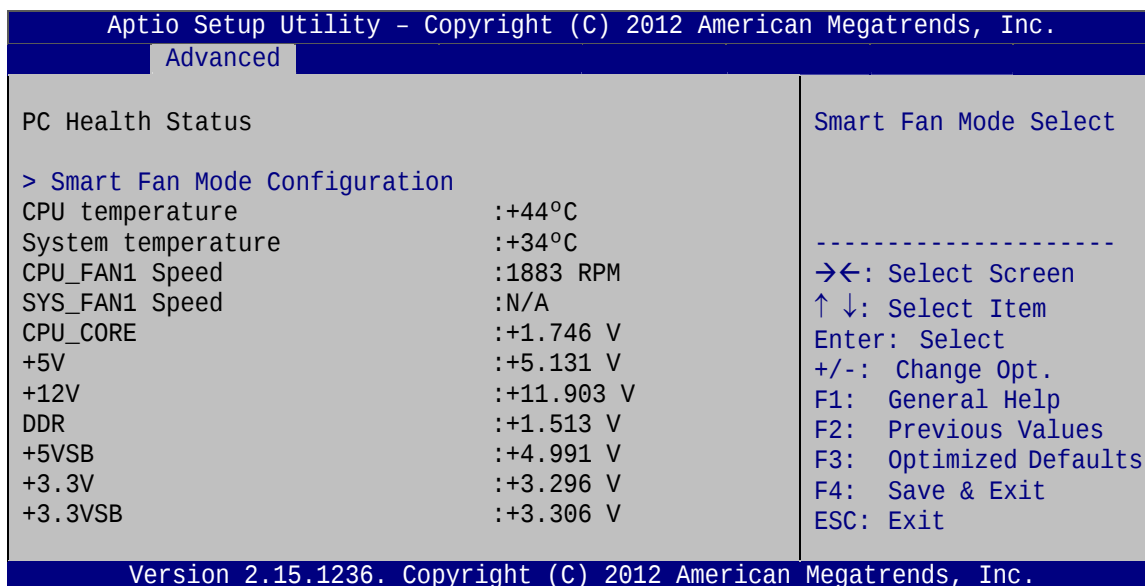The **iWDD H/W** Monitor menu (**BIOS Menu 13**) contains the fan configuration submenu and displays operating temperature, fan speeds and system voltages.



BIOS Menu 13: iWDD H/W Monitor

WSB-H810 PICMG 1.0 CPU Card

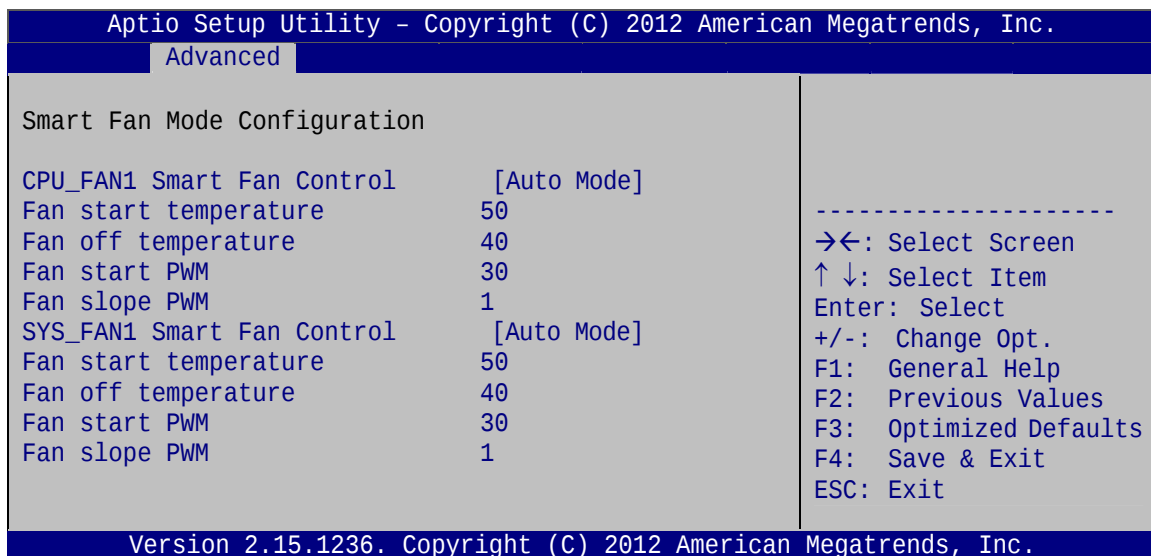
➔ PC Health Status

The following system parameters and values are shown. The system parameters that are monitored are:

- System Temperatures:
 - CPU Temperature
 - System Temperature
- Fan Speeds:
 - CPU Fan Speed
 - System Fan Speed
- Voltages:
 - CPU_CORE
 - +5V
 - +12V
 - DDR
 - +5VSB
 - +3.3V
 - +3.3VSB

5.3.8.1 Smart Fan Mode Configuration

Use the **Smart Fan Mode Configuration** submenu (**BIOS Menu 14**) to configure fan speed settings.



BIOS Menu 14: Smart Fan Mode Configuration

➔ **CPU_FAN1 Smart Fan Control/SYS_FAN1 Smart Fan Control [Auto Mode]**

Use the **CPU_FAN1 Smart Fan Control/SYS_FAN1 Smart Fan Control** option to configure the CPU/System Smart Fan.

➔ **Auto Mode** **DEFAULT** The fan adjusts its speed using Auto Mode settings.

➔ **Manual Mode** The fan spins at the speed set in Manual Mode settings.

➔ **Fan start/off temperature**

Use the + or – key to change the **Fan start/off temperature** value. Enter a decimal number between 1 and 100.

➔ **Fan start PWM**

Use the + or – key to change the **Fan start PWM** value. Enter a decimal number between 1 and 100.

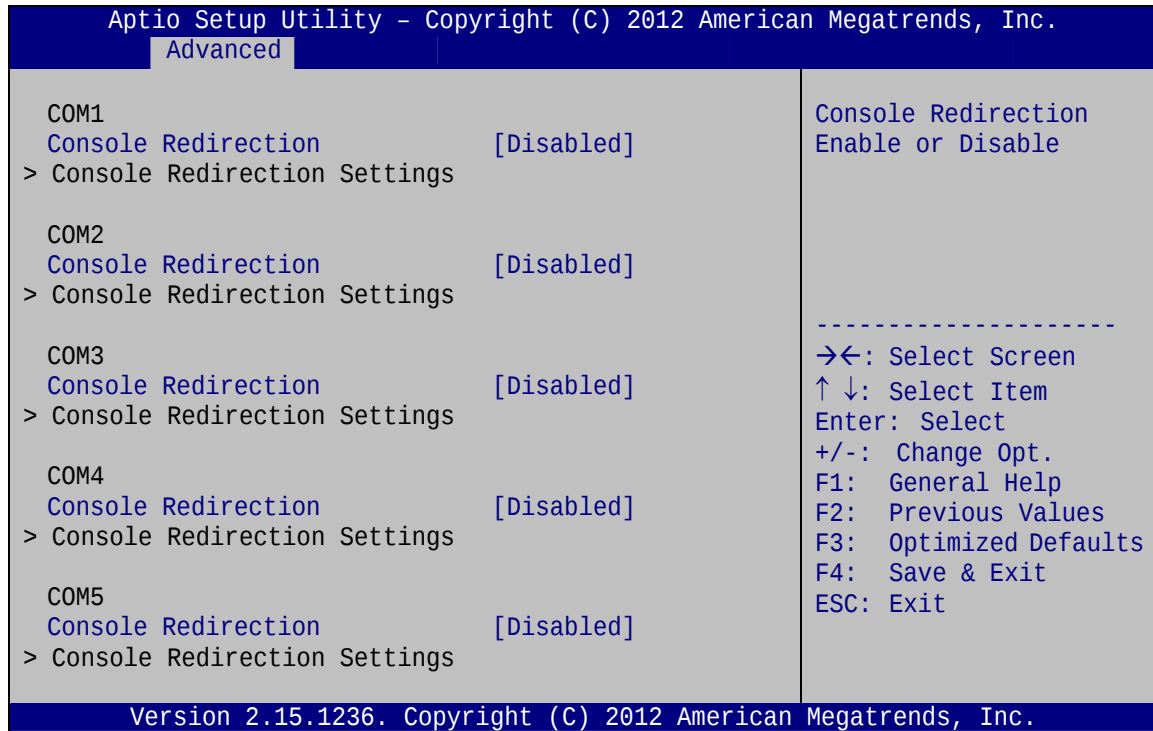
➔ **Fan slope PWM**

Use the + or – key to change the **Fan slope PWM** value. Enter a decimal number between 1 and 8.

5.3.9 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 15**) allows the console redirection options to be configured. Console redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

WSB-H810 PICMG 1.0 CPU Card



BIOS Menu 15: Serial Port Console Redirection

→ Console Redirection [Disabled]

Use **Console Redirection** option to enable or disable the console redirection function.

- **Disabled** **DEFAULT** Disabled the console redirection function
- **Enabled** Enabled the console redirection function

→ Terminal Type [ANSI]

Use the **Terminal Type** option to specify the remote terminal type.

- **VT100** The target terminal type is VT100
- **VT100+** The target terminal type is VT100+
- **VT-UTF8** The target terminal type is VT-UTF8
- **ANSI** **DEFAULT** The target terminal type is ANSI

→ Bits per second [115200]

Use the **Bits per second** option to specify the serial port transmission speed. The speed must match the other side. Long or noisy lines may require lower speeds.

- | | | | |
|---|--------|---------|--|
| → | 9600 | | Sets the serial port transmission speed at 9600. |
| → | 19200 | | Sets the serial port transmission speed at 19200. |
| → | 57600 | | Sets the serial port transmission speed at 57600. |
| → | 115200 | DEFAULT | Sets the serial port transmission speed at 115200. |

→ Data Bits [8]

Use the **Data Bits** option to specify the number of data bits.

- | | | | |
|---|---|---------|--------------------------|
| → | 7 | | Sets the data bits at 7. |
| → | 8 | DEFAULT | Sets the data bits at 8. |

→ Parity [None]

Use the **Parity** option to specify the parity bit that can be sent with the data bits for detecting the transmission errors.

- | | | | |
|---|-------|---------|---|
| → | None | DEFAULT | No parity bit is sent with the data bits. |
| → | Even | | The parity bit is 0 if the number of ones in the data bits is even. |
| → | Odd | | The parity bit is 0 if the number of ones in the data bits is odd. |
| → | Mark | | The parity bit is always 1. This option does not provide error detection. |
| → | Space | | The parity bit is always 0. This option does not provide error detection. |

WSB-H810 PICMG 1.0 CPU Card

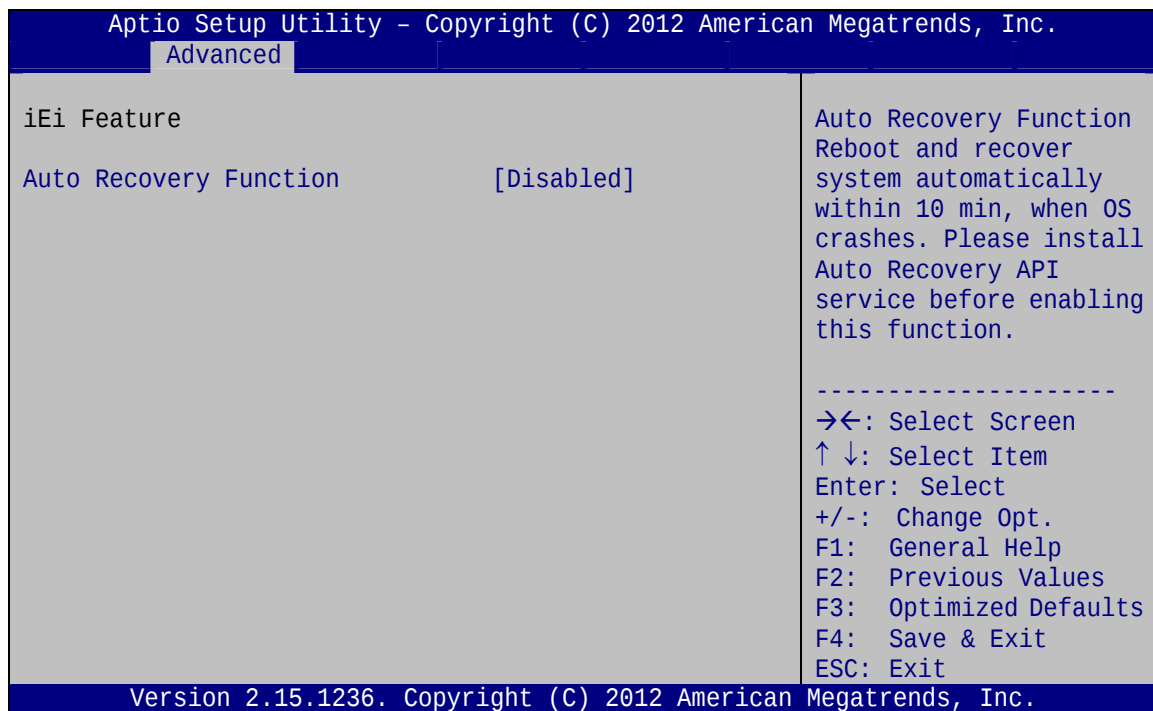
→ Stop Bits [1]

Use the **Stop Bits** option to specify the number of stop bits used to indicate the end of a serial data packet. Communication with slow devices may require more than 1 stop bit.

- 1 **DEFAULT** Sets the number of stop bits at 1.
- 2 Sets the number of stop bits at 2.

5.3.10 iEi Feature

Use the **iEi Feature** menu (**BIOS Menu 16**) to configure One Key Recovery function.



BIOS Menu 16: IEI Feature

→ Auto Recovery Function [Disabled]

Use the **Auto Recovery Function** BIOS option to enable or disable the auto recovery function of the IEI One Key Recovery.

- **Disabled** **DEFAULT** Auto recovery function disabled
- **Enabled** Auto recovery function enabled

5.4 Chipset

Use the **Chipset** menu (**BIOS Menu 17**) to access the PCH IO and System Agent (SA) configuration menus.



WARNING!

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

```
Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.
Main    Advanced  Chipset    Boot    Security  Save & Exit
> PCH-IO Configuration
> System Agent (SA) Configuration

PCH Parameters
-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit


Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.
```

BIOS Menu 17: Chipset

WSB-H810 PICMG 1.0 CPU Card

5.4.1 PCH-IO Configuration

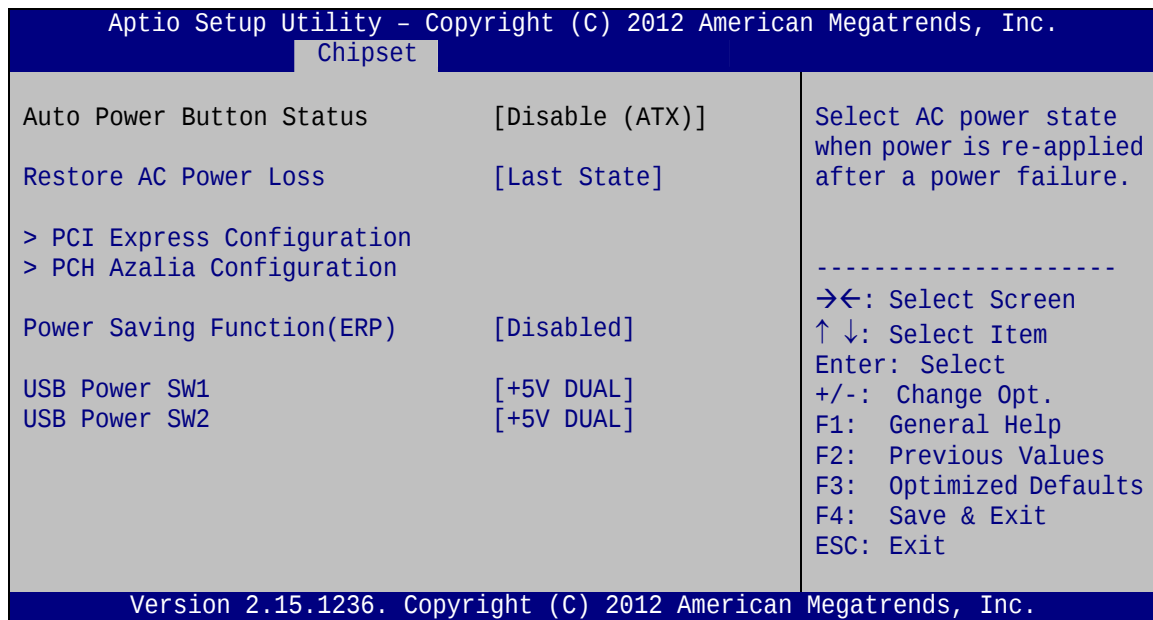Use the **PCH-IO Configuration** menu (**BIOS Menu 18**) to configure the PCH parameters.



BIOS Menu 18: PCH-IO Configuration

→ Restore AC Power Loss [Last State]

Use the **Restore AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

- **Power Off** The system remains turned off
- **Power On** The system turns on
- **Last State** **DEFAULT** The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

→ Power Saving Function(ERP) [Disabled]

Use the **Power Saving Function(ERP)** BIOS option to enable or disable the power saving function.

- **Disabled** **DEFAULT** Power saving function is disabled.
- **Enabled** Power saving function is enabled. It will reduce power consumption when the system is off.



➔ **USB Power SW1 [+5V DUAL]**

Use the **USB Power SW1** BIOS option to configure the USB power source for the corresponding USB connectors (**Table 5-2**).

- ➔ **+5V** Sets the USB power source to +5V
- ➔ **+5V DUAL** **DEFAULT** Sets the USB power source to +5V dual

➔ **USB Power SW2 [+5V DUAL]**

Use the **USB Power SW2** BIOS option to configure the USB power source for the corresponding USB connectors (**Table 5-2**).

- ➔ **+5V** Sets the USB power source to +5V
- ➔ **+5V DUAL** **DEFAULT** Sets the USB power source to +5V dual

BIOS Options	Configured USB Ports
USB Power SW1	USB2-1 (external USB 2.0 port) USB2-2 (external USB 2.0 port)
USB Power SW2	USB2-4 (internal USB 2.0 ports) USB2-5 (internal USB 2.0 ports) USB2-3 (internal USB 2.0 port, Type A) USB3-1 (internal USB 3.0 ports)


Table 5-2: BIOS Options and Configured USB Ports



WSB-H810 PICMG 1.0 CPU Card

5.4.1.1 PCI Express Configuration

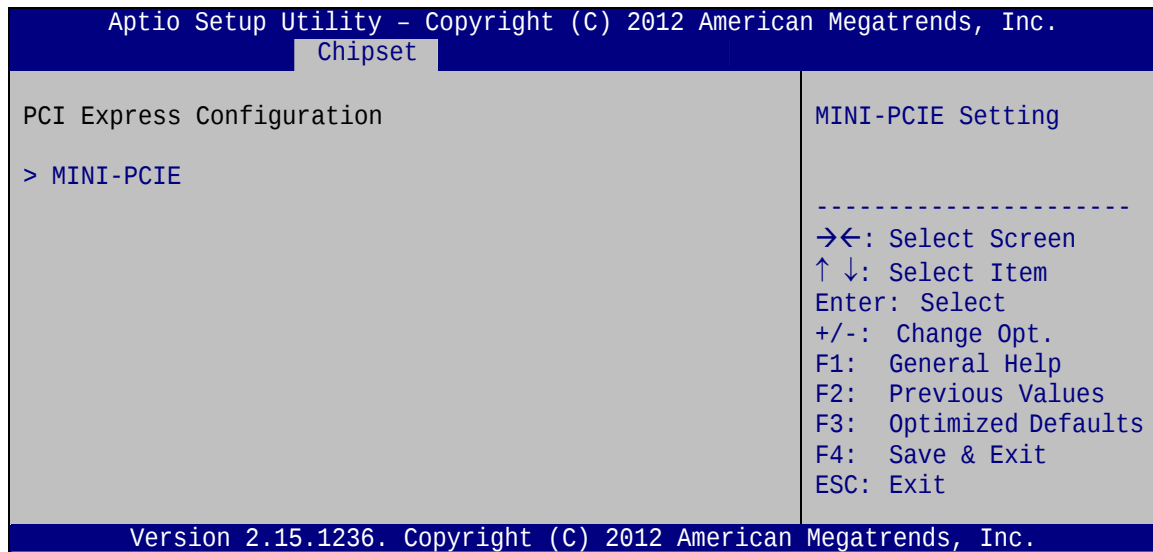
Use the **PCI Express Configuration** menu (**BIOS Menu 19**) to configure the PCIe Mini slot.



BIOS Menu 19: PCI Express Configuration

5.4.1.1.1 MINI-PCIE

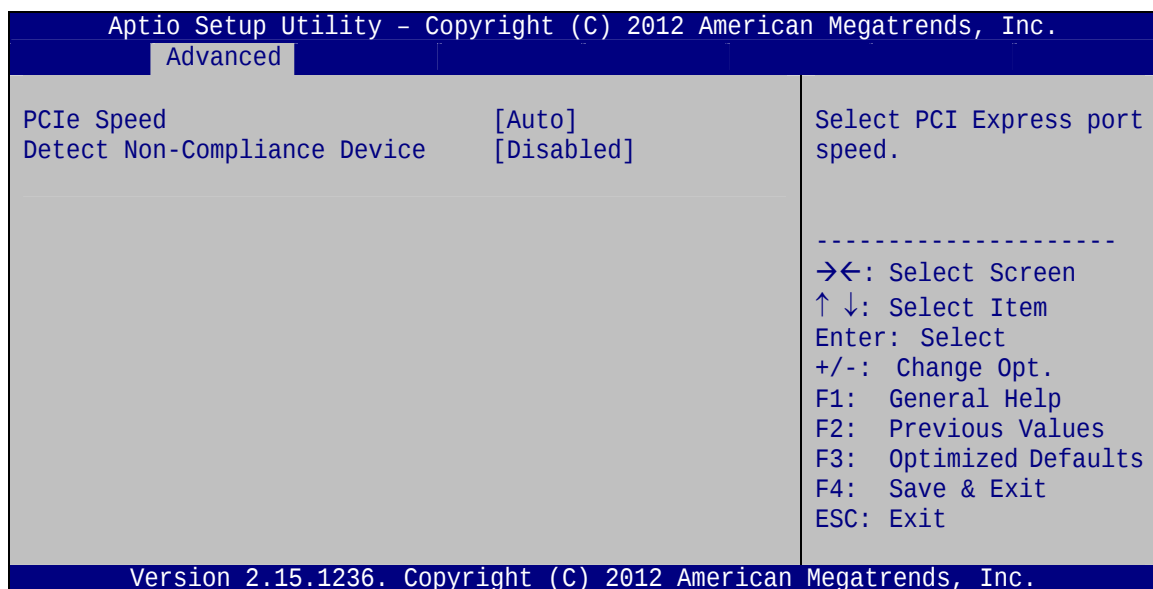Use the **MINI-PCIE** menu (**BIOS Menu 20**) to configure the PCIe Mini slot settings.



BIOS Menu 20: MINI-PCIE

→ PCIe Speed [Auto]

Use this option to select the support type of the PCIe Mini slot. The following options are available:

- Auto **Default**
- Gen1
- Gen2

→ Detect Non-Compliance Device [Disabled]


Use the **Detect Non-Compliance Device** option to enable or disable detecting if a non-compliance PCI Express device is connected to the PCI Express slot.

- | | | | |
|---|-----------------|----------------|---|
| → | Disabled | DEFAULT | Disables to detect if a non-compliance PCI Express device is connected to the PCI Express slot. |
| → | Enabled | | Enables to detect if a non-compliance PCI Express device is connected to the PCI Express slot. |

WSB-H810 PICMG 1.0 CPU Card

5.4.1.2 PCH Azalia Configuration

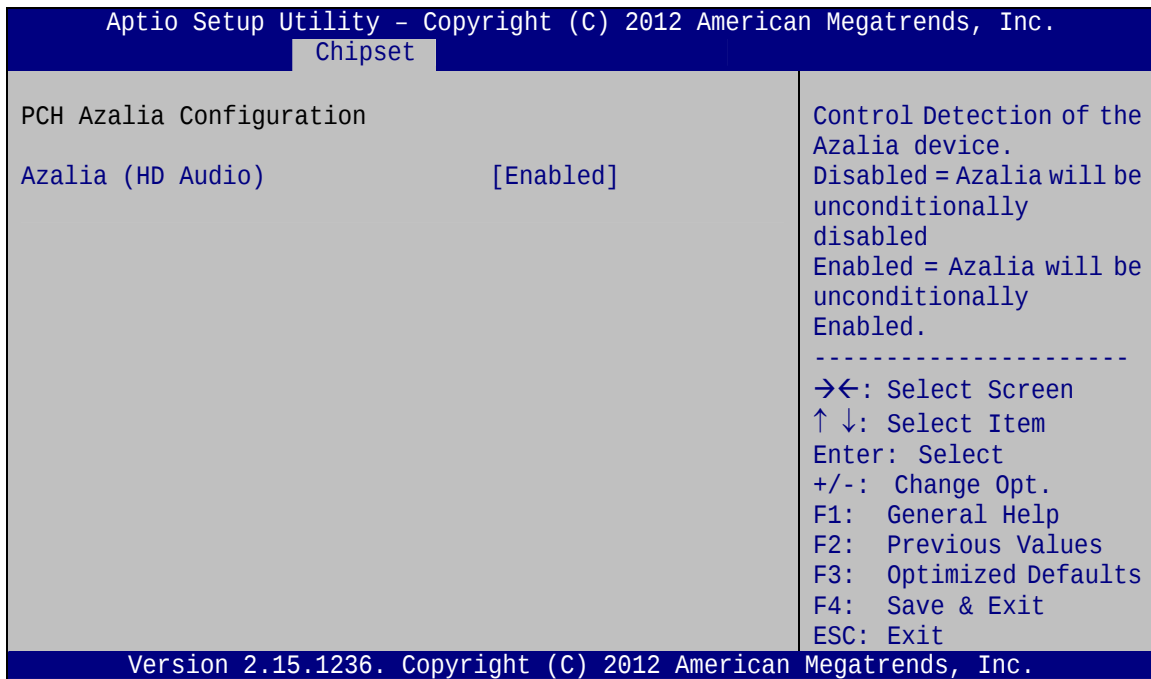Use the **PCH Azalia Configuration** menu (**BIOS Menu 21**) to configure the PCH Azalia settings.


**BIOS Menu 21: PCH Azalia Configuration**➔ **Azalia [Enabled]**

Use the **Azalia** option to enable or disable the High Definition Audio controller.

- ➔ **Disabled** The onboard High Definition Audio controller is disabled
- ➔ **Enabled DEFAULT** The onboard High Definition Audio controller automatically detected and enabled

5.4.2 System Agent (SA) Configuration

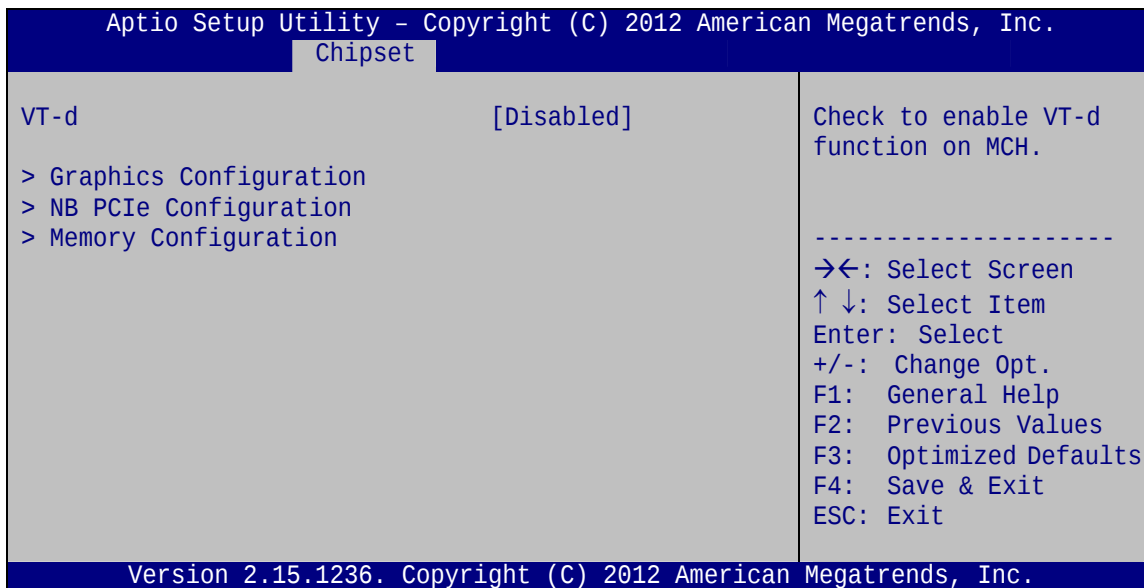Use the **System Agent (SA) Configuration** menu (**BIOS Menu 22**) to configure the System Agent (SA) parameters.



BIOS Menu 22: System Agent (SA) Configuration

→ VT-d [Disabled]

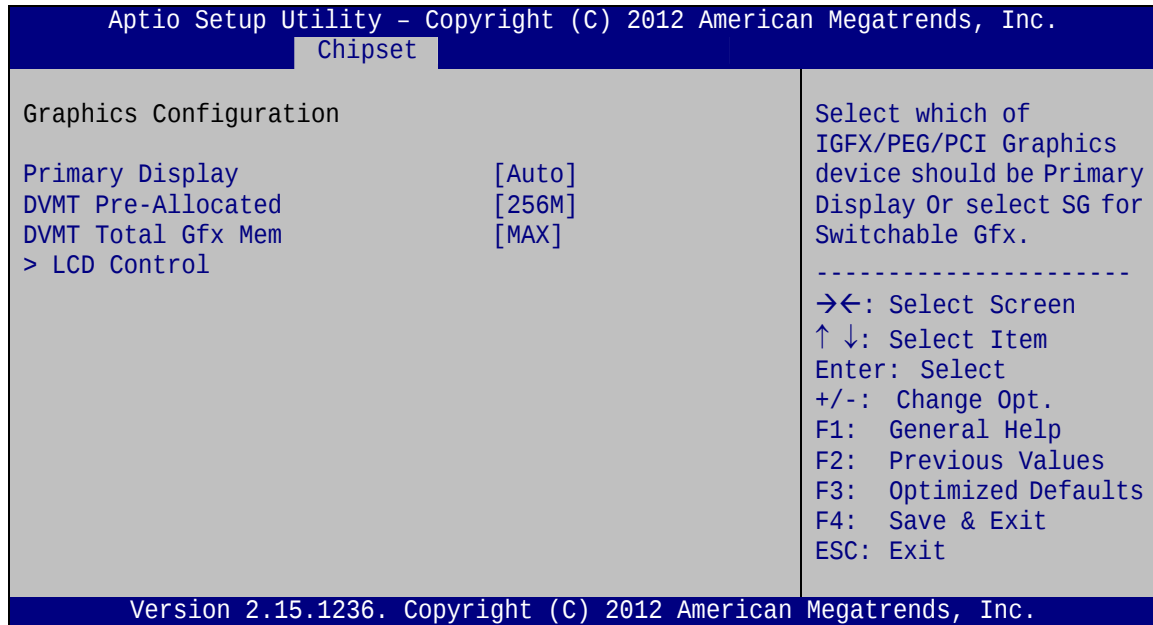
Use the **VT-d** option to enable or disable VT-d support.

- **Disabled** **DEFAULT** Disables VT-d support.
- **Enabled** Enables VT-d support.

5.4.2.1 Graphics Configuration

Use the **Graphics Configuration** (**BIOS Menu 23**) menu to configure the video device connected to the system.

WSB-H810 PICMG 1.0 CPU Card



BIOS Menu 23: Graphics Configuration

➔ Primary Display [Auto]

Use the **Primary Display** option to select the primary graphics controller the system uses. The following options are available:

- Auto **Default**
- IGFX
- PEG
- PCIE/PCI

➔ DVMT Pre-Allocated [256M]

Use the **DVMT Pre-Allocated** option to set the amount of system memory allocated to the integrated graphics processor when the system boots. The system memory allocated can then only be used as graphics memory, and is no longer available to applications or the operating system. Configuration options are listed below:

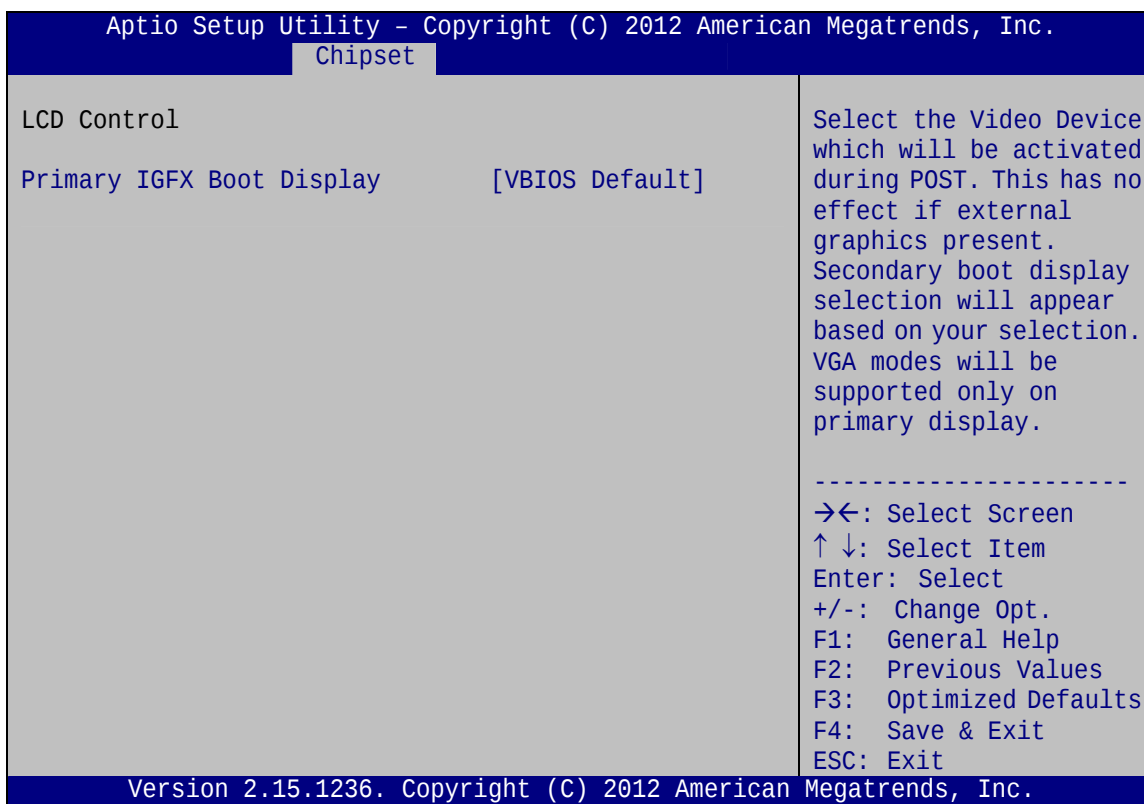
- 32M
- 64M
- 128M
- 256M **Default**
- 512M

→ **DVMT Total Gfx Mem [MAX]**

Use the **DVMT Total Gfx Mem** option to select DVMT5.0 total graphic memory size used by the internal graphic device. The following options are available:

- 128M
- 256M
- MAX **Default**

5.4.2.1.1 LCD Control



BIOS Menu 24: LCD Control

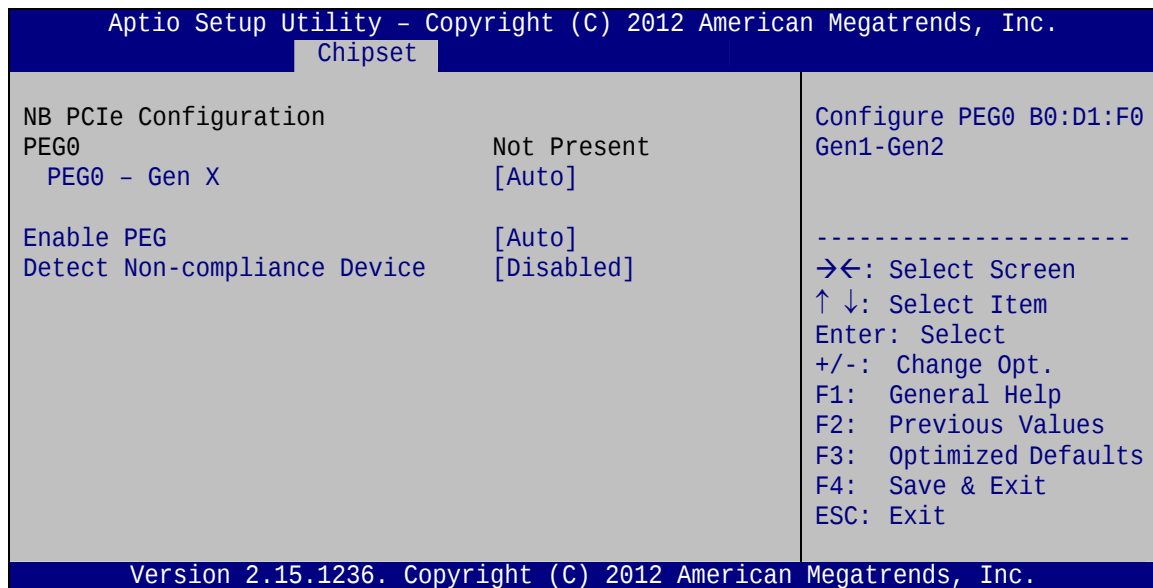
→ **Primary IGFX Boot Display [VBIOS Default]**

Use the **Primary IGFX Boot Display** option to select the display device used by the system when it boots. Configuration options are listed below.

- VBIOS Default **DEFAULT**
- CRT
- DP

WSB-H810 PICMG 1.0 CPU Card

5.4.2.2 NB PCIe Configuration



BIOS Menu 25: NB PCIe Configuration

→ PEG0 – Gen X [Auto]

Use the **PEG0 – Gen X** option to select the support type of the PCI Express slot. The following options are available:

- Auto **Default**
- Gen1
- Gen2

→ Enable PEG [Auto]

Use the **Enable PEG** option to enable or disable the PCI Express (PEG) controller.

- **Disabled** Disables the PCI Express (PEG) controller.
- **Enabled** Enables the PCI Express (PEG) controller.
- **Auto** **DEFAULT** The PCI Express (PEG) controller is disabled if no PCI Express devices are connected.


→ Detect Non-Compliance Device [Disabled]

Use the **Detect Non-Compliance Device** option to enable or disable detecting if a non-compliance PCI Express device is connected to the PCI Express port.

- | | | |
|------------|----------------|---|
| ➔ Disabled | DEFAULT | Disables to detect if a non-compliance PCI Express device is connected to the PCI Express port. |
| ➔ Enabled | | Enables to detect if a non-compliance PCI Express device is connected to the PCI Express port. |

5.4.2.3 Memory Configuration

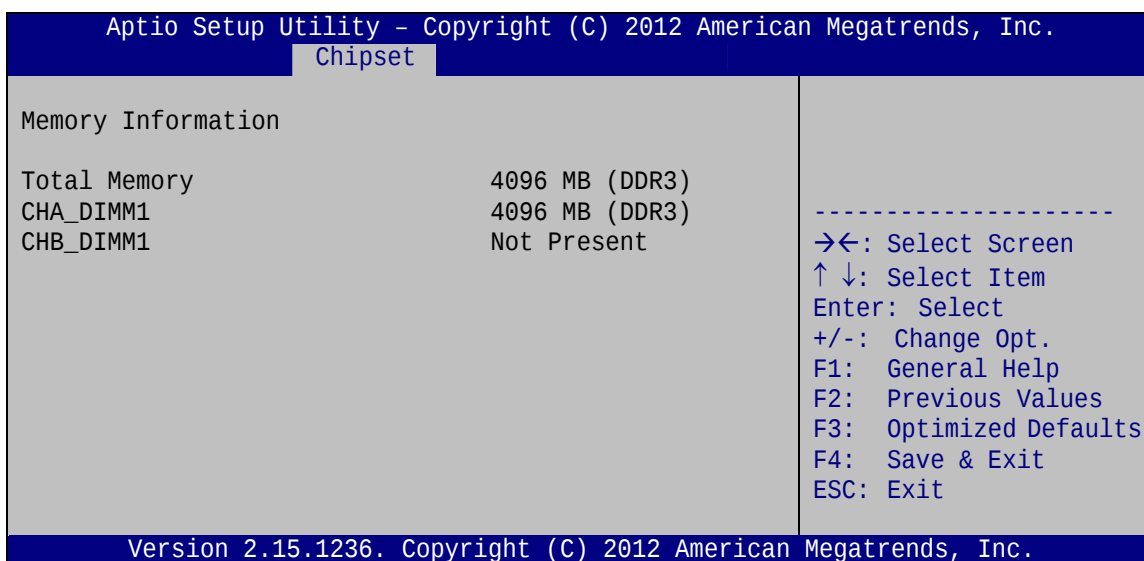Use the **Memory Configuration** submenu (**BIOS Menu 26**) to view memory information.




BIOS Menu 26: Memory Configuration

WSB-H810 PICMG 1.0 CPU Card

5.5 Boot

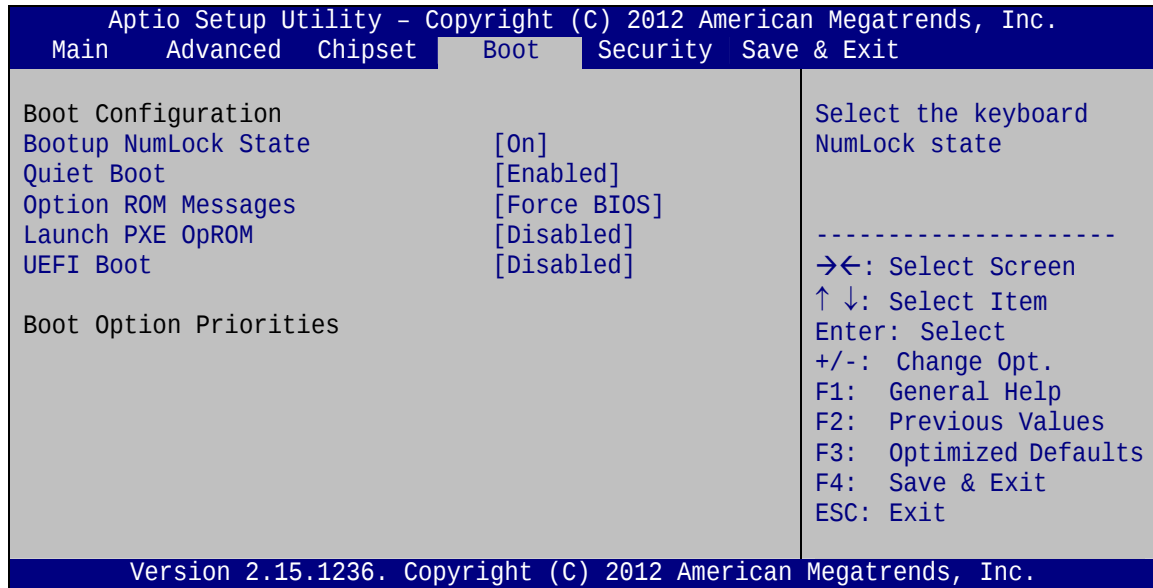Use the **Boot** menu (**BIOS Menu 27**) to configure system boot options.

**BIOS Menu 27: Boot**→ **Bootup NumLock State [On]**

Use the **Bootup NumLock State** BIOS option to specify if the number lock setting must be modified during boot up.

→ **On** **DEFAULT** Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.

→ **Off** Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.



➔ Quiet Boot [Enabled]

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- | | | | |
|---|----------|---------|---|
| ➔ | Disabled | | Normal POST messages displayed |
| ➔ | Enabled | DEFAULT | OEM Logo displayed instead of POST messages |

➔ Option ROM Messages [Force BIOS]

Use the **Option ROM Messages** option to set the Option ROM display mode.

- | | | | |
|---|--------------|---------|----------------------------------|
| ➔ | Force BIOS | DEFAULT | Sets display mode to force BIOS. |
| ➔ | Keep Current | | Sets display mode to current. |

➔ Launch PXE OpROM [Disabled]

Use the **Launch PXE OpROM** option to enable or disable boot option for legacy network devices.

- | | | | |
|---|----------|---------|----------------------------|
| ➔ | Disabled | DEFAULT | Ignore all PXE Option ROMs |
| ➔ | Enabled | | Load PXE Option ROMs. |

➔ UEFI Boot [Disabled]

Use the **UEFI Boot** option to enable or disable to boot from the UEFI devices.


- | | | | |
|---|----------|---------|-------------------------------------|
| ➔ | Enabled | | Boot from UEFI devices is enabled. |
| ➔ | Disabled | DEFAULT | Boot from UEFI devices is disabled. |



WSB-H810 PICMG 1.0 CPU Card

5.6 Security

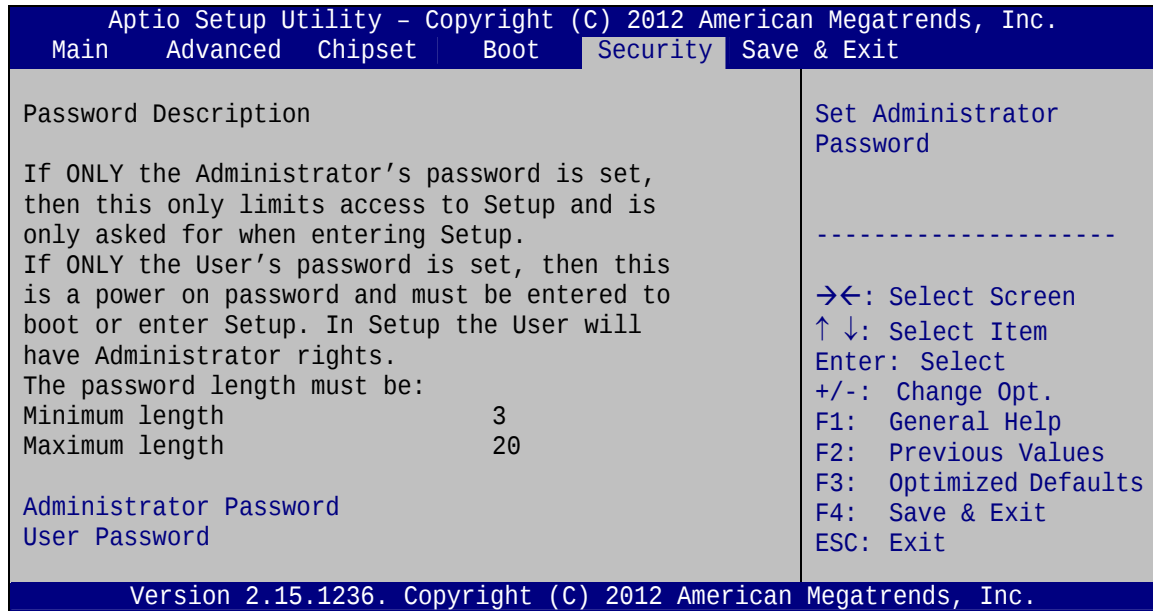Use the **Security** menu (**BIOS Menu 28**) to set system and user passwords.



BIOS Menu 28: Security

→ Administrator Password

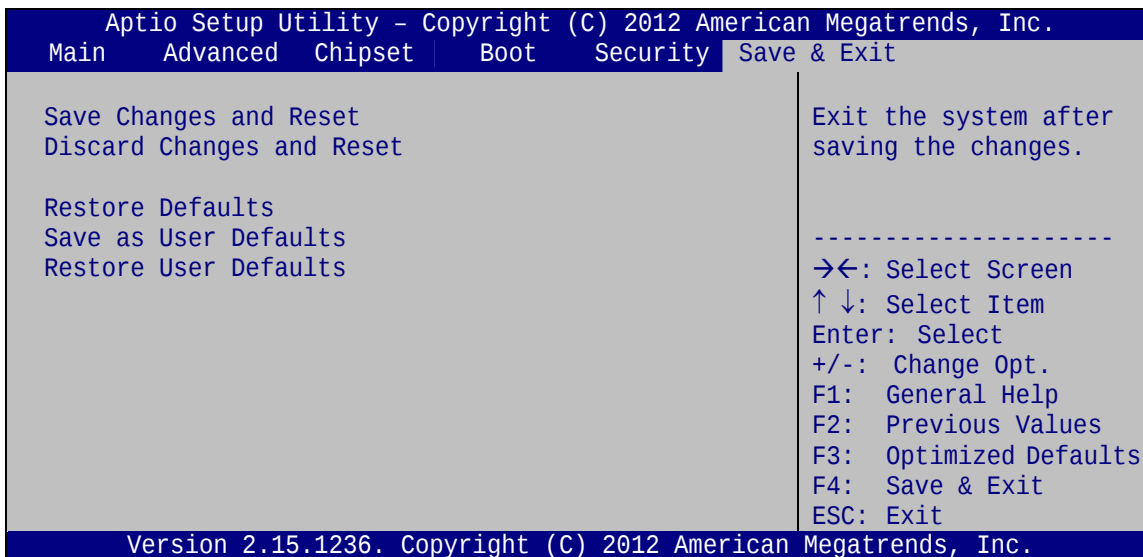
Use the **Administrator Password** to set or change a administrator password.

→ User Password

Use the **User Password** to set or change a user password.

5.7 Save & Exit

Use the **Save & Exit** menu (**BIOS Menu 29**) to load default BIOS values, optimal failsafe values and to save configuration changes.



BIOS Menu 29: Save & Exit

→ Save Changes and Reset

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and reset the system.

→ Discard Changes and Reset

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

→ Restore Defaults

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

→ Save as User Defaults

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

→ Restore User Defaults

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

Chapter

6

Software Drivers

6.1 Available Software Drivers

**NOTE:**

The content of the CD may vary throughout the life cycle of the product and is subject to change without prior notice. Visit the IEI website or contact technical support for the latest updates.

The following drivers can be installed on the system:

- Chipset
- Graphics
- LAN
- Audio
- USB 3.0

Installation instructions are given below.

6.2 Software Installation

All the drivers for the WSB-H810 are on the CD that came with the system. To install the drivers, please follow the steps below.

Step 1: Insert the CD into a CD drive connected to the system.

**NOTE:**

If the installation program doesn't start automatically:
Click "Start->My Computer->CD Drive->autorun.exe"

Step 2: The driver main menu appears.

Step 3: Click WSB-H810.

Step 4: A new screen with a list of available drivers appears.

Step 5: Install all of the necessary drivers in the menu.

WSB-H810 PICMG 1.0 CPU Card

6.3 Chipset Driver Installation

To install the chipset driver, please do the following.

Step 1: Access the driver list. (See **Section 6.2**)

Step 2: Click **"1-Chipset"**.

Step 3: Locate the setup file and double click on it.

Step 4: When the setup files are completely extracted, the **Welcome Screen** in **Figure 6-1** appears.

Step 5: Click **Next** to continue.



Figure 6-1: Chipset Driver Welcome Screen

Step 6: The license agreement in **Figure 6-2** appears.

Step 7: Read the **License Agreement**.

Step 8: Click **Yes** to continue.



Figure 6-2: Chipset Driver License Agreement

Step 9: The **Read Me** file in **Figure 6-3** appears.

Step 10: Click **Next** to continue.

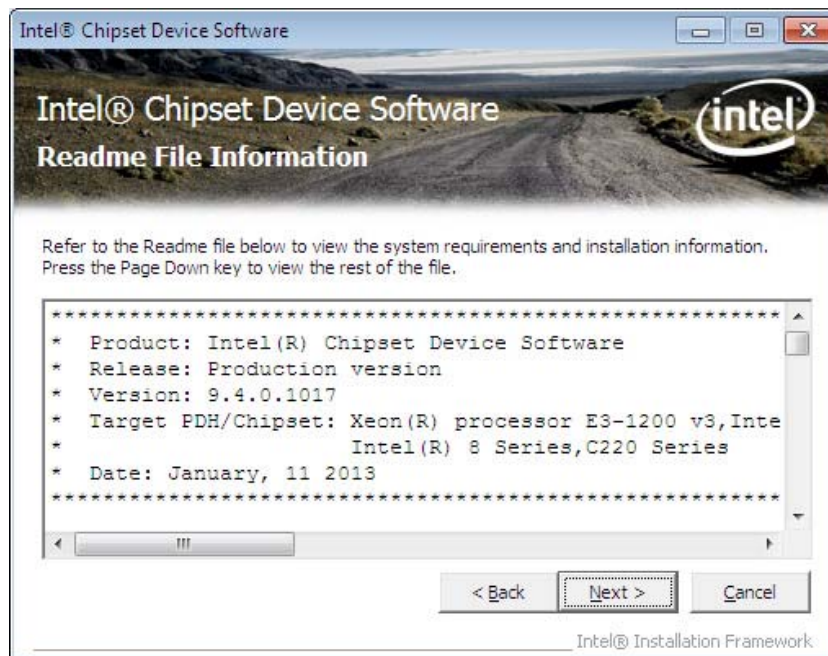


Figure 6-3: Chipset Driver Read Me File

WSB-H810 PICMG 1.0 CPU Card

Step 11: **Setup Progress** is performed as shown in **Figure 6-4**.

Step 12: Once the **Setup Progress** is complete, click **Next** to continue.

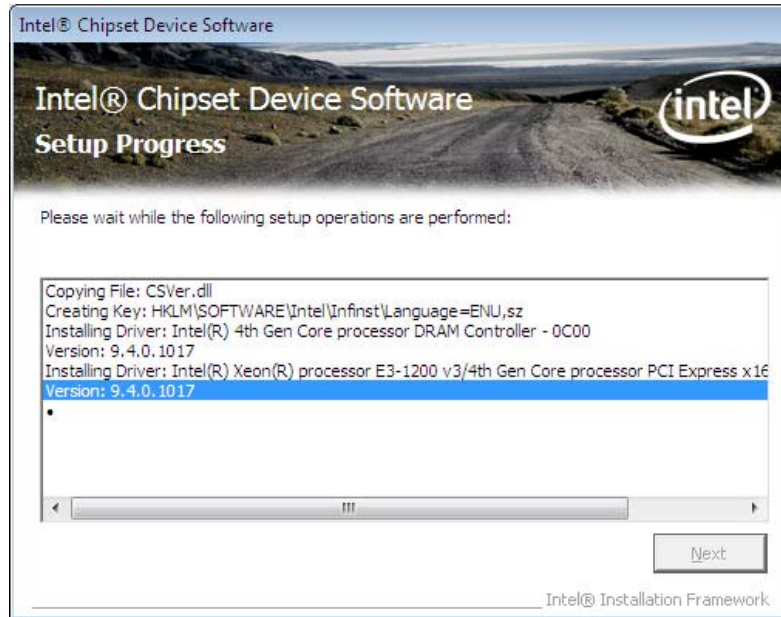


Figure 6-4: Chipset Driver Setup Progress

Step 13: The **Setup Is Complete** screen in **Figure 6-5** appears. Click **Finish** to exit.



Figure 6-5: Chipset Driver Installation Finish Screen

6.4 Graphics Driver Installation

To install the Graphics driver, please do the following.

Step 1: Access the driver list. (See **Section 6.2**)

Step 2: Click “**2-Graphic**”.

Step 3: Double click the setup file which corresponds to the operating system.

Step 4: The InstallShield Wizard for the graphics driver appears (**Figure 6-6**). Click **Next** to start.

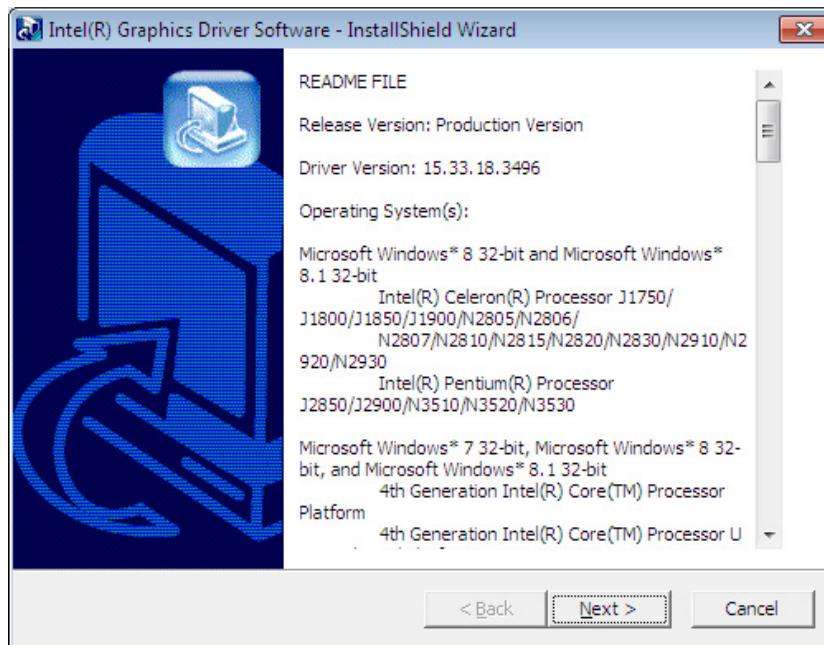


Figure 6-6: Graphics Driver InstallShield Wizard

Step 5: The InstallShield Wizard starts to extract files (**Figure 6-7**).

Step 6: When the setup files are completely extracted, click **Next** to continue.

WSB-H810 PICMG 1.0 CPU Card

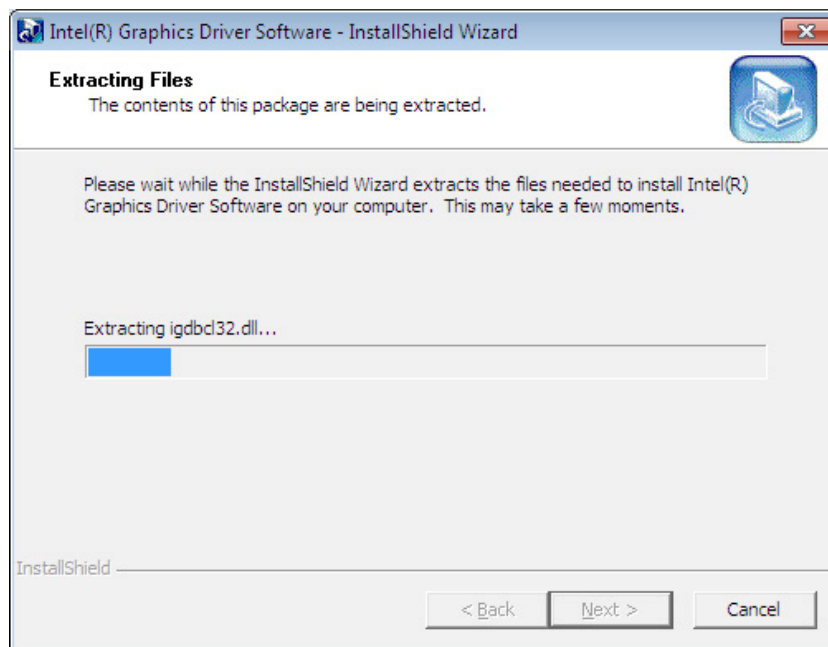


Figure 6-7: Graphics Driver – Extracting Files

Step 7: The **Welcome Screen** in Figure 6-8 appears. Click **Next** to continue.

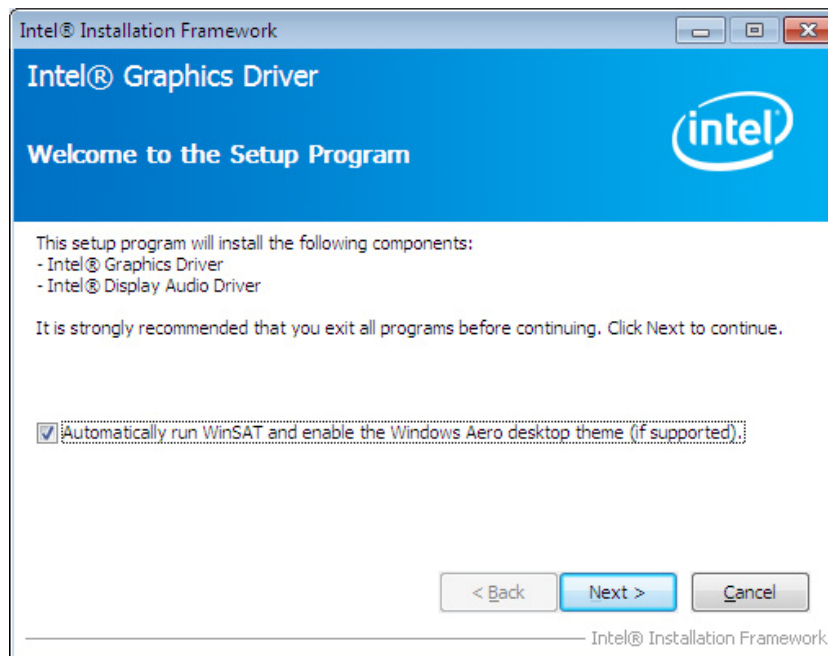


Figure 6-8: Graphics Driver Welcome Screen

Step 8: The **License Agreement** in **Figure 6-9** appears. Click **Yes** to accept the agreement and continue.



Figure 6-9: Graphics Driver License Agreement

Step 9: The **Read Me** file in **Figure 6-10** appears. Click **Next** to continue.

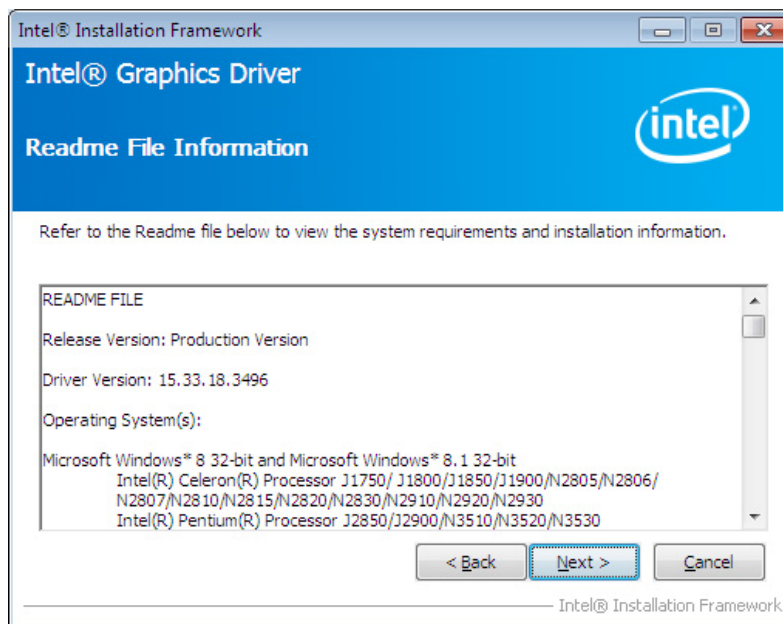


Figure 6-10: Graphics Driver Read Me File

WSB-H810 PICMG 1.0 CPU Card

Step 10: **Setup Operations** are performed as shown in **Figure 6-11**.

Step 11: Once the **Setup Operations** are complete, click **Next** to continue.

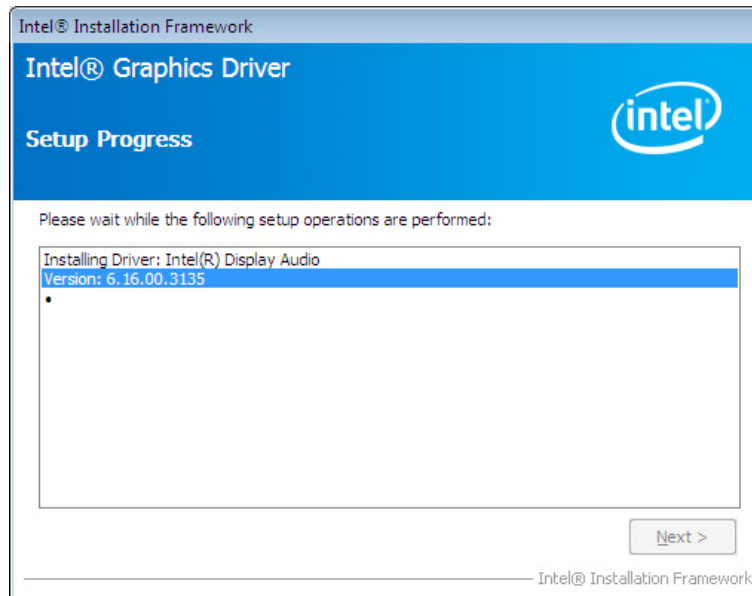


Figure 6-11: Graphics Driver Setup Progress

Step 12: The **Finish** screen in **Figure 6-12** appears. Select “**Yes, I want to restart this computer now**” and click **Finish**.

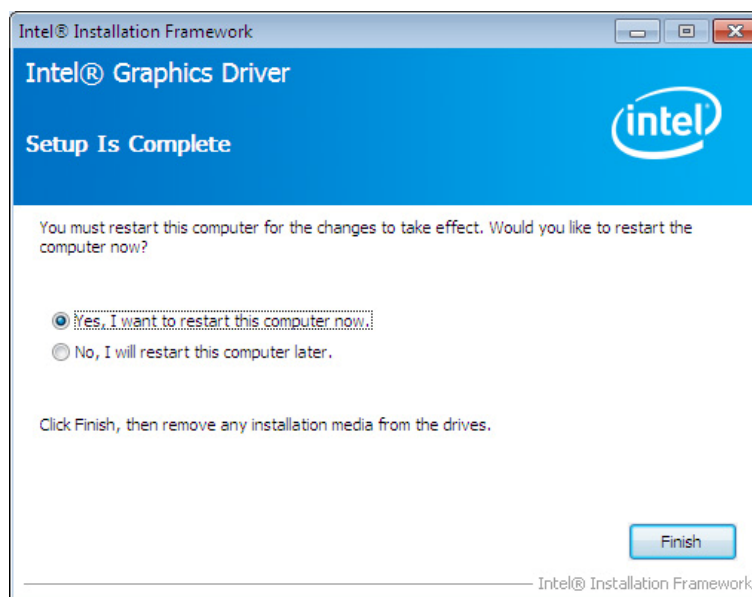


Figure 6-12: Graphics Driver Installation Finish Screen

6.5 LAN Driver Installation

To install the LAN driver, please do the following.

Step 1: Right-click the Computer button from the start menu and select **Properties** (Figure 6-13).

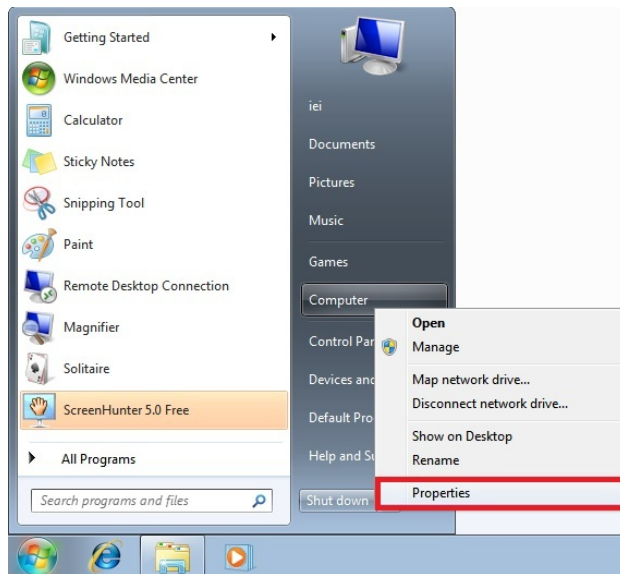


Figure 6-13: Windows Control Panel

Step 2: The system control panel window in Figure 6-14 appears.

Step 3: Click the **Device Manager** link (Figure 6-14).

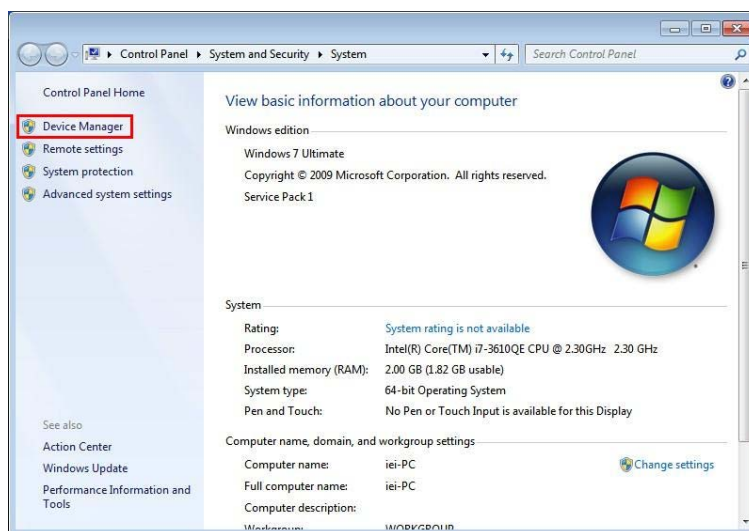


Figure 6-14: System Control Panel

WSB-H810 PICMG 1.0 CPU Card

- Step 4:** A list of system hardware devices appears (**Figure 6-15**).
- Step 5:** Right-click one of the Ethernet controllers that has question marks next to it (this means Windows does not recognize the device).
- Step 6:** Select **Update Driver Software**. See **Figure 6-15**.

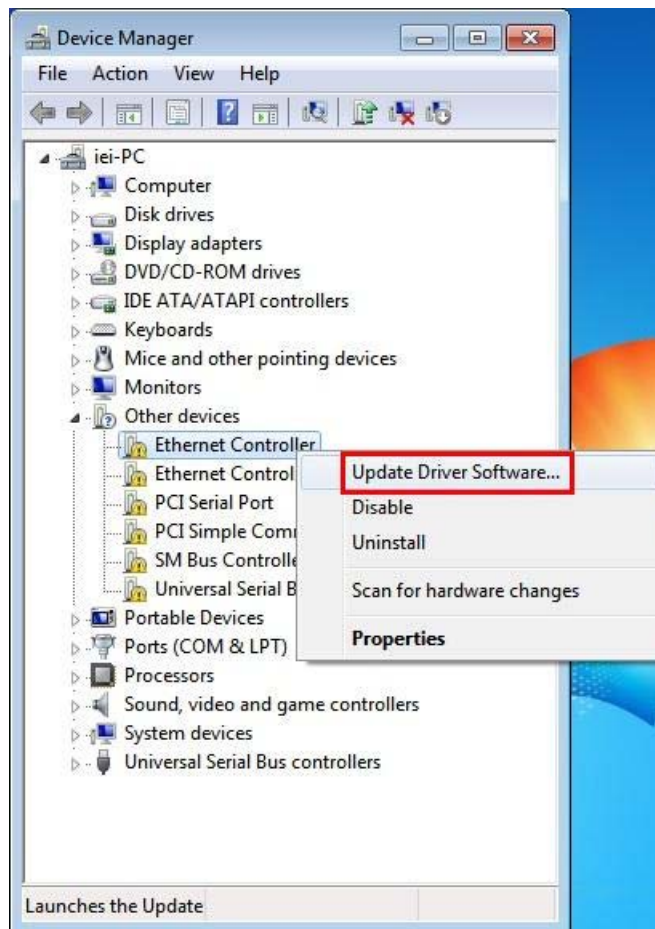


Figure 6-15: Device Manager List

Step 7: The Update Driver Software Window appears (Figure 6-16).

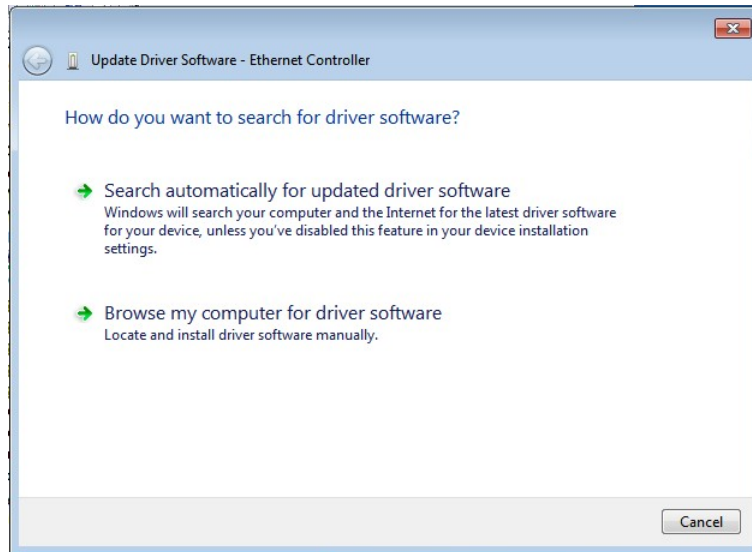


Figure 6-16: Update Driver Software Window

Step 8: Select "Browse my computer for driver software".

Step 9: Click **Browse** to select "X:\13-LAN" directory in the **Locate File** window, where "X:\1" is the system CD drive. (Figure 6-17).

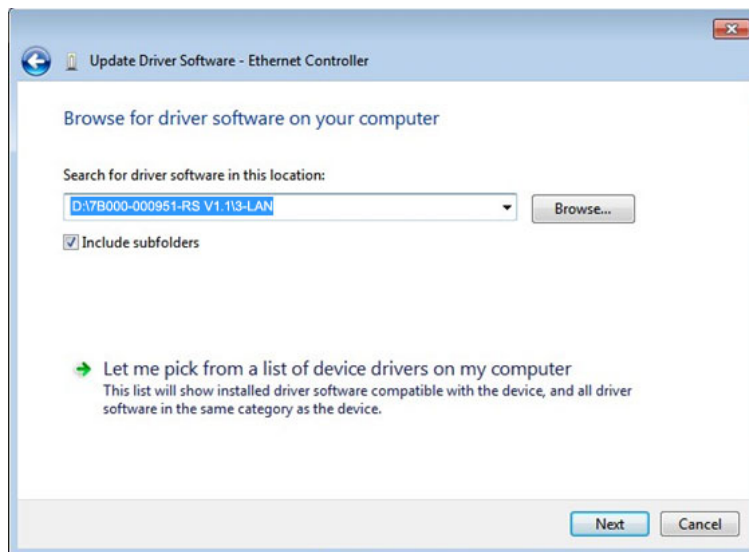


Figure 6-17: Locate Driver Files

Step 10: Click **NEXT** to continue.

WSB-H810 PICMG 1.0 CPU Card

Step 11: Driver Installation is performed as shown in **Figure 6-18**.

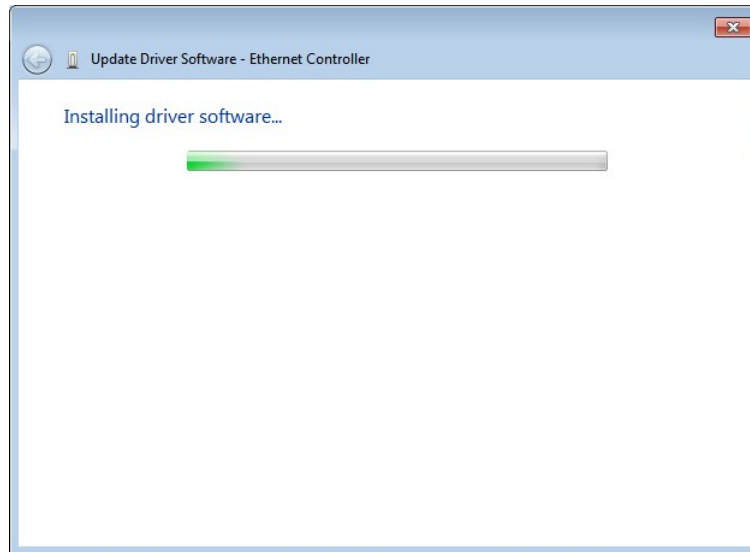


Figure 6-18: LAN Driver Installation

Step 12: The **Finish** screen appears. Click **Close** to exit.

Step 13: Right-click the other Ethernet controller that has question marks next to it as shown in **Figure 6-15**. Repeat **Step 6 ~ Step 12** to install the second Ethernet controller driver.

6.6 Audio Driver Installation

To install the audio driver, please do the following.

Step 1: Access the driver list. (See **Section 6.2**)

Step 2: Click "**4-Audio**".

Step 3: Double click the setup file.

Step 4: The InstallShield Wizard starts to extract files (**Figure 6-19**).

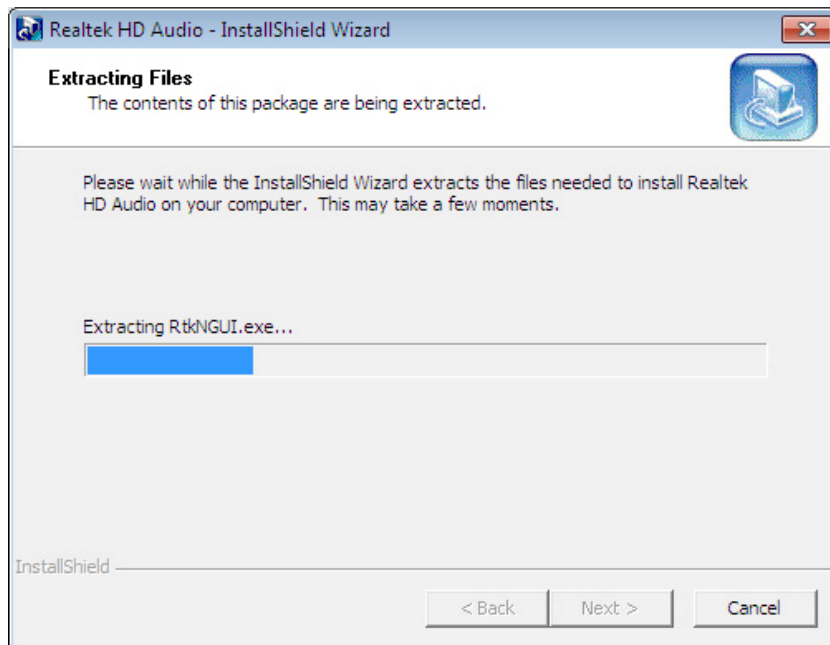


Figure 6-19: Audio Driver – Extracting Files

Step 5: The Audio Driver Installation screen in **Figure 6-20** appears. Click **Yes** to install the audio driver.

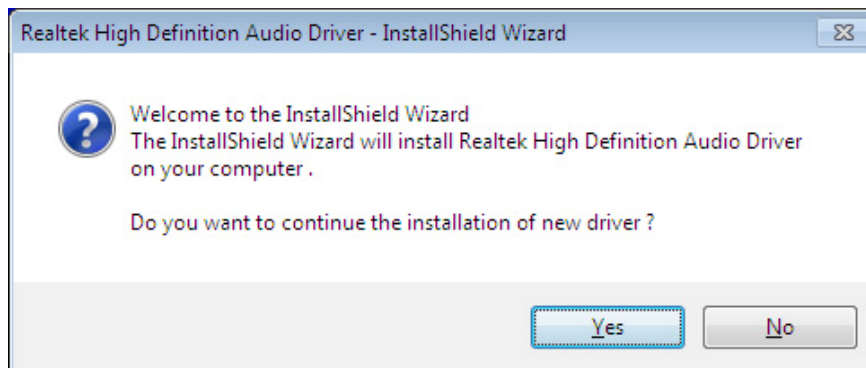


Figure 6-20: Audio Driver Installation Welcome Screen

Step 6: The driver installation begins.

Step 7: When the driver is installed, the driver installation finish screen in **Figure 6-21** appears. Select “**Yes, I want to restart my computer now**” and click **OK**.

WSB-H810 PICMG 1.0 CPU Card

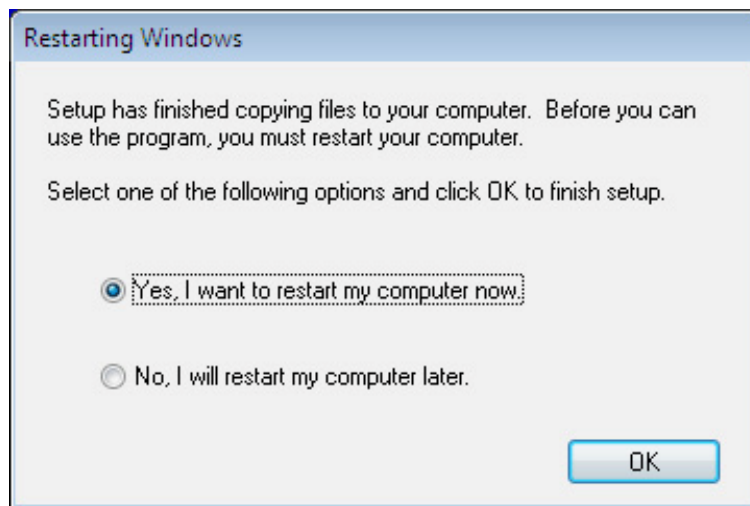


Figure 6-21: Audio Driver Installation Complete

Step 8: The system reboots.

6.7 USB 3.0 Driver Installation

**WARNING:**

Do not run this driver's installer (Setup.exe) from a USB storage device (ie. external USB hard drive or USB thumb drive). For proper installation, please copy driver files to a local hard drive folder and run from there.

To install the USB 3.0 driver, please follow the steps below.

Step 1: Access the driver list. (See **Section 6.2**)

Step 2: Click "**5-USB3.0**".

Step 3: Locate the setup file and double click on it.

Step 4: A **Welcome Screen** appears (**Figure 6-22**). Click **Next** to continue.



Figure 6-22: USB 3.0 Driver Welcome Screen

Step 5: The license agreement in **Figure 6-23** appears. Read the **License Agreement**.

Step 6: Click **Yes** to continue.



Figure 6-23: USB 3.0 Driver License Agreement

WSB-H810 PICMG 1.0 CPU Card

Step 7: The **Read Me** file in **Figure 6-24** appears. Click **Next** to continue.



Figure 6-24: USB 3.0 Driver Read Me File

Step 8: **Setup Operations** are performed as shown in **Figure 6-25**.

Step 9: Once the **Setup Operations** are complete, click **Next** to continue.

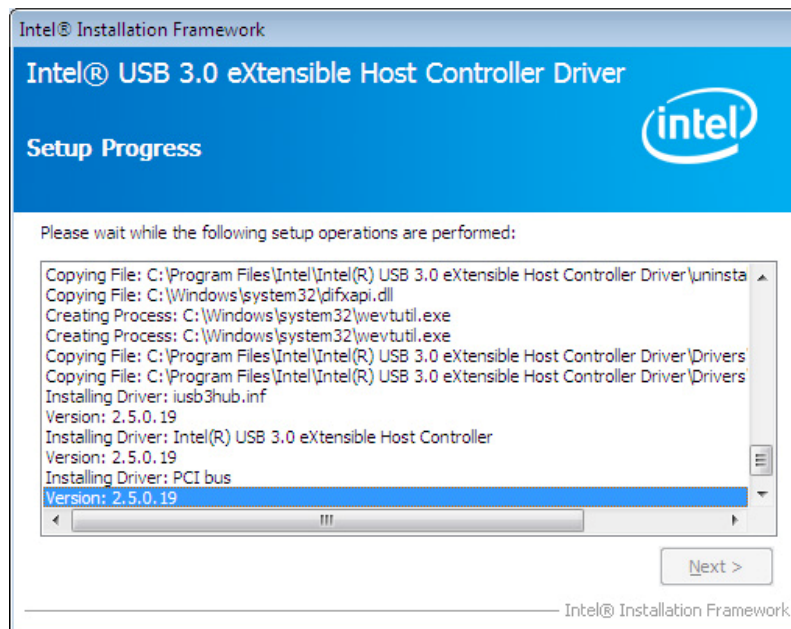


Figure 6-25: USB 3.0 Driver Setup Operations

Step 10: The **Finish** screen in **Figure 6-26** appears.

Step 11: Select “**Yes, I want to restart this computer now**” and click **Finish**.



Figure 6-26: USB 3.0 Driver Installation Finish Screen

Appendix

A

Regulatory Compliance

DECLARATION OF CONFORMITY

This equipment has been tested and found to comply with specifications for CE marking. If the user modifies and/or installs other devices in the equipment, the CE conformity declaration may no longer apply.

FCC WARNING

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Appendix

B

BIOS Options

Below is a list of BIOS configuration options in the BIOS chapter.

System Overview	74
System Date [xx/xx/xx]	74
System Time [xx:xx:xx]	74
ACPI Sleep State [S1 only (CPU Stop Clock)]	76
Wake system with Fixed Time [Disabled]	77
Security Device Support [Disable]	78
Hyper-threading [Enabled]	79
Active Processor Cores [All]	80
Intel Virtualization Technology [Disabled]	80
EIST [Enabled]	80
SATA Controller(s) [Enabled]	81
SATA Mode Selection [IDE]	81
SATA Test Mode [Enabled]	81
Aggressive LPM Support [Enabled]	82
SATA Controller Speed [Default]	82
USB Devices	83
Legacy USB Support [Enabled]	83
Serial Port [Enabled]	85
Change Settings [Auto]	85
Serial Port [Enabled]	85
Change Settings [Auto]	86
Device Mode [RS422/485]	86
Serial Port [Enabled]	86
Change Settings [Auto]	87
Serial Port [Enabled]	87
Change Settings [Auto]	87
Serial Port [Enabled]	88
Change Settings [Auto]	88
Serial Port [Enabled]	89
Change Settings [Auto]	89
Duplex Function [Full Duplex]	90
Parallel Port [Enabled]	91
Change Settings [Auto]	91

WSB-H810 PICMG 1.0 CPU Card

Device Mode [STD Printer Mode]	92
PC Health Status	93
CPU_FAN1 Smart Fan Control/SYS_FAN1 Smart Fan Control [Auto Mode]	94
Fan start/off temperature	94
Fan start PWM	94
Fan slope PWM	94
Console Redirection [Disabled]	95
Terminal Type [ANSI].....	95
Bits per second [115200].....	96
Data Bits [8]	96
Parity [None].....	96
Stop Bits [1].....	97
Auto Recovery Function [Disabled].....	97
Restore AC Power Loss [Last State]	99
Power Saving Function(ERP) [Disabled].....	99
USB Power SW1 [+5V DUAL].....	100
USB Power SW2 [+5V DUAL].....	100
PCIe Speed [Auto].....	102
Detect Non-Compliance Device [Disabled]	102
Azalia [Enabled]	103
VT-d [Disabled].....	104
Primary Display [Auto]	105
DVMT Pre-Allocated [256M]	105
DVMT Total Gfx Mem [MAX].....	106
Primary IGFX Boot Display [VBIOS Default]	106
PEG0 – Gen X [Auto]	107
Enable PEG [Auto]	107
Detect Non-Compliance Device [Disabled]	107
Bootup NumLock State [On].....	109
Quiet Boot [Enabled]	110
Option ROM Messages [Force BIOS].....	110
Launch PXE OpROM [Disabled]	110
UEFI Boot [Disabled]	110
Administrator Password	111
User Password	111



Save Changes and Reset 112

Discard Changes and Reset 112

Restore Defaults 112

Save as User Defaults 112

Restore User Defaults 112



Appendix

C

Terminology

AC '97	Audio Codec 97 (AC'97) refers to a codec standard developed by Intel® in 1997.
ACPI	Advanced Configuration and Power Interface (ACPI) is an OS-directed configuration, power management, and thermal management interface.
AHCI	Advanced Host Controller Interface (AHCI) is a SATA Host controller register-level interface.
ATA	The Advanced Technology Attachment (ATA) interface connects storage devices including hard disks and CD-ROM drives to a computer.
ARMD	An ATAPI Removable Media Device (ARMD) is any ATAPI device that supports removable media, besides CD and DVD drives.
ASKIR	Amplitude Shift Keyed Infrared (ASKIR) is a form of modulation that represents a digital signal by varying the amplitude ("volume") of the signal. A low amplitude signal represents a binary 0, while a high amplitude signal represents a binary 1.
BIOS	The Basic Input/Output System (BIOS) is firmware that is first run when the computer is turned on and can be configured by the end user
CODEC	The Compressor-Decompressor (CODEC) encodes and decodes digital audio data on the system.
CMOS	Complimentary metal-oxide-conductor is an integrated circuit used in chips like static RAM and microprocessors.
COM	COM refers to serial ports. Serial ports offer serial communication to expansion devices. The serial port on a personal computer is usually a male DB-9 connector.
DAC	The Digital-to-Analog Converter (DAC) converts digital signals to analog signals.
DDR	Double Data Rate refers to a data bus transferring data on both the rising and falling edges of the clock signal.
DMA	Direct Memory Access (DMA) enables some peripheral devices to bypass the system processor and communicate directly with the system memory.

WSB-H810 PICMG 1.0 CPU Card

DIMM	Dual Inline Memory Modules are a type of RAM that offer a 64-bit data bus and have separate electrical contacts on each side of the module.
DIO	The digital inputs and digital outputs are general control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.
EHCI	The Enhanced Host Controller Interface (EHCI) specification is a register-level interface description for USB 2.0 Host Controllers.
EIDE	Enhanced IDE (EIDE) is a newer IDE interface standard that has data transfer rates between 4.0 MBps and 16.6 MBps.
EIST	Enhanced Intel® SpeedStep Technology (EIST) allows users to modify the power consumption levels and processor performance through application software. The application software changes the bus-to-core frequency ratio and the processor core voltage.
FSB	The Front Side Bus (FSB) is the bi-directional communication channel between the processor and the Northbridge chipset.
GbE	Gigabit Ethernet (GbE) is an Ethernet version that transfers data at 1.0 Gbps and complies with the IEEE 802.3-2005 standard.
GPIO	General purpose input
HDD	Hard disk drive (HDD) is a type of magnetic, non-volatile computer storage device that stores digitally encoded data.
ICH	The Input/Output Control Hub (ICH) is an Intel® Southbridge chipset.
IrDA	Infrared Data Association (IrDA) specify infrared data transmission protocols used to enable electronic devices to wirelessly communicate with each other.
L1 Cache	The Level 1 Cache (L1 Cache) is a small memory cache built into the system processor.
L2 Cache	The Level 2 Cache (L2 Cache) is an external processor memory cache.
LCD	Liquid crystal display (LCD) is a flat, low-power display device that consists of two polarizing plates with a liquid crystal panel in between.

LVDS	Low-voltage differential signaling (LVDS) is a dual-wire, high-speed differential electrical signaling system commonly used to connect LCD displays to a computer.
POST	The Power-on Self Test (POST) is the pre-boot actions the system performs when the system is turned-on.
RAM	Random Access Memory (RAM) is volatile memory that loses data when power is lost. RAM has very fast data transfer rates compared to other storage like hard drives.
SATA	Serial ATA (SATA) is a serial communications bus designed for data transfers between storage devices and the computer chipsets. The SATA bus has transfer speeds up to 1.5 Gbps and the SATA II bus has data transfer speeds of up to 3.0 Gbps.
S.M.A.R.T	Self Monitoring Analysis and Reporting Technology (S.M.A.R.T) refers to automatic status checking technology implemented on hard disk drives.
UART	Universal Asynchronous Receiver-transmitter (UART) is responsible for asynchronous communications on the system and manages the system's serial communication (COM) ports.
UHCI	The Universal Host Controller Interface (UHCI) specification is a register-level interface description for USB 1.1 Host Controllers.
USB	The Universal Serial Bus (USB) is an external bus standard for interfacing devices. USB 1.1 supports 12Mbps data transfer rates and USB 2.0 supports 480Mbps data transfer rates.
VGA	The Video Graphics Array (VGA) is a graphics display system developed by IBM.

Appendix

D

Digital I/O Interface

D.1 Introduction

The DIO connector on the WSB-H810 is interfaced to GPIO ports on the Super I/O chipset. The DIO has both 4-bit digital inputs and 4-bit digital outputs. The digital inputs and digital outputs are generally control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.

**NOTE:**

For further information, please refer to the datasheet for the Super I/O chipset.

The BIOS interrupt call **INT 15H** controls the digital I/O.

INT 15H:

AH – 6FH	
<u>Sub-function:</u>	
AL – 8	:Set the digital port as INPUT
AL	:Digital I/O input value

WSB-H810 PICMG 1.0 CPU Card

D.2 Assembly Language Sample 1

```

MOV     AX, 6F08H      ;setting the digital port as input
INT     15H            ;

```

AL low byte = value

AH – 6FH
Sub-function:
AL – 9 :Set the digital port as OUTPUT
BL :Digital I/O input value

D.3 Assembly Language Sample 2

```

MOV     AX, 6F09H      ;setting the digital port as output
MOV     BL, 09H        ;digital value is 09H
INT     15H            ;

```

Digital Output is 1001b

Appendix

E

Watchdog Timer

WSB-H810 PICMG 1.0 CPU Card

**NOTE:**

The following discussion applies to DOS environment. Contact IEI support or visit the IEI website for specific drivers for other operating systems.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMIs or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table E-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.



NOTE:

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

EXAMPLE PROGRAM:

; INITIAL TIMER PERIOD COUNTER

;

W_LOOP:

;

```
MOV      AX, 6F02H      ;setting the time-out value
MOV      BL, 30          ;time-out value is 48 seconds
INT      15H
```

;

; ADD THE APPLICATION PROGRAM HERE

;

```
CMP      EXIT_AP, 1      ;is the application over?
JNE      W_LOOP          ;No, restart the application
```

```
MOV      AX, 6F02H      ;disable Watchdog Timer
MOV      BL, 0           ;
INT      15H
```

;

; EXIT ;

Appendix

F

Hazardous Materials Disclosure

F.1 Hazardous Materials Disclosure Table for IPB Products Certified as RoHS Compliant Under 2002/95/EC Without Mercury

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the table on the next page.

WSB-H810 PICMG 1.0 CPU Card

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	O	O	O	O	O	O
Display	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O
Battery	O	O	O	O	O	O
O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006 X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006						



WSB-H810 PICMG 1.0 CPU Card

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯 醚 (PBDE)
壳体	O	O	O	O	O	O
显示	O	O	O	O	O	O
印刷电路板	O	O	O	O	O	O
金属螺帽	O	O	O	O	O	O
电缆组装	O	O	O	O	O	O
风扇组装	O	O	O	O	O	O
电力供应组装	O	O	O	O	O	O
电池	O	O	O	O	O	O
O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。 X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。						

